Introduction

Thank you for purchasing SoftBank 001SC.

- · Read this guide thoroughly before using handset to ensure proper usage.
- Accessible services may be limited by contract conditions or service area.
- · Handset is compatible with 3G network technologies.

Notes

- Unauthorized copying of any part of this guide is prohibited.
- Contents are subject to change without prior notice.
- Steps have been taken to ensure the accuracy of descriptions in this guide. If you find inaccurate or missing information, contact SoftBank Mobile Customer Center, General Information (�P.14-29).

Accessories

Make sure the following accessories are included in the package with handset. These accessories are also sold separately. For details on accessories or optional items, contact SoftBank Mobile Customer Center, General Information (�P.14-29).

Battery [SCBAY1]

Quick Start Guide (Japanese)

Safety Precautions (Japanese)


Warranty (Handset)





保証書					
F	1818	00150	线钳	10500	经
m	8.3 F	,	CAAX	10000	
ě.	284				
83 #6	25 (5.80)				68
8.23	298	Ŧ	п	n.	
g.	巨粒粉	83%	H/B/	7616	FIR
	LUIS	平成	÷	В	Β
	insk m				

- Use only specified Charger (sold separately) for charging.
- Handset takes microSDTM/microSDHCTM Memory Card (not included). Purchase one to use Memory Card functions.
- microSDTM/microSDHCTM Memory Card is referred to as "Memory Card" in this guide.
- Download Samsung New PC Studio from SAMSUNG Website (http://jp.samsungmobile.com/pc/lineup/001download.html).

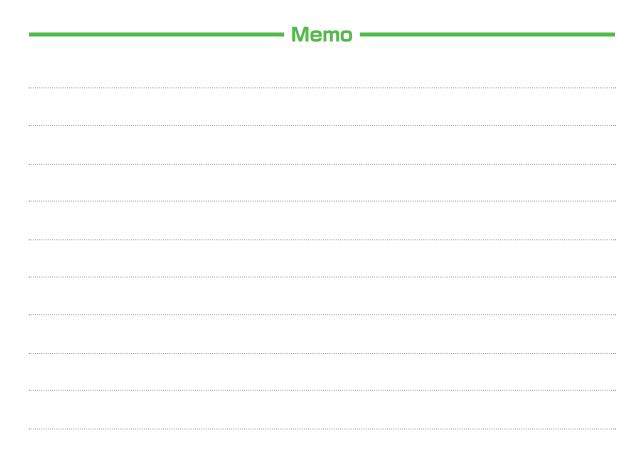

Chapter Contents At a Glance

Getting St
Basic Ope
Calling
Messagin
Internet S
Camera 8
Media Pla
Entertain
Handy Ex
Handset S
Data Folde
Connectivi
Handset Cu
Appendix

ing Started	1
c Operations	2
ing	3
saging	4
rnet Services	5
era & Imaging	6
lia Player	7
ertainment	8
dy Extras	9
dset Security	10
Folder & Memory Card	11
nectivity & File Backup	12
lset Customization	13

About This Guide

In this guide, SoftBank 001SC is referred to as "handset." Instructions are described using mainly default settings. When settings are changed, screenshots or handset responses may differ from those depicted in this guide.

Screenshots & Handset Illustrations

Screenshots appearing in this guide are for reference only and may differ from actual Display images. Handset illustrations may differ from actual appearance. In some screenshots, Wallpaper is set to None for Display image clarity.

Confirmations & Warning Messages

Messages not described in this guide may appear; read all handset confirmations and warning messages carefully.

Japanese Functions & Services

When " (Japanese) " appears in a title, Japanese ability is required to use full range of the function or service.


Symbols

In this guide, graphics represent handset keys; see "Parts & Functions" (♦P.1-2).

Softkeys and Multi Selector operations are indicated as follows:

Softkeys

Operation options such as "Select" and "Save" appear at the bottom of Display (Softkey area). Press the corresponding Softkey to execute assigned functions.

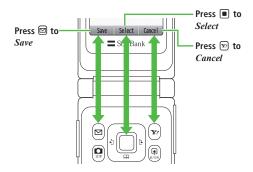


Softkey Operations



Multi Selector Operations

Use Multi Selector to select menu items, move cursor, scroll, etc. In this guide, Multi Selector operations are indicated as shown below:

Basic Multi Selector Operations

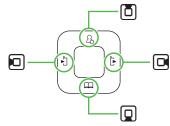

- T: Press or or
- : Press o or
- 🖸: Press 🗖, 📵, 📵 or 🖸

Menu Operations

Menu operation explanations are abbreviated with arrows.

Main Menu



For details, see "Using Main Menu" (P.2-2).

Menu



Highlighting

In this guide, "to highlight" means to move cursor to an item.

1 Getting Started

Parts & Functions
USIM Card
Battery & Charger
Power On/Off1-9
Account Details
Handling Precautions (Key Lock)
Minding Mobile Manners
Security Codes
Advanced Settings

2 Basic Operations

Accessing Functions2-2
Incoming Settings2-4
Standby Display Options2-5
Text Entry
User Dictionary (Japanese)2-11
Phone Book
Advanced Settings 2-15

3 Calling

Voice Call
Favorites
Emergency Numbers
Answering Machine
Black List
Call Log Records/Ranking3-8
Checking Call Time/Cost
International Calling3-10
Global Roaming
Optional Services
Advanced Settings

4 Messaging

Messaging Basics4-
Customizing Mail Address 4-
Creating/Sending Messages4-
Incoming Messages
Using Messages
Managing Messages
Advanced Settings 4-1

5 Internet Services

nternet Services5-2
Yahoo! Keitai
PC Site Browser
Page Operations
Bookmarks & Saved Pages5-7
RSS Feed
Advanced Settings

6	Camer	a &	lmagi	ng
Cantu	ring Imago	Pocor	dina Vido	ο <i>Ω</i> . Ι

Capturing Image, Recording Video & Editing .	6-2
Camera	6-3
Video	6-8
Editing Still Images	.6-10
Photo Library	.6-11
Advanced Settings	6-12

7 Media Player

Using Media Player
Downloading Media Files7-3
Playing Music7-3
Playing Movie7-5
Using Playlist
Advanced Settings

8 Entertainment

Entertainment Functions 8-
S! Information Channel (Japanese) 8-
S! Quick News (Japanese) 8-
Free Contents (Japanese)8-
Advanced Settings 8-

9 Handy Extras

Useful Handset Applications
Alarm9-3
Calendar
Tasks
Stopwatch
Countdown Timer9-7
World Clock
Good Night Timer9-7
Calculator
Notepad9-8
Barcode/Scan
Converter
Split the Bill
Voice Recorder
File Viewer
Magnifier
Dictionary
Advanced Settings 9-16

10 Handset Security

landset Security
Changing Phone Password
Phone Lock
unction Lock10-5
Restoring Default Settings

11 Data Folder & Memory Card

Data Folder
Viewing Files
Managing Files/Folders11-6
Memory Card11-8
Viewing Memory Status11-9
Advanced Settings 11-10

12 Connectivity & File Backup

File Transfers & Backup	.12-2
Infrared	.12-3
USB Connection	.12-4
Memory Card Backup	.12-5
S! Addressbook Back-up (SAB)	.12-7
Advanced Settings	12-9

13 Handset Customization

Phone Settings13
Sounds & Vibration & External Light Settings $\dots 13^{-1}$
Display & Font Settings
Manner Mode Settings13
Call Settings13
Phone Book Settings
Messaging Settings
Internet Settings13-1
Camera Settings13-1
Media Player Settings
Entertainment Settings
Security Settings13-2
Memory Settings
Connectivity Settings

14 Appendix

roubleshooting
Cleaning Handset
Orying Handset
Reattaching Port Cover
oftware Update14-
unction List
ext Entry Window Key Assignments 14-1
ymbols
Pictograms
Летогу
pecifications14-1
Varranty & Service14-1
ndex
Objective Index
Advanced Settings Index
Customer Service

Safety Precautions

Read safety precautions before using handset.

- Observe precautions to avoid injury to self or others, or damage to property.
- SoftBank Mobile is not liable for any damages resulting from use of this product.

These labels indicate the degree of risk from improper use. Make sure you thoroughly understand their meanings before reading on.

Danger	Great risk of death or serious injury ¹	
Warning	Risk of death or serious injury ¹	
Caution	Risk of injury ² or damage to property ³	

- 1 Includes blindness, wounds, low/high heat burns, electric shock, bone fractures, poisoning or other physical harm with aftereffects, or requiring hospitalization or ongoing hospital visits.
- 2 Includes wounds, burns, electric shock or other physical harm not requiring hospitalization or ongoing hospital visits.
- 3 Includes damage to home, furniture, livestock, pets, etc.

These symbols indicate prohibited or compulsory actions. Make sure you thoroughly understand their meanings before reading on.

Prohibited	Prohibited actions
Do Not Disassemble	Disassembly prohibited
Avoid Liquids Or Moisture	Exposure to liquids prohibited
Do Not Use Wet Hands	Use with wet hands prohibited
Compulsory	Compulsory actions
Disconnect Power Source	Unplug Charger from outlet

Handset, Battery, USIM Card, Charger (Sold Separately) & Memory Card (Sold Separately)



Danger

Use specified battery and Charger (sold separately) only.

Non-specified equipment use may cause battery to leak, overheat, burst or ignite, and may cause Charger to overheat, ignite, malfunction, etc.



Compulsory

Do not disassemble, modify or solder handset or related hardware.

May cause fire, injury, electric shock or malfunction. Battery may leak, overheat, burst or ignite.

Modifying handsets is prohibited by the Radio Law and subject to a penalty.

Disassemble

Do not expose internal handset parts or related hardware to liquids.

Do not leave handset or related hardware wet after exposure to water, pet urine, etc., and do not charge wet battery. May cause overheating, electric shock, fire, injury or malfunction. Use them in an appropriate place properly.



Avoid Liquids Or Moisture

Do not charge battery in or expose handset or related hardware to extreme heat (e.g., near fire or sources of heat, in direct sunlight, inside vehicles, etc.).

May cause warping/malfunction; battery may leak, overheat, ignite or burst. Handset or related hardware may become hot to the touch. leading to burn injuries, etc.



Do not force battery/Charger into handset. Check the direction and retry.

Battery may leak, overheat, burst, ignite, etc.



Warning

Do not place handset, battery or Charger in/on ovens, microwave ovens, pressure cookers, induction stoves or other cooking appliances.



Battery may leak, overheat, burst or ignite, Handset/Charger may overheat, emit smoke, ignite, malfunction, etc.

Keep handset off and Charger disconnected near gas stations or places with fire/explosion risk.



Handset use near petrochemicals or other flammables may cause fire/explosion.

To prevent fire or explosion, do not use handset near gas or fine particles (coal, dust, metal, etc.).

Do not apply strong shocks or impacts.



Do not drop/throw handset or related hardware. Battery may leak, overheat, burst or ignite, resulting in fire, electric shock, malfunction, etc.

Prohibited

If there is unusual sound/odor, smoke or any other abnormality:



Continued use may cause fire, electric shock, etc.; grasp plug to disconnect Charger from connector.

Compulsory

Keep liquids (water, pet urine, etc.) or conductive material (pencil lead, metallic strip, metal jewelry, etc.) away from Charging terminals, External Device. Prohibited



May cause short circuit, resulting in fire, malfunction, etc.



Caution

Do not place handset or related hardware on unstable surfaces.



Handset or related hardware may fall, resulting in injury. malfunction, etc.; be especially careful when Vibration is set or while charging.

Keep handset and related hardware out of infants' reach.



Infants may choke from swallowing handset or related hardware or be injured, etc.

If your child is using handset and related hardware, explain all instructions and supervise usage.



Misuse may cause injury, etc.

Compulsory

Battery



Danger

Read battery label to confirm battery type; use/dispose of battery accordingly.

Display	Battery Type
Li-ion00	Lithium-ion

Do not dispose of battery in fire.

Battery may leak, burst, ignite, etc.



Do not damage or subject battery to strong impacts or shocks (from nails, hammers, feet, etc.).



Battery may leak, overheat, burst, ignite, etc.

Keep wire or other metal objects away from battery terminals. Do not carry/store battery with conductive material (pencil lead, metallic strip, metal iewelry, etc.).



Battery may leak, overheat, burst, ignite, etc.

If battery fluid gets in eyes, do not rub: rinse with water and consult a doctor immediately.



Eyes may be severely damaged.

Compulsory



If battery fluid contacts skin or clothes, discontinue handset use and rinse with clean water immediately.

May cause skin damage.



Compulsory

If battery does not charge properly, stop trying.

Battery may leak, overheat, burst, ignite, etc.



Compulsory


If there is abnormal odor, excessive heat, discoloration or distortion, remove battery, being careful not to burn or injure yourself. Avoid fire sources.



Continued use may cause battery to leak, overheat, burst, ignite, etc.



Do not dispose of an exhausted battery with ordinary refuse.

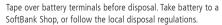



Prohibited

Handset



Do not use handset while driving or cycling.



Accidents may result.

Phone use while driving or cycling is prohibited by law and subject to a penalty; park in a legal parking space beforehand.

Prohibited

Power off near electronic devices employing high precision control systems or weak signals.



May cause electronic malfunctions, etc. Be especially careful near the following devices:

Compulsory

Hearing aids, implanted pacemakers/defibrillators and other electronic medical equipment; fire alarms, automatic doors and other automatic control devices.

Because handset radio waves may impair aircraft operations, please power off handset while aboard.



When handset use aboard aircraft is allowed, please follow instructions of airline personnel.

Compulsory

Users with a heart condition should adjust ringtone Vibration and Volume as needed.



May cause heart damage.

Compulsory

If thunder is heard while outdoors, turn power off; find cover.



There is a risk of lightning strike or electric shock.

Do not look into Infrared Port during Infrared transmissions.

Evesight may be affected.



Caution

Do not use handset when it may affect a vehicle's electronic equipment.



Handset use inside vehicles may cause electronic equipment to malfunction, resulting in accidents.

If you experience any skin irritation associated with handset use, discontinue handset use and consult a doctor.



Metal and other materials may cause skin irritation, rashes, or itchiness depending on your physical condition. For materials, see "Materials & Finishing" (SP.14-16).

Keep handset away from magnetic cards, etc.



Data on bank cards, credit cards, telephone cards, floppy disks, etc. may be lost.

Do not swing handset by strap.



May harm self or others; strap may break, resulting in injury or handset malfunction/breakage.



Handset may become hot while in use, especially at high temperature.



Prolonged contact with skin may cause burn injuries.

Always maintain some distance from Speaker while ringtones, music or other handset sounds play.



Excessive volume may damage ears or hearing.



Moderate handset volume when using Earphone Microphone.



Excessive volume may damage ears or hearing.

Charger (Sold Separately)



Do not cover/wrap Charger while charging.

Charger may overheat, resulting in fire, malfunction, etc.



Use only the specified voltage.

Non-specified voltages may cause fire, malfunction, etc.

AC Charger (sold separately): AC 100V-240V (wall sockets only).



Prohibited

Leave Charger unplugged during periods of disuse; grasp plug to disconnect it.

May cause electric shock, fire or malfunction.



Disconnect Power Source

If liquids (water, pet urine, etc.) seep inside Charger, grasp plug from outlet and disconnect Charger immediately.

May cause electric shock, smoke/fire.



Disconnect Power Source

If plug is dusty, grasp it and disconnect Charger, then clean with a dry cloth.

Fire may result.



Plug Charger firmly into the outlet, keeping the plug and Charger charging terminals away from conductive material (pencil lead, metallic strip, metal jewelry, etc.).



May cause electric shock, short circuit, fire, etc.

Do not touch Charger plug with wet hands.

May cause electric shock or malfunction, etc.



Wet Hands

Do not touch Charger if thunder is heard.

May cause electric shock, etc.



Caution

Grasp plug and disconnect Charger from outlet before cleaning.

May cause electric shock, etc.



Power Source

Always grasp plug (not cord) to disconnect Charger from outlet.



Pulling the plug by cord may damage cord, causing electric shock. fire, etc.

Compulsory

Do not subject Charger (sold separately) to strong shocks or impacts while it is plugged into the outlet.



May cause malfunction or injury.

Handset Use & Electronic Medical Equipment

This section is based on "Guidelines on the Use of Radio Communications Equipment such as Cellular Telephones and Safeguards for Electronic Medical Equipment" (Electromagnetic Compatibility Conference, April 1997) and "Report of Investigation of the Effects of Radio Waves on Medical Equipment, etc." (Association of Radio Industries and Businesses, March 2001).



Persons with implanted pacemaker/defibrillator should keep handset more than 22 cm away.



Radio waves may interfere with implanted pacemakers or defibrillators.

If you intend to use electronic medical equipment other than implanted pacemaker/defibrillator outside medical facilities, consult the vendor on radio wave effects.



Radio waves may interfere with electronic medical equipment.

Observe these rules inside medical facilities to avoid effects of radio waves on electronic medical equipment:



- Do not enter an operating room or an Intensive or Coronary Care Unit while carrying a handset.
- Keep handset off in hospitals; cancel the setting that turns handset power on automatically (alarm, etc.) beforehand.
- Even in lobbies or other places where handset use is permitted, keep handset off near electronic medical equipment.
- Obey medical facility rules on mobile phone use.

Power off in crowds/trains. Persons with implanted pacemaker/defibrillator may be near. Cancel auto power on settings (alarm, etc.) beforehand.



Radio waves may interfere with implanted pacemakers or defibrillators causing such devices to malfunction.

General Notes

General Use

- SoftBank Mobile is not liable for any damages resulting from accidental loss/alteration of any data on handset/Memory Card. Please keep separate records of Phone Book entries, etc.
- Handset transmissions may be disrupted inside buildings, tunnels, or underground, or when moving into/out of such places.
- · Use handset without disturbing others.
- Handsets are radios as stipulated by the Radio Law. Under the Radio Law, handsets must be submitted for inspection upon request.
- · Handset use near landlines, TVs or radios may cause interference.
- Beware of Eavesdropping.

Because this service is completely digital, the possibility of signal interception is greatly reduced. However, some transmissions may be overheard.

Eavesdropping
 Deliberate/accidental interception of communications constitutes
 eavesdropping.

Inside Vehicles

- · Never use handset while driving.
- · Do not park illegally to use handset.
- Handset use may affect a vehicle's electronic equipment.

Aboard Aircraft

Radio waves may impair aircraft operations; power off while aboard aircraft.
 If handset use is allowed, follow airline personnel instructions.

Function Usage Limits

- Handset replacement or service cancellation disables these functions:
 - Camera
 - Media Player
- After a long period of disuse, these functions may be unusable; establish a network connection to restore usability.

Handset Care

- If handset is left with no battery or an exhausted one, data may be altered/ lost. SoftBank Mobile is not liable for any resulting damage.
- $\bullet~$ Use handset between 5°C 35°C. Avoid extreme temperatures/direct sunlight.
- · Exposing lens to direct sunlight may damage color filter affecting image color.
- · Do not drop or subject handset to shocks.
- · Clean handset with a dry, soft cloth. Using alcohol, thinner, etc. may damage it.
- · Never disassemble or modify handset.
- · Avoid scratching Display.
- When using headphones, moderate the volume to avoid sound bleed.
- Heavy objects or excessive pressure should be avoided. This may cause malfunction or injury.
 - Do not sit down with handset in pocket.
 - Do not place heavy objects on handset in a bag.
- Insert only specified devices into Headphone Port. Malfunction or damage may result.
- Always turn power off before removing battery. If battery is removed while saving data or sending mail, data may be lost, changed or destroyed.
- Air Vent is located in the upper right corner of Display. Keep Air Vent clear during handset use; do not cover it with protective film, etc.; may affect sound quality.

Keypad Surface Swelling

- Keypad surface might swell up due to drastic atmospheric changes (at high altitudes, aboard high-flying aircraft, etc.) when Battery Cover is closed. This is normal. Keypad will return to its original shape.
- Open Port Cover to release air that may be trapped inside handset.
- · Carefully close Battery Cover to avoid trapping excess air inside handset.
- When using a swollen Keypad, take care to avoid damaging protrusions.
 Original shape will return.

Optical Sensor

- · Detects ambient light level to adjust Display brightness.
- · Display brightness automatically adjusts with ambient light level.
- To manually adjust brightness, see "Adjust Display Brightness" (◆P.13-6).

Water & Dust Resistance

001SC Water & Dust Resistance

 001SC complies with IPX5 (former JIS protection level 5) ¹ and IPX7 (JIS protection level 7) ² water protection standard as well as IPSX (JIS protection level 5) ³ dust protection standards, with Port Covers closed and Battery Cover locked firmly.

¹IPX5 compliant means that this handset continues to function as a phone after being subjected to a water jet (approximately 12.5 liters/min.) discharged from a nozzle (inner diameter: 6.3 mm), from all directions (approximately 3 m from handset) for at least three minutes.

²IPX7 compliant means that this handset continues to function as a phone and no water seeps inside after being gently lowered into a tank filled with still tap water (at room temperature) to the depth of 1 m, and immersed at the bottom for approximately 30 minutes.

³IP5X compliant means that a handset continues to function as a phone and its integrity is maintained after being agitated in a device containing dust of 75 µm or smaller in diameter for eight hours, then removed from the device.

- · Warranty does not cover malfunctions resulting from misuse.
- 001SC is compliant with IPX5, IPX7 and IP5X water/dust protection standards. However, ingress of dirt, sand, mud, metal powder, food, soft drink, etc. may cause malfunction.

Usage Notes

- Lock Battery Cover and close Port Covers firmly. Foreign matter (hair, sand, fibers, etc.) trapped between contact surfaces may cause seals to fail and expose internal parts to water.
- Leaving Battery/Port Covers open may expose handset to moisture, causing malfunction/electric shock. Power handset off, and remove battery.
- If handset gets wet, moisture might get between Keypad and hinges. Wipe off handset with a clean, dry cloth. Do not leave handset wet.
- To prevent water from getting inside a handset exposed to rain or touched with wet hands, do not open Battery Cover or Port Cover. After handset has completely dried out, slowly open Battery Cover or Port Cover. If liquid does get inside, do not use handset; power off, remove battery, and take it to a SoftBank Shop.
- To prevent water from getting inside handset when areas around Port Cover or Battery Cover are wet, wait until handset has completely dried, before slowly opening and closing covers.
- Handset is resistant to fresh/tap water at room temperature (5°C 35°C) only.

Precautions

- Do not expose handset to liquids (soaps, detergents, soapy water, seawater, pool water, hot spring water, boiling water, chemicals, or perspiration, etc.) other than fresh/tap water. Do not expose handset to sand or mud.
- If handset is exposed to liquid other than fresh/tap water, immediately rinse
 off handset with water. Position handset approximately 10 cm from tap or
 shower head and clean with a low pressure flow (less than six liters per
 minute, at room temperature (5°C 35°C)). Hand wash (do not use brushes
 or sponges) with Battery Cover in place and locked, and Port Cover closed.
- Do not expose handset to bathtubs or swimming pools. Do not use handset (open or close handset, or use Keypad) in water.
- Handset is not resistant to water at high pressure. Do not expose handset to tap or shower water flowing faster than six liters per minute, drop it into water, or immerse it.

- Do not expose handset to extreme humidity for long periods; avoid prolonged use in bath/shower rooms.
- Use handset within 5°C 35°C (up to 40°C for temporary use in bath/shower rooms, etc.) and 35% - 90% humidity.
- · Handset is not heat-resistant. Do not use in saunas. Avoid hot air from dryers, etc.
- · Avoid extreme temperatures (e.g., near stoves, inside refrigerators, etc.).
- Volume may be low when Microphone/Earpiece/Speaker is wet; dry handset before use. After drying out, the volume will return to normal.
- Avoid placing handset directly on sand. Sand may penetrate Earpiece, Speaker, etc., resulting in low volume.
- Do not move handset directly from a cold place to a warm, humid place; condensation may occur. Should this happen, let handset dry naturally, at room temperature.
- · Handset does not float.
- · Keep handset out of heavy rain.
- Do not let liquid-exposed handset remain wet; exposure to cold may freeze liquid causing malfunctions.
- Keypad response may lag when ambient temperature falls below 0°C.

Maintaining Waterproof & Dustproof Performance

- Do not subject handset to strong shocks or impacts; do not poke Air Vent, Microphone, Earpiece, Speaker, etc. with a cotton swab or sharp object; do not insert foreign objects.
- Port Cover and gasket play the important role of maintaining waterproofness.
 Do not remove or damage them. In addition, do not allow foreign particles to adhere to them.
- Do not insert sharp objects into Port Cover gaps; may damage gasket and affect water resistance.
- Do not leave Port Cover bent back for prolonged periods of time to plug in Earphone Microphone or Charger. It might deform Port Cover affecting waterproofing.

- If Port Cover gasket is damaged or deformed, replace it with a new one.
- To maintain water resistance, replace gaskets every two years regardless of their condition. For gasket replacements, contact a SoftBank Shop.
- Damaged Battery/Port Cover affects water resistance; contact a SoftBank Shop.

Charging Precautions

- Battery and optional accessories are not waterproofed. Avoid exposure to liquids or high humidity (e.g., precipitation, bath/shower room, restroom, etc.); may cause fire, electric shock or damage.
- Never charge battery while handset is wet; may cause fire or damage due to electric shock or short-circuit.
- · Close Port Cover firmly after charging via External Device Port.
- Do not touch Charger with wet hands. Electric shock may occur.
- Do not use Charger in rooms in which water is regularly used (kitchen, bath/ shower room, etc.); may cause fire or electric shock.

Before cleaning handset, see "Cleaning Handset" (◆P.14-5).

If handset gets wet, see "Drying Handset" (◆P.14-5).

If Port Cover becomes detached, see "Reattaching Port Cover" (◆P.14-6).

Copyrights

Copyright laws protect sounds, images, computer programs, databases, other materials for copyright holders. Duplicated material is limited to private use only. Use of materials beyond this limit or without permission of copyright holders may constitute copyright infringement, and be subject to criminal punishment. Comply with copyright laws when using images captured with handset camera. The software contained in handset is copyrighted material; copyright, moral right, and other related rights are protected by copyright laws. Do not copy, modify, alter, disassemble, decompile, or reverse-engineer the software, and do not separate it from hardware in whole or part.

Trademarks

 Licensed by QUALCOMM Incorporated under one or more of the following United States Patents and/or their counterparts in other nations:

4,901,307	5,490,165	5,056,109	5,504,773	5,101,501
5,506,865	5,109,390	5,511,073	5,228,054	5,535,239
5.267.261	5.544.196	5.267.262	5.568.483	5.337.338
5.600.754	5.414.796	5.657.420	5.416.797	5.659.569
5 710 784	5 778 338	-,,	-,,.	-,,

- S! Mail, PC Site Browser, S! Quick News, S! Addressbook Back-up, Graphic Mail, Auto Art, Feeling Mail, S! Information Channel and Weather Indicator, Content Value Package, Tada Deco, Secure Remote Lock are trademarks or registered trademarks of SOFTBANK MOBILE Corp.
- "SOFTBANK", SOFTBANK's equivalent in Japanese, and the SOFTBANK logo are trademarks or registered trademarks of SOFTBANK CORP. in Japan and in other countries.
- "Yahoo!", the "Yahoo!" and "Y!" logos are trademarks or registered trademarks of Yahoo! Inc.
- This product contains ACCESS Co., Ltd.'s NetFront Internet browser software.
 NetFront is a trademark or registered trademark of ACCESS Co., Ltd. in Japan and in other countries.

 AGGESS NetFront*

- Part of the software in this product incorporates a module developed by the Independent JPEG Group.
- THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR (i) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD ("MPEG-4 VIDEO") AND/OR (ii) DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NONCOMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE HTTP: //WWW.MPEGLA.COM.
- "Chaku-Uta®" and "Chaku-Uta Full®" are registered trademarks of Sony Music Entertainment Corp.
- microSD™/microSDHC™ is a trademark of SD Association.
- QR Code is a registered trademark of DENSO WAVE INCORPORATED.
- Powered by SwiftDecoder™ Copyright ©1996-2007, Omniplanar, Inc. All Rights Reserved.
- Windows and Windows Media Player are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- "Machi-Uta" is a registered trademark of KDDI CORPORATION.
- Windows is an abbreviation for the Microsoft Windows operating system.
- Other company and product names mentioned herein are trademarks or registered trademarks of their respective owners.

Open Source Licenses

 This product includes certain free/open source software. The exact terms of the licenses, disclaimers, acknowledgements and notices are available on Samsung Website http://opensource.samsung.com.

SAR Certification

001SC meets the technical standards of Ministry of Internal Affairs and Communications (MIC) regarding radio wave absorption by a human body.

These technical standards are established on a scientific basis to prevent radio waves emitted from wireless devices such as mobile phones that are used close to human head from affecting human health. These standards assure that the SAR (Specific Absorption Rate), an indicator of the amount of average energy absorbed in the side of a human head, must not exceed the permissive value of $2 \, W/kg^*$. This value includes a substantial safety margin designated to assure the safety of all persons, regardless of age and physical size. The value is equal to the international guideline recommended by International Commission on Nonlonizing Radiation Protection (ICNIRP) that has a cooperative relationship with the World Health Organization (WHO).

The highest SAR value for 001SC is 0.719 W/kg. This value is obtained at its highest permitted power level. While there may be differences in the SAR levels depending on phones, they all meet the MIC's permissible value. Because mobile phones are designed to employ the minimum power level required for the communication with the base station, the SAR of the phone during a call is usually below the maximum value.

For further information about SAR, please see the following Websites:

MIC: http://www.tele.soumu.go.jp/j/ele/index.htm

ARIB: http://www.arib-emf.org/

*The guideline is defined by relevant laws and regulations associated with the Radio Law (No. 2 of Article 14 of Ordinance Regulating Radio Equipment).

SoftBank Mobile Body SAR Policy

- * Body SAR: The SAR value at the maximum transmission power when continuously talking with handset placed on the body and using earphonemicrophone.
- ** Specific Absorption Rate (SAR): The value measured when having talked continuously for six minutes.
- *** Placement on the body: Measurements are taken with the rear of handset facing the body at a distance of 1.5 cm as the ordinary handset position. In order to comply with radio frequency exposure requirements, use an accessory (e.g. belt clip, holster) that does not contain metallic parts to maintain a 1.5 cm separation between the body and handset.

For further information, see the following SoftBank Mobile Website: http://www.softbankmobile.co.jp/ja/info/public/emf/emf02.html

European RF Exposure Information

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.582 W/kg*. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide. In this case, the highest tested SAR value is 0.246 W/ka.

As SAR is measured utilizing the devices highest transmitting power the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a hands-free device to keep the mobile phone away from the head and body.

*The tests are carried out in accordance with international guidelines for testing.


Getting Started


Parts & Functions	1-2
Handset	1-2
Display Indicators	1-3
USIM Card	1-4
Before Using USIM Card	
USIM Card Installation	
Battery & Charger	1-6
Before Using Battery/Charger	
Battery Installation	
Charge Battery	
Power On/Off	1-9
Power On	
Power Off	
Account Details	1-10
Viewing Account Details	
Editing Account Details	1-10
Handling Precautions (Key Lock)	1-11
Minding Mobile Manners	1-11
Offline Mode	
Manner Mode	1-11
Changing Mode Cattings	1-12
Changing Mode Settings	
Changing Mode Settings	
3 3	1-12
Security Codes	
Security Codes	1-12 1-12 1-13
Security Codes	1-12 1-12 1-13 1-13
Security Codes	1-12 1-12 1-13 1-13




Parts & Functions

Handset

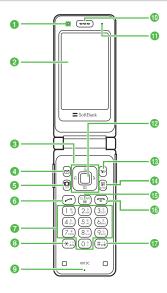

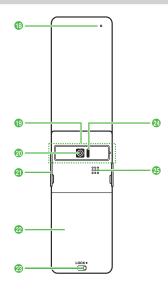

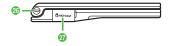

- Optical Sensor
 Detects ambient light level for Display brightness.
- 2 Display
- 3 In Multi Selector Select menu items, move cursor, scroll window, etc.
- Mail Key/Left Softkey Open Messaging menu. Also, execute Left Softkey command or function.
- Camera Key Activate Camera. Long press for Video. Toggle text entry modes in text entry window.
- Start Key Make and receive Voice Calls. In Standby, press to open Call Log (All).
- () () Keypad
 Enter numbers or characters. Also, select
 menu items.
- 8 ** Key
 Long press to open Manner mode Settings.
- Microphone
- 10 Earpiece
- Air Vent


- Main Menu Key/Center Softkey Open main menu. Also, execute Center Softkey command or function.
- Yahoo! Keitai Key/Right Softkey Open Yahoo! Keitai main menu. Also, execute Right Softkey command or function
- (B) Clear/Back Key
 Delete entered text or return to the previous
 operation step.
- (1) Power/End Key
 Turn power on/off or end operations.
- # #/Manner Key Enter symbols, etc. Also, activate/cancel Manner mode (1+ seconds).
- External Light Flashes for Missed Call or Incoming Call/ Mail; illuminates in red while charging.
- 19 Internal Antenna
- ② Camera Capture images.
- 2) Charger/External Device Port Connect Charger, USB Cable, etc.
- Battery Cover Remove to access Battery or USIM Card.
- Battery Cover Lever
- ② Infrared Port Use for infrared data transmissions.

- Speaker
- 23 Strap Eyelet
- Memory Card Port

Note

- Handset transmits and receives signals via Internal Antenna. There is no External Antenna. Voice quality may vary depending on where/how handset is used.
- Do not cover or place stickers, etc. over the area containing Internal Antenna.
- Display brightness changes or Display flickers depending on surroundings.

Display Indicators

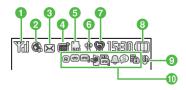

- Signal strength (more bars indicate stronger signal)
 - Out-of-range (*Language* set to Japanese)
 - **OUT** Out-of-range (*Language* except Japanese)
 - Offline Mode
- 2 👺 SSL connected
 - 3G Network connected (ready)
 - 3G Network connected (in use)
 - Packet Communication unavailable
 - Voice Call in progress (flashes when dialing or receiving calls)
- 3 New mail
 - Sending mail
 - Receiving mail
 - Delivery Report active
 - Memory full (S! Mail/SMS)
 - Downloading Content Key

- 4 Music playing
 Music paused
- 6 Memory Card inserted
 - Read from/write on Memory Card
 - Software Update required
 - PC Site Browser connected
 - Wall Duread S! Quick News
 - M Unread S! Information Channels
 - RSS-compatible website
- 🙃 🌵 USB connected
 - yellow) USB in use
 - Infrared activated
 - (red) Infrared transmission in progress
 - Data synchronized
- Manner mode
 - Drive mode
 - Meeting mode
 - & Activity mode
 - Good Night Timer set
- Battery strong
- Battery moderate
- Battery low
- Battery weak (charge now)
- (flashing in red) Battery empty
- Battery low (Battery saving mode)
- Battery weak (Battery saving mode)

- Ringer and Vibration activated for calls
- Ringer active for calls
- Vibration active for calls
- Ringer & Vibration disabled for calls
- Roaming active
 - Answering Machine active
- Unheard Answering Machine message
- Voicemail/Call Forwarding (*No reply*) activated
- Unheard Voicemail
 - 🕽 🛚 Alarm set
- Schedule set
- Schedule with Alarm set
- Tasks set
- Tasks with Alarm set
- Secret Mode
- Password Lock activated
- 🚹 All Keys locked

USIM Card

Before Using USIM Card

Universal Subscriber Identity Module (USIM) Card is an IC card containing customer and authentication information, including handset number and limited storage for Phone Book entries and SMS. Install USIM Card to use handset; power off handset to insert/remove USIM Card.



USIM Card

Insert USIM Card into another compatible handset to access SMS and Phone Book entries saved on USIM Card. Note the following precautions regarding USIM Card usage and care (see USIM Card User Guide for details):

- Avoid using excessive force when inserting/ removing USIM Card.
- SoftBank Mobile is not liable for damages resulting from inserting USIM Card into IC card readers or other third party devices.
- Always keep USIM Card IC chip clean.
- · Clean USIM Card IC chip with a soft, dry cloth.
- Do not attach labels to USIM Card; malfunction may result.

Note

- USIM Card is SoftBank Mobile property.
- If USIM Card is lost or damaged, you will be charged for its reissue.
- Return USIM Card to SoftBank Mobile upon termination of subscription.
- · Returned USIM Cards are recycled.
- USIM Card specifications may change without prior notice.
- If USIM Card or handset with USIM Card inserted is lost or stolen in Japan or abroad, immediately contact SoftBank Mobile Customer Center, General Information (�P.14-29) to suspend service.
- Handset/USIM Card repairs, replacement, or upgrades may deactivate Chaku-Uta®, Chaku-Uta Full® or video files on handset/ Memory Card.
- Back up USIM Card files, SoftBank Mobile is not liable for lost files.

USIM Card Installation

Note


- Inserting USIM Card with excessive force may damage it or handset.
- Do not misplace a removed USIM Card.
- To prevent damaging it, avoid touching IC chip when inserting or removing USIM Card. Do not touch battery contacts.
- Do not remove USIM Card while handset is powered on; handset may restart.

Inserting




Remove Battery Cover (♦P.1-8)

With IC chip down, insert USIM Card

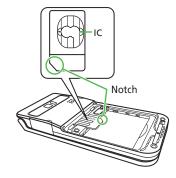


Push in USIM Card

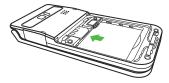

Removing

- Remove Battery Cover/battery (♦ P.1-8)
- Gently slide USIM Card out

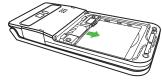

Battery & Charger

Before Using Battery/Charger

Charge battery before first use of handset or after long periods of disuse.

Note

- Use specified Charger only.
- Battery must be inside handset to charge.
- When not in use, unplug Charger from outlet.

Battery

- Long periods of disuse may affect battery's ability to hold a full charge. Charge battery at least once every six months while not in use. Otherwise, battery may become unusable.
- Depending on usage, bulges may appear near end of battery life; this does not affect safety.
- Handset uses a lithium-ion battery; charge battery anytime without damaging its ability to hold a charge.
- Do not charge battery under the following conditions:
 - In ambient temperatures beyond 5°C 40°C
 - In high levels of humidity, vibration or dust (may cause malfunction)
 - Near a radio receiver (may cause feedback)
- Handset or Charger may warm while charging.
 This is normal, however, should they become very hot to touch, stop charging and contact SoftBank Mobile Customer Center, General Information (◆P.14-29).
- Battery is a consumable; replace it if operating time shortens noticeably.

Battery Life

Battery time/life may be reduced by any of the following:

- Environment
 - Storing/using handset beyond 5°C 40°C
 - Using handset in poor signal conditions
 - Debris on handset, battery or Charger Port
- Usage
 - Camera use
 - Media Player use
 - Slide Show use
 - Heavy use (e.g. messaging, web browsing)
- Settings
 - Increasing Brightness or Duration
 - Using Media Player with Backlight set to *Always On*

Battery Disposal

Do not dispose of exhausted batteries with ordinary refuse. Tape over battery terminals before disposal or take to a SoftBank Shop. Follow any and all regulations regarding battery disposal. Lithium-ion batteries are recyclable.

When Battery Runs Out

When battery is weak, a warning appears and handset beeps. Charge or replace battery; otherwise handset will automatically turn off.

Battery Installation

Inserting

Note


- Gently insert battery to avoid damaging handset tabs.
- Without cover, battery may fall out. Attach Battery Cover before use.
- Strong impacts may damage Battery Cover.
- Battery Cover Installation

Release Battery Cover Lever to access battery.


- Remove Battery Cover/battery (◆P.1-8 Removing ① and ②)
- Pit battery into handset as shown



3 Align Battery Cover

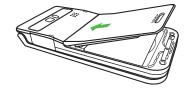

- Press ●① using both hands
- **5** Holding ●① in place, press ●② and ●③ to close completely
- 6 Slide Battery Cover Lever to "Lock"

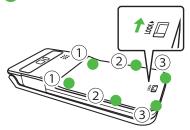

Note

Maintaining Waterproofing & Dustproofing

If handset is wet, wipe it off with a clean, dry cloth before removing Battery Cover or Port Cover. Clean foreign objects off gasket or handset before replacing Battery Cover or Port Cover.

Removing

Always turn handset off before removing battery. Never remove battery while Charger is connected.






2 Lift Battery Cover up and remove as shown



Lift battery up and remove as shown

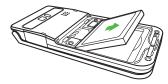


Charge Battery

- Use specified AC Charger ZTDAA1 (sold separately).
 In this guide, ZTDAA1 is referred to as "AC Charger."
- An empty battery requires approximately 120 minutes to charge with power off. Charging time may vary with ambient temperature.

AC Charger

1 Open Port Cover; with label down, insert Charger Connector into External Device Port

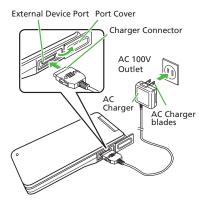

- 2 Extend AC Charger blades and plug it into an AC 100V outlet
- When battery is charged, disconnect handset, close Port Cover, and unplug AC Charger

USB Charge

Connect handset to PC via USB Cable to charge battery.

- Open Port Cover; with label down, insert USB Cable Connector into External Device Port
- 2 Insert USB Plug into PC USB port
- When battery is charged, disconnect handset, close Port Cover, and remove USB Plug
 - USB charging takes longer; charging time varies according to the PC. A weak battery may not charge via USB.

Power On/Off

Power On

- Press 💿 until Display illuminates
 - "Please wait..." and precautions for maintaining waterproofness appear.





Standby Display

- After powering on, select menu format (�P.2-3).
- When handset is left open and idle, Display automatically shuts down to conserve power.
 Adjust Backlight time (�P.13-6).

- The first time Messaging, Yahoo!, etc. is used or a function requiring a network connection is activated, Retrieve NW Info confirmation appears. Choose Yes and follow onscreen instructions.
- Retrieve NW Info confirmation appears after replacing USIM Card or executing All reset.
- Retrieving Network Info sets date and time.
 Network Services (SMS, S! Mail and Yahoo!
 Keitai, etc.) are available.
- Retrieve Network Info manually (◆P.13-23).
- This guide describes operations with date and time set unless noted otherwise.

Power Off

- 1 Press 🐨 until Display goes dark
 - SoftBank logo appears and handset powers off.

Note

• For proper shut down, press 🖜 until Display goes dark.

Account Details

Save your name, mail address, blood type, and other information in Account Details.

Viewing Account Details





- Default: Only handset phone number appears.
- Alternatively, in Standby, press \blacksquare \rightarrow *Phone* \rightarrow *My details*.

Editing Account Details

Example: Save name, phone number, mail address

See "Adding Information to Phone Book Entry"
 (•) P.2-16) to save other information.



- 1 → ① · → 🖂 (Edit)
- 2 Select Last name field → Enter last name
- 3 Select First name field → Enter first name
- 4 Select Reading: Last name field → Edit reading as required
- 5 Select Reading: First name field → Edit reading as required
- 6 Select Phone number field → Enter number → Private/Business/Home/ Office/Fax/Video call/Others
- Select E-mail address field → Enter mail address → Private|Home| Office|Others

- 8 🖾 (Save)
- See "Text Entry" (♠P.2-6) to enter text.
- Default: Handset phone number appears.

Advanced


Advanced Settings P.1-13

- Copying Item in Account Details
- Sending Account Details
- Saving in Data Folder
- Resetting Account Details

Handling Precautions (Key Lock)

Note these precautions when handling handset.

- Activate Key Lock before putting handset in a pocket.
- When carrying AC Charger, retract plug blades.
 Do not pull/twist power cord; doing so may damage it.
- Activate Key Lock to prevent accidental operation when carrying handset in a bag or pocket, etc.

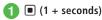

- · Key Lock activates.
- When Key Lock is set, appears at top of Display. If any key is pressed, a guidance to cancel Key Lock appears.
- To cancel Key Lock, press (1+ seconds).

Minding Mobile Manners

Please take care not to disturb others when using handset.

- Turn your handset off in theaters, museums, and other places where silence is the norm.
- Keep your handset off aboard airplanes*, inside hospitals, or in other places where handset use is prohibited.
 - *If handset use is permitted, follow airline instructions for proper use.
- Refrain from using your handset in quiet places such as restaurants, hotel lobbies, or elevators.
- Observe announcements or posted instructions regarding handset use aboard trains, etc.
- Refrain from handset use that interrupts the flow of pedestrian or vehicle traffic.

Handset offers two manner-related modes.

- Offline Mode
 Temporarily suspends all handset transmissions.
 Other functions may be used.
- Manner Mode
 Mutes handset sounds and activates Vibration
 for all alerts, tones, and Alarms. Use Manner Key
 to activate or cancel Manner mode.
 In addition to Manner, handset features Normal,
 Drive, Meeting and Outdoor as the set Ringtone
 or operation sound.
- Activating Offline Mode or Manner mode mutes ringer. Alternatively, set Ringtone volume or Vibration (P.13-4).

Offline Mode



■ → Settings → Call settings → Offline → On or Off



 Power off handset in Offline Mode, confirmation appears. Choose Yes to power on handset in Offline Mode.

Manner Mode

Cancel settings for Manner mode from current setting mode.



(1 + seconds)

- When Manner mode is active, appears.
- Even if Manner mode is active, shutter click sounds for Camera.
- Press (###) for 1+ seconds to cancel Manner mode.
 Canceling Manner mode, returns handset to mode set before Manner was activated.

Changing Mode Settings

Handset features five modes, including Manner.







Normal, Manner, Drive, Meeting, or Outdoor

• Select mode by usage; edit Normal mode or Manner mode settings as required (◆P.14-10).

Mode	Description
Normal Mode	All Sound & Alert settings apply
Manner Mode	Mutes handset system sounds
Drive Mode	Mutes ringer; plays Driving Message and activates Answering Machine for calls
Meeting Mode	Mutes Ringtones & system sound
Outdoor Mode	Maximizes tone volume

Advanced

₹ Settings

- Set Keypad Light Illumination Mode (P.13-3)
- Set Phone Sounds (P.13-4)
- Set System Sounds (P.13-4)
- Set External Light Color for Incoming Transmissions (© P.13-4)
- Set External Light Color for Notification (P.13-5)
- Set External Light Color When Handset is Closed (P.13-5)
- Activate/Cancel Offline Mode (P.13-9)
- Switch Manner Mode (P.13-7)

Security Codes

Phone Password, Center Access Code (Network Password) are required to use handset.

Note

- Write down Phone Password and Center Access Code (Network Password). If you lose a code, contact Customer Service (◆P.14-29).
- Do not reveal Phone Password and Center Access Code (Network Password) to others.
 SoftBank Mobile is not liable for damage caused by misuse of these codes by others.
- Entering incorrect Network Password three consecutive times locks Call Barring settings. To resolve, Network Password and Center Access Code must be changed. For details, contact SoftBank Mobile Customer Center. General Information (♦P.14-29).
- If Center Access Code (Network Password) was changed, to set Call Barring, input the new Center Access Code (Network Password).

Phone Password

The four-digit number (Default: 9999) is required to operate/change some handset functions.

- · Entered Phone Password digits appear as *.
- · If incorrect, an error message appears. Try again.
- Phone Password can be changed on handset (→P.10-3).

Center Access Code (Network Password)

Four-digit number specified at subscription; required for changing service subscriptions, for activating optional services, or for operating handset from landlines.

For changing Center Access Code (Network Password), contact SoftBank Mobile Customer Center. General Information (P.14-29).

PIN Code

USIM Card features two security codes: PIN and PIN2.

PIN Code

Use PIN (four- to eight-digit) to prevent unauthorized use of handset by others.

- Modify PIN with handset (�P.10-3).
- When PIN Lock is activated, PIN entry is required each time handset is turned on or whenever USIM Card is re-inserted (P.10-4).

PIN2 Code

PIN2 (four- to eight-digit) is required for resetting *Call time & cost.* etc.

Modify PIN2 with handset (♠P.10-3).

Canceling PIN Lock (PUK/PUK2 Code)

Incorrectly entering PIN or PIN2 three consecutive times activates PIN Lock, limiting function access. Enter PUK (PIN Unlocking Key) Code to cancel PIN Lock.

For more information, contact SoftBank Mobile Customer Center, General Information (◆P.14-29).

Note

• Entering PUK incorrectly ten consecutive times activates PUK Lock. Purchase USIM Card reissue at a SoftBank Shop.

USIM Password

Use this code to authenticate a USIM Card. If USIM Password matches, USIM Card is valid. Set *USIM lock* to *On* to set USIM Password.

Advanced Settings

Account Details

Editing Account Details

■ \rightarrow *Phone* \rightarrow *My details* \rightarrow \bowtie (Edit) \rightarrow (\clubsuit P.2-12 Creating New Entries 2)

Copying Item in Account Details

- → *Phone* → *My details* → Highlight an item → > → *Copy item*
- Paste copied item in text entry window.

Sending Account Details

- \rightarrow Phone \rightarrow My details \rightarrow \boxdot \rightarrow Send
- To Send via Message

 Via message → (◆P.4-4 S! Mail ②)
- To Send via Infrared

 Via infrared (� P.12-3)

Saving in Data Folder

■ → Phone → My details → \bigcirc → Save to Data Folder → Phone/Memory card → Yes

• To save to *Memory card*, insert Memory Card.

Resetting Account Details

 \blacksquare \rightarrow Phone \rightarrow My details \rightarrow \boxdot \rightarrow Reset \rightarrow Yes

• Account Details except phone number are cleared.

Basic Operations

Accessing Functions	2-2
Using Shortcuts	2-2
Using Main Menu	2-2
Using Shortcut Keys	2-3
Incoming Settings	2-4
Changing Volume	
Changing Ringtone	
Setting Vibration	
Standby Display Options	2-5
Wallpaper	
Text Entry	
Text Entry Window	
Changing Entry Mode	
Kana/Kanji	
Katakana/Alphabet/Number	
Symbol	
Pictograms/Emoticons	
Line Break	
Entering Space	
Hangul	
Using Quick Address List	
Deleting/Editing	
User Dictionary (Japanese)	
Editing User Dictionary	
Saving to User Dictionary	2-11



Phone Book	2-12
Phone Book Window	2-12
Creating New Entries	2-12
Entry Search	
Calling from Phone Book	
Deleting Phone Book Entries	
Advanced Settings	2-15
Text Entry	
User Dictionary	
Phone Book	

Accessing Functions

Use these methods to access handset applications:

- Shortcuts
- Main Menu (Standard Menu)
- Main Menu (Simple Menu)
- Shortcut Keys

Using Shortcuts

Select *Call, Messaging, Yahoo!*, or *Media*. Use multiple functions at the same time (e.g. use the Internet during a call).

- 1 In Standby, or active function, 📵
- \bigcirc to highlight item \rightarrow \blacksquare (Select)
 - To exit an active function, open the window and press ().
 - To exit all active functions, highlight at Shortcuts and press (Yes).
- When you exit all active functions, a confirmation may appear for some functions. If a confirmation appears, choose Yes.
- If Camera is active, shortcuts do not appear in text entry window.

Using Main Menu

Using Standard Menu


1 In Standby, 🔳



Main Menu

- 2 Highlight item $\rightarrow \blacksquare$ (Select)
- Repeat Step ② to select item
- Press to return to the previous operation step.
- Press to exit menu. Handset returns to Standby. If multiple functions are active, active window appears.
- Press to cancel operation. Handset returns to Standby or previous window. In some menus, a confirmation appears.
- Speed Dial numbers appear in item or list window. Press corresponding Keypad key to select an item.
- If item title is too long to view, highlight it to scroll title. Adjust scrolling speed (◆P.13-6).

Example: Selecting *Wallpaper*Settings → Display settings → Wallpaper

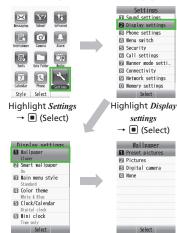

Highlight Wallpaper

→ (Select)

Wallpaper Setting
Window Appears

• Perform the same operation from simple menu. However, some functions are unavailable.



Toggling Standard Menu/Simple Menu

- 1 → Settings → Menu switch
- 2 Standard menu/Simple menu

Using Shortcut Keys

In Standby, use these keys to access functions:

	Key	Menu/Function
	Short Press	Messaging menu
	Long Press	Create S! Mail
\(\nabla_{7}\)	Short Press	Yahoo! Keitai main menu
	Long Press	Yahoo! Keitai menu
	Short Press	Activate Camera
	Long Press	Activate Video
F	Short Press	Shortcuts
	Short Press	Favorites
•	Short Press	Open Call Log (Received)
	Short Press	Open Call Log (Dialed)
	Short Press	Search Phone Book
	Long Press	Add to Phone Book
	Short Press	Main menu
	Long Press	Activate/Cancel Key Lock
	Short Press	Open Call Log (All)


	Key	Menu/Function
	Short Press	Play Answering Machine
CLEAR	Long Press	Activate/Cancel Answering Machine
(* ř.*)	Long Press	Manner mode setting window
#::9	Long Press	Toggle Manner mode On/Off

Incoming Settings

Adjust Volume, Ringtone and Vibration settings. Use Ringtone/Vibration pattern to identify caller.

Changing Volume

Select from six volume levels: θ (off) to 5.

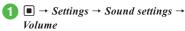




- Select incoming type
- 3
 to adjust volume →
 (Select)
- Highlight volume → 🖾 (Play) to playback.

Changing Ringtone

Besides presets, get Ring songs, music, or videos via Internet for handset use.

1 ■ → Settings → Sound settings → Ringtone

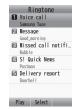

- Select incoming type
- 3 Select Ringtone type
- Select Ringtone file
- Highlight file name → 🖾 (Play) to playback.
- Handset does not support .mmf files. Opening an .mmf file may cause handset to malfunction.

Setting Vibration

Select Vibration Pattern from following options: *Off*, *Pattern 1* to *Pattern 5*.

 \blacksquare \rightarrow Settings \rightarrow Sound settings \rightarrow





- Select incoming type
- Select Vibration
 - To Cancel Vibration Off
 - To Select Vibration Pattern Pattern 1 through Pattern 5

• Highlight file name $\rightarrow \square$ (Play) to view a pattern.

Advanced


₹ Settings


- Adjust Volume (
 P.13-4)
- Set Ringtone for Voice Call (P.13-4)
- Set Ringtone to Something Other than Voice Call (P.13-4)
- Set Ringtone Duration to Something Other than Voice Call (P.13-4)
- Search Machi-Uta[®] (P.13-4)
- Set Machi-Uta® (@P.13-4)
- Register/Cancel Machi-Uta[®] (P.13-4)
- View Instruction for Machi-Uta® (P.13-4)
- Set Vibration (P.13-4)

Standby Display Options

Wallpaper

Set still image to appear in Standby. Alternatively, set *Wallpapers* to *None*.

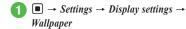

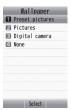

Highlight file name

- To Set Preset Pictures

 Preset pictures → Select file → (Set)
- To Set Image from Pictures

 Pictures → Select file →

 (Set)
- To Set Image from Digital Camera Folder

 Digital camera → Select file → (Set)
- To Set None None
- Set file on Memory Card, confirmation appears. Press Yes to set.

Advanced

⊀ Settings

- Change User Interface Language (P.13-2)
- Set Time Zone Updating (P.13-2)
- Change Home Zone Time (P.13-2)
- Activate/Cancel Daylight Savings Time (P.13-2)
- Set Time (P.13-2)
- Set Date (P.13-2)
- Change Time Format (P.13-2)
- Change Date Format (P.13-2)
- Set Time Correction (P.13-2)
- Set Earphone Settings (P.13-2)
- Change Wallpaper (P.13-5)
- Set/Cancel Smart Wallpaper (P.13-5)
- Change Main Menu Settings (P.13-5)
- Set Menu Color Theme (P.13-5)
- Change Clock/Calendar (P.13-5)
- Set Mini Clock (P.13-5)
- Set Font Weight (P.13-5)

- Adjust Display Brightness (TP.13-6)
- Set Backlight Time (P.13-6)
- Set Backlight Dimmer Time (P.13-6)
- Set Battery Saving Mode (P.13-6)
- Set Text Type in Dialling Display (

 P.13-6)
- Set Text Size in Dialling Display (P.13-6)
- Set Text Color in Dialling Display (P.13-6)
- Set Background Color in Dialling Display (TPP.13-6)
- Set Operator Name (P.13-6)


Text Entry

Enter Kanji, Hiragana, Katakana (single-/doublebyte), alphanumerics (single-/double-byte), symbols (single-/double-byte), pictograms, emoticons or Hangul.

Icon	Entry Mode	lcon	Entry Mode
篡	Kanji or Hiragana (�P.2-7)	※	Symbols (double- byte) (�P.2-8)
力	Katakana (double-byte) (�P.2-8)	<i>3</i> 0	Symbols (single- byte) (�P.2-8)
ħ÷	Katakana (single-byte) (�P.2-8)	€20 ₀₀	Pict. (Common) (♠P.2-8)
A	Alphanumerics (double-byte) (�P.2-8)	(i)	Pict. (All) (♠P.2-8)
Ab	Alphanumerics (single-byte) (�P.2-8)	겠나	Hangul (�P.2-10)
顏	Emoticons (♠P.2-8)	а	Alphanumerics (double-byte, lower case) (♠P.2-8)
[1]	Number (double-byte) (�P.2-8)	аb	Alphanumerics (single-byte, lower case) (�P.2-8)
12	Number (single- byte) (�P.2-8)	展題	History (�P.2-8)

See "Changing Entry Mode" (�P.2-7) about toggling Entry mode.

Text Entry Window

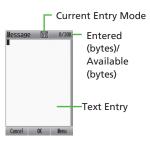

Suggestions



- *Suggestions do not appear in Katakana, Alphanumeric (double-byte), Number, or Hangul entry mode. If *Prediction* is set to *Off* in Kanji/Kana entry mode, press ☑ (Convert) / ☑ (EngNumKana) to convert text.
- Suggestions differ by season or time of day.
- Only numbers can be entered in Date & Time or Alarm time. Text entry window does not appear. Enter numbers directly in Text entry field.
- When Voice Call arrives while entering text, simply answer the call. When the call ends, text entry window returns. When Alarm is activated, end Alarm to return to text entry window.

Changing Entry Mode

Toggle text entry mode: Kanji, Hiragana, Katakana (single-/double-byte), Alphanumerics (single-/double-byte), Symbols (single-/double-byte), Pictograms, Emoticons or Hangul.

በ In text entry window, 🖻



Select entry mode

Kana/Kanji

Use predictive entry to convert and enter characters. Alternatively, directly convert entered Hiragana. Katakana or pictograms may appear in Suggestions.

Example: Enter 鈴木

- 🚹 In text entry window, 🖻
- 2 漢かな
- 3 (three times)
 - ・ **す** is entered.
- 1 0
 - To enter same character continuously, to move cursor to the right.
- (three times) → (***)
 - ・ ず is entered.
- 6 23 (twice)



- ・き is entered.
- 7 Highlight 鈴木 → (OK)

- After entering hiragana, press 🖽 to add " or " .
- After entering hiragana, press 🗱 to toggle case.
- Press (CLEAR) to cancel a misentry.
- If you over-toggle character, press to toggle in reverse.
- To set as Hiragana, press (Confirm).
- If conversion fails, try another reading. For multiple Kanji words, try converting characters separately.
- While suggestions appear, press (Convert) for conversion alternatives. While conversion alternatives appear, press (Predict) to return to Suggestions.

Katakana/Alphabet/Number

Use the suggested characters shown in text entry window to input text, when entering single-byte characters.



In text entry window, → カナ l カナ l Abl Abl 12112

Enter katakana/alphabet/number

- After entering katakana, press (*) to add * or * .
- After entering katakana, press (* 🛵) to toggle case.
- In Alphabet entry mode (A , Ab , a , ab), enter a character then press (* iii) to toggle case.
- Press (CLEAR) to cancel a misentry.
- If you over-toggle character, press to toggle in reverse.
- To enter same character continuously, press 🗖 to move cursor to the right.
- In Kanji/Kana entry mode, enter characters and press (EngNumKana) to toggle Katakana/ Alphanumerics/Numbers entry mode. Example: Enter <₺ and press (EngNumKana), $\mathcal{D}\mathcal{E}$, C, or 22277777 appears in Suggestions.

Symbol

For available symbols, see "Symbols" (SP.14-13).



! @# |!@#



- Press 📵 → 📵 / 📵 to toggle text entry mode
- Press (Prev.page) / (Next page) until symbol appears.

Select character

- Enter symbols continuously. To cancel Symbols entry, press (SER).
- Once entered symbols remain as history and appear in All History.
- In Kanii/Kana entry mode, enter characters and press (Convert) to convert to symbols. Example: Enter *Th* and press □ (Convert).. or · · · appear in Suggestions.

Pictograms/Emoticons

Combine symbols to enter emoticons as well as pictograms (SP.14-14).

Pictogram/Emoticon



- Press 🕞 → 🖸 / 🕞 to toggle text entry mode.
- Press (Prev.page) / (▼) (Next page) until pictogram or emoticon appears.

Select pictogram/emoticon

- You can continuously enter pictograms and emoticons. To stop entering pictograms or emoticons, press (CLEAR)
- Selecting Pict. (Common) E is available only in Message window/Subject window. Select to send message to non-SoftBank devices.
- Once entered pictograms remain as history and appear in All History.
- In Kanii/Kana entry mode, enter はーと、でんわ and convert to pictograms. Similarly, b-U or $\bar{z} - h$ can be converted to emoticons.

Line Break

To enter line break in *Hangul* entry mode, place cursor at the end of the text.

1 In text entry window, (five times) → (OK)



- Place cursor at the end of the text → Press
 to insert line breaks.
- Line breaks cannot be inserted in some entry windows (e.g., Subject window in Messaging).

Entering Space


Entering space varies by Entry mode.

漢かな/カナ/カナ



- (five times)
- In *漢かな* entry mode, press **(Confirm)** to enter space.

A b /Ab

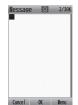

1 🕦 (twice)

Symbol (Full)/Symbol (Half)



1 \square and highlight $\square \rightarrow \square$ (Select)

Hangul



- 1 🖭 (three times)
- When Entry mode is 1 2/12/Pictogram/Emoticon, toggle the above Entry mode and enter.
- When cursor is at the end of a sentence, entering space with is also available.
- Space cannot be inserted in some entry windows (e.g., Recipient window in Messaging).

Hangul

1 In text entry window, $\square \rightarrow Hangul$



- If a confirmation appears, press (OK).
- 2 Enter characters
 - Press number keys to enter assigned character units that appear; combine several consonants and vowels.

Consonant Example (Key Assignment)		
	4 (once)	
∃	4 circl (twice)	
רר	(three times)	
Vow	el Example (Key Assignment)	
아	(0 t) (1 t) (2 t) (1 t)	
야	0 1 1 5 2 ABC 2 ABC	
어	(0 t) (2 ABC) (1 B)	
œ	(0 ±) (2 ½) (2 ½) (1 ± ± ± ± ± ± ± ± ± ± ± ± ± ± ± ± ± ±	
오	(0 ±) (2 70 (3 80)	
<u>유</u>	0 1/2 ABC 2 ABC 3 3	
왜	0 1/2 ABC 3 BC 1 B 2 ABC 1 B	

Using Quick Address List

Save mail addresses/URLs for easy entry.

1 In Mail address or URL entry window or field, ☑ → Insert → Quick address list



Select mail address/URL

Deleting/Editing

- 1 Move cursor to character, and
- When a space is highlighted, the character before the cursor is deleted.
- To delete all characters after cursor, press for 1 + seconds. If there are no characters after cursor, all characters are deleted.
- Press 🕝 for text entry window exit confirmation.

Advanced

• Advanced Settings P.2-15

- Inserting Saved Information
- Jumping Cursor to Top/End
- Changing Text Entry Setting

₹ Settings

Set Text Size in Editor (P.13-6)

User Dictionary (Japanese)

Save frequently used words/phrases of up to 40 characters; entries appear in Suggestions when Reading is entered.

Editing User Dictionary

- → Settings → Phone settings
 → User dictionary → Japanese
 dictionary/English dictionary
- 2 New entry
- Select Word field → Enter word or sentence
- Select Reading field → Enter reading



⑤ ☑ (Save)

Saving to User Dictionary

- 1 In text entry window, ☑ → Add to dictionary
- 2 Highlight the first character → (Start)
- 3 Highlight the last character → (End)



- 4 Japanese dictionary/English dictionary
- Select Reading field → Enter reading
- If selecting the range which includes a line break, character strings before the line break are saved.

Advanced

• Advanced Settings P.2-16

Deleting Entries from User Dictionary

₹ Settings

- Save Entries to User Dictionary (P.13-3)
- Edit User Dictionary Entries (P.13-3)

Phone Book

Create up to 1000 entries. Number of savable items per entry varies by USIM Card. Insert USIM Card into compatible SoftBank handsets to access USIM Card entries.

For savable data for a Phone Book entry, see "Phone Book" (◆P.14-16).

Note

Protect Important Information Phone Book entries may be lost/altered if battery is removed or left uncharged for an extended period; accidents/malfunctions may also affect entries. Back up entries and

may also affect entries. Back up entries and store separately. SoftBank Mobile is not liable for damages from lost information.

 If different USIM Card with saved entries is inserted, copy saved USIM entries to handset, confirmation appears when handset is first powered on. Choose Yes to copy entries.

Phone Book Window

Phone Book entries (�P.2-12) are divided into three tabs. Select tabs to view desired information.



Each Phone Book tab contains items listed below:

Tab	Item	
	Phone number	
70	E-mail address	
	Photo	Homepage
	Group	Company
	Birthday	Job title
	Blood type	Memo
	Address	
	Secret	Vibe: Voice call
8	Tone: Voice call	Vibe: Message
	Tone: Message	

Creating New Entries

Save new Phone Book entries to Phone or USIM Card. Default: **Phone**

Set save location to USIM Card as required (◆P.13-10). Create new entry or save from Call Log record.

Saving Information as a New Entry

Create new entry; save name, reading, phone number, and mail address.

 For other items, see "Adding Information to Phone Book Entry" (♠P.2-16).



 If Save setting (◆P.13-10) is set to Always ask, save location prompt appears. Select Phone! USIM.



New Entry Items

- Select Last name field → Enter last name
- Select First name field → Enter first name

- Select Reading: Last name field → Edit reading as required
- Select Reading: First name field → Edit reading as required
- Select Phone number field → Enter number → Select phone type
- 7 Select E-mail address field → Enter mail address → Select address type
- **8 □** (Save)
- 0 through 9, #, *, -, P (pause), and + (International Code) can be registered for entering in Phone number field. Press (**:**) to toggle *, and P. Press (**) (1 + seconds) to enter +.
- If a Memory Card file is selected for incoming image or Ringtone, copy file to handset confirmation appears. For a copy protected file, move file to handset first confirmation appears. Choose Yes to complete setting.
- When using Samsung New PC Studio to synchronize Phone Book entries with a PC, secret entries are not synchronized to PC. If an entry is changed to a secret entry, it can no longer be synchronized and is deleted from the PC.
 Samsung New PC Studio is available for download from SAMSUNG Website (http://jp.samsungmobile. com/pc/lineup/001download.html).

Saving Entries from Call Log Records

Save numbers in Call Log records to new or existing entries.

- 1 🕝 / 🖸 / 📵
- 2 Highlight/select record $\rightarrow \Box$



- Add to Phonebook
- 4 Select saving method

 - To Update Existing Entry

 Update → Search and select entry (�P.2-13)

 → Save a number to Phone Book (�P.2-12)
 - If save setting (P.13-10) is set to Always
 ask, a message appears to prompt you to
 specify a saving location. Select Phone/
 USIM.

Entry Search

Use ABC/Group/Reading to search entries.





Phone Book List

- 3 ABC|Group|Reading
 - Selected search method is saved.

- 4 Search entry
 - To Search Alphabetically
 to select letter → ① to select entry
 - To Search by Group Select a group → View entry from search result
 - To Search by Reading
 View entry from search result



Entry Details

- Search by entering a lead-off letter.

Calling from Phone Book

1 Search and select entry (�P.2-13) →

■ (Select)



- Place a call
 - To Place a Voice Call Voice call
 - To Place a Call after Editing Number

 Copy to dial → Edit phone number → ■

 (⑤) / ※ → International call (� P.3-10 International Calling)
 - To Place an International Call international call (�P.3-10 International Calling ②)

Deleting Phone Book Entries

Deleting an Entry

- Alternatively, in Entry details window, press ☑ → **Delete** → **Yes**.

Deleting Multiple Entries

- 🚹 📵 → 🖭 → Delete
- 2 Delete entries
 - To Delete Multiple Entries

 Multiple → Check entries → ☑ (Delete)

 → Yes
 - To Delete All Entries

 All → Enter Phone Password → (OK)

 → Yes

Advanced

• Advanced Settings P.2-16

- Adding Information to Phone Book Entry
- Sending Phone Book Entry
- Copying Entries between Phone & USIM
- Temporarily Canceling Phone Book Secret Mode
- Viewing USIM Card Service Number
- Editing Phone Book Entry
- Copying Item
- Setting Face Link from Phone Book Entry
- Adding Phone Book Entry to Favorites
- Saving Phone Book Entry
- Entering & Saving Phone Number

3 Settings

- Set Text Size in Phone Book (
 P.13-6)
- Change Phone Book Preference (Phone/USIM)
 (P.13-10)
- Change Search Method (P.13-10)
- Set Font Size (P.13-10)
- Copy All Phone Book Entries & Save on Handset & USIM Card (P.13-10)

Advanced Settings

Text Entry

Entering Date/Time

In text entry window, select Kanji/Kana entry mode → Enter Hiragana with Keypad → ❤️ (EngNumKana) → Highlight entry in Suggestions → ♠️ (Select)

Specifying Range to Copy/Cut

In text entry window, $\[egin{array}{ll} \rightarrow Edit \rightarrow Copy \ \mbox{or} \ Cut \\ \rightarrow \ \mbox{Highlight the first character of the range to cut/} \ \mbox{copy} \rightarrow \[\mbox{\Large \blacksquare} \ \mbox{(Start)} \rightarrow \mbox{Highlight the last character} \ \mbox{to specify the range} \rightarrow \[\mbox{\Large \blacksquare} \ \mbox{(End)} \ \mbox{)} \ \ \mbox{\Large \blacksquare} \ \mbox{\Large (End)} \ \mbox{\Large Highlight the last character} \ \mbox{\Large Topology} \ \mbox{\Large Highlight the last character} \ \mbox{\Large Topology} \ \mbox{\Large Highlight the last character} \ \mbox{\Large Highlight the last character} \ \mbox{\Large Topology} \ \mbox{\Large Highlight the last character} \ \mbox{\Large Highlight the last character} \ \mbox{\Large Topology} \ \mbox{\Large Highlight the last character} \ \mbox{\Large Highlight the last characte$

- To copy or cut all text in text entry window, press [37] (All).
- Copied or cut text remains even if handset is powered off.

Pasting Copied/Cut Text

In text entry window, move cursor to the position to paste $\rightarrow [x] \rightarrow Edit \rightarrow Paste \rightarrow Select$ item

Undoing Text Entry

 In Kanji/Kana entry mode and Alphabet (singlebyte) entry mode, undo operations immediately after performing conversion. Undo Cut, Paste, or Delete are available.

Inserting Saved Information

In text entry window, 🗹 → Insert

■ To Insert Text on Notepad

Notepad → Select item

■ To Insert Barcode

Bar code reader → Scan barcode (♠P.9-9)

■ To Insert Information in Phone Book

Phonebook → Search and select entry (�P.2-13) → Select item

■ To Insert Account Details

Account details → Select item

- To Insert Signature Signature
- To Insert a Part of Mail Address

 Quick address list (�P.2-10)
- For some text entry windows, inserting items above may not be available.

Jumping Cursor to Top/End

In text entry window, \boxdot \rightarrow *Cursor position* \rightarrow Select item

Changing Text Entry Setting
In text entry window, ✓ → Settings

- To Activate/Cancel Prediction

 Prediction → On or Off
- To Activate/Cancel Learning Function

 Learning → On or Off

- To Activate/Cancel Auto Capitalization

 Auto capitalization → On or Off
- To Activate/Cancel Flexible Search Flexible search → On or Off
- To Reset Learning Function

 Reset learning → Enter Phone Password →

 (OK) → Yes
- To Clear History for Pictograms/Emoticons

 Clear history → Yes
- To Change Font Size

 Font size → Large/Standard/Small
- To Change Cursor Speed

 Auto cursor → Off|Slow|Normal|Fast|Very
 fast

User Dictionary

Deleting Entries from User Dictionary

- → Settings → Phone settings → User dictionary → Japanese dictionary/English dictionary
- To Delete an Entry

 Highlight item → 🐨 → Delete → Selected → Yes
- To Delete Multiple Entries

 □ → Delete → Multiple → Check items →
- ☑ (Delete) → Yes■ To Delete All Entries
 - \longrightarrow **Delete** \rightarrow **All** \rightarrow Enter Phone Password \rightarrow \bigcirc (OK) \rightarrow **Yes**

Phone Book

Adding Information to Phone Book Entry

 \square \rightarrow \square (New)

01

 \square \rightarrow Search and select entry (\bigcirc P.2-13) \rightarrow \square (Edit)

- **■** To Save Group
- To Save Birthday
 - → Select Birthday field → Enter birthday→ (Save)
- To Save Blood Type
- To Save Address
 - Description → Select Address field → Select Type field → Private/Business/Others → Select Zip code field → Enter zip code → Select Country field → Enter country name → Select Province field → Enter province name → Select City field → Enter city name → Select Street field → Enter street name → Select Additional information field → Enter additional information → (Done) → (Save)
- To Save URL
 - → Select Homepage field → Enter URL
 → Select type → 🖾 (Save)
- To Save Company
 - \longrightarrow Select Company field \rightarrow Enter company name \rightarrow \square (Save)

■ To Save Job Title

■ To Save Memo

■ To Set Secret

• Items other than Group are unavailable in USIM Card Phone Book.

Setting Incoming Image to Phone Book Entry

 \bigcirc \rightarrow \bigcirc (New) \rightarrow \bigcirc Select Photo field Or

 \square → Search and select entry (�P.2-13) → \square (Edit) → \square \square → Select Photo field

■ To Set from Saved Still Image

Pictures → Select file → (Save)

- With Memory Card inserted, select a file from Pictures or Digital Camera folder.
- To Set Character

Character icon → Select item → \square (Save)

■ To Set by Capturing Still Image

 $Take\ photo$ → Capture still image → \blacksquare (Save) → \boxtimes (Save)

■ To Cancel Set Incoming Image

 $Off \rightarrow \square$ (Save)

 If a Memory Card file is set as incoming image, copy file to handset first confirmation appears. If file is copy protected, move file to handset first confirmation appears. Choose Yes to complete setting.

Setting Ringtone to Phone Book Entry

 $\square \rightarrow \square$ (New) $\rightarrow \square$ Select Ringtone settings field

Or

- \square \rightarrow Search and select entry (\bigcirc P.2-13) \rightarrow \square (Edit) → Select Ringtone settings field

■ To Set Ringtone for Voice Call

Select Tone: Voice call field → Select file location → Select file → 🖾 (Save)

■ To Set Ringtone for Message

Select Tone: Message field → Ringtone

→ Select a file location → Select a file → $Duration \rightarrow Enter duration \rightarrow \square (Done) \rightarrow$

- To reset setting, select file → [\sigma] (Reset).
- While selecting a file, press (Play) to playback.
- If a Memory Card file is set as Ringtone, copy file to handset first confirmation appears. If file is copy protected, move file to handset first confirmation appears. Choose Yes to complete setting.

Setting Vibration to Phone Book Entry

 $\square \rightarrow \square$ (New) $\rightarrow \square \rightarrow$ Select Vibration settings field

Or

- \square \rightarrow Search entry (\bigcirc P.2-13) \rightarrow \square (Edit) \rightarrow \square
- → Select Vibration settings field

■ To Set Ringtone

Select Vibe: Voice call field → Select Vibration pattern $\rightarrow \square$ (Save)

■ To Set Ringtone for Message

Select Vibe: Message field → Select Vibration pattern → 🖾 (Save)

• While selecting a Vibration pattern, press

(Play) to check the pattern.

Creating Message from Phone Book Entry

☐ → Search and select entry (♠P.2-13)

■ To Create Message from Phone Book

Highlight phone number $\rightarrow \blacksquare$ (\Longrightarrow) \rightarrow S! Mail or $SMS \rightarrow (9P.4-4 S! Mail 6. P.4-5 SMS 6)$

■ To Create Message from Mail Address

Highlight mail address $\rightarrow \blacksquare$ (\blacksquare) \rightarrow (\clubsuit P.4-4 S! Mail (5)

Opening Website from Phone Book Entry

☐ → Search and select entry with homepage saved (\bigcirc P.2-13) \rightarrow Highlight homepage \rightarrow

(Access) → Yes/PC site browser

Sending Phone Book Entry

 $\square \rightarrow \square \rightarrow Send$

- To Send via Message

 $Via\ message$ → Check entries → \square (Send) → (**②**P.4-4 S! Mail **②**)

■ To Send via Infrared

Via infrared → Check entries → (Send) → (P.12-3)

Copying Entries between Phone & USIM

■ To Copy an Entry

 \square \rightarrow Highlight entry \rightarrow \square \rightarrow Copy to USIM/ Copy to phone → Selected → Yes

• In Entry details window, press (→ Copy to USIM/Copy to phone → Yes.

■ To Copy Multiple Entries

- $\boxed{\mathbb{Q}} \rightarrow \boxed{\mathbb{W}} \rightarrow \textit{Copy to USIM/Copy to phone}$ $\rightarrow \textit{Multiple} \rightarrow \text{Check entries} \rightarrow \boxed{\mathbb{Q}} \text{ (Copy)} \rightarrow \textit{Yes}$
- To Copy All Entries from Phone to USIM/ USIM to Phone

$$\bigcirc \rightarrow \bigcirc \rightarrow Copy \ to \ USIM/Copy \ to \ phone$$

 $\rightarrow All \rightarrow Yes$

Temporarily Canceling Phone Book Secret Mode

 $\square \to \boxdot \to Unlock \ temporarily \to$ Enter Phone Password $\to \blacksquare$ (OK)

 If Security → Secret mode is set to Hide, numbers set as Secret mode On appear temporarily in Phone Book.

Viewing USIM Card Service Number

- $\square \rightarrow \square \rightarrow Service number$
- The item Service number may not appear for some USIM Cards.

Specifying Saving Destination for Phone Book Entries

□ → ☑ → Settings → Save to → Phone/ USIM/Always Ask

Toggling Phone Book View between USIM & Phone

- □ → ☑ → Settings → Change view → Phone/USIM/Phone & USIM
- Change remains even if handset is powered off.

Editing Phone Book Entry

- \square → Search and select entry (�P.2-13) → \square (Edit) → (�P.2-12 Creating New Entries \square)
- To edit secret Phone Book entry, set Secret to Show.

Or

 \blacksquare \rightarrow *Unlock temporarily* \rightarrow Enter Phone Password \rightarrow \blacksquare (OK)

Copying Item

 \square \rightarrow Search and select entry (\bigcirc P.2-13) \rightarrow Highlight item \rightarrow \boxdot \rightarrow Copy item

Setting Face Link from Phone Book Entry

 \bigcirc \rightarrow Search and select entry (\bigcirc P.2-13) \rightarrow \bigcirc \rightarrow Face link

- To Save Face Link from a Saved Still Image Face registration → Select from Image 1 to Image 5 → Pictures → Select file → (Register)
- To Save Face Link by Capturing a Still Image Face registration → Select from Image 1 to Image 5 → Take photo → Capture still image → (Save)
- To View Other Face Link Images

 This person's photo
- To Select Images to be Saved as Face Link Images

This person's photo → v → Add → Select file → n (Register)

- For an image without Face Link, select *This person's photo* → (Add) → Select a file
 → *Yes* → Use to move name tag → ■
 (Save).
- To Search & Save Same Face Link Images

 This person's photo → 🐨 → Face search

 → Yes
- To Cancel Same Face Link Images

This person's photo → Highlight a file →
$$\textcircled{x}$$
 → Remove → Selected → Yes

- To cancel multiple Face Link images, This person's photo → 🖾 → Remove → Multiple → Check files → 🖾 (Remove) → Yes
- To cancel all Face Link images, This person's photo → ② → Remove → All → Enter Phone Password → (OK) → Yes.

Adding Phone Book Entry to Favorites

 \square → Search and select entry (�P.2-13) → \square → Add to Favorites → Select number/No setting → Select address/No setting → \square (Save)

 Alternatively, press □ → ■ (Add) → Select entry to add.

(

 $\boxed{ } \rightarrow \boxed{ } \rightarrow Add \rightarrow \text{Select Phone Book}$

 Add entry to Favorites and in Standby, press Softkey to call or message (P.3-5).

Saving Phone Book Entry

 To save a file to *Memory card*, insert Memory Card.

Entering & Saving Phone Number

■ To Save New Entry

 $New \rightarrow (\bigcirc P.2-12 \text{ Creating New Entries } \bigcirc 2)$

■ To Update Entry

Update → Search and select entry (\clubsuit P.2-13) → Enter each item (\spadesuit P.2-12)

 Only name, reading, mail address, and group can be saved to USIM Card.

Adding Groups

■ To Set Group Names

■ To Set Group Icon

Select Group icon field \rightarrow Select icon $\rightarrow \square$ (Save)

■ To Set Incoming Image

Select Group photo field \rightarrow *Pictures/Character icon/Take photo/Off* \rightarrow Set incoming image \rightarrow \bowtie (Save)

- If Pictures is selected, select file.
- If Character icon is selected, select icon.

- If Take photo is selected, capture a still image.
- If Off is selected, incoming image will not be set.

■ To Set Ringtone

■ To Set Vibration

Vibe: Voice call field/Vibe: Message field → Select Vibration pattern → 🖾 (Save)

- For USIM Card, only group name and group icon can be set.
- Images and Ringtones set for individual entries take priority over Group setting.

Changing Group Settings

■ \rightarrow Phone \rightarrow Group settings \rightarrow Highlight group \rightarrow ■ (Edit) \rightarrow Edit each item the same way as items are added (\bigcirc P.2-19) \rightarrow \bowtie (Save)

Sorting Group

 \blacksquare → *Phone* → *Group settings* → Highlight group → \boxdot → *Change order* → Use \boxdot to move cursor to the position to move to → \blacksquare (OK)

Deleting Group

 \blacksquare \rightarrow *Phone* \rightarrow *Group settings* \rightarrow Highlight group \rightarrow *Delete* \rightarrow *Yes*

Toggling Group View between USIM & Phone

■ → Phone → Group settings → Highlight group → Change view → Phone/USIM/Phone & USIM

Calling

Voice Call Placing a Voice Call Placing a Voice Call Placing a Voice Call Placing a Voice Call Placing	
Receiving a Voice Call In-Call Operations	3-2
Favorites	
Saving Entries as Favorites Using Favorites Sending Messages	3-4 3-5
Emergency Numbers	
Answering Machine	
Activating & Canceling	
Using Answering Machine	
Deleting Messages	3-6
Black List	
Rejecting Incoming Call	
Calls from Specified Numbers	
Calls from Unknown ID Numbers	
Calls from Public Pay Phones	
Calls from Unavailable ID Numbers.	
Call Log Records/Ranking	3-8
Viewing Call Log Records	
Viewing Ranking	
Calling Call Log Records	
Deleting Call Log Records	
Checking Call Time/Cost	3-10
International Calling	
international calling	3 10




Global Roaming	
Setting NetworkCalling Outside Japan	
Optional Services	3-12
Voicemail	3-13
Call Forwarding	
Call Waiting	
Conference Call	
Call Barring	3-16
Caller ID	
Advanced Settings	3-18
Voice Call	
Call Log Records/Ranking	
Conference Call	3-19

Voice Call

Placing a Voice Call

Directly enter phone number to call. To place a call from Phone Book, see "Calling from Phone Book" (♠P.2-14).

- Enter phone number including area code
- When the line is busy, press (to end the call (to cancel redialing.
- When Stereo Earphone Microphone (optional) is connected and *Earphone call* is set to *On* in Standby, press Stereo Earphone Microphone switch for 1+ seconds to call specified phone number. Press it again for 1 + seconds to end the call.

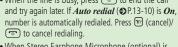



Receiving a Voice Call

- To end the call \rightarrow (\bigcirc)
- To put caller on hold, press 🕝. To connect the call, press / (Accept).

Voice Call window appears,

- If Stereo Earphone Microphone (optional) is connected, press Stereo Earphone Microphone switch for 1 + seconds to accept Voice Calls. Press it again for 1 + seconds to end the call.
- Missed Call Window Missed call window appears for unanswered calls. Select View to view incoming calls (P.3-8).
- Ringtone

Specify Ringtones by Phone Book entry or Category (SP.2-17, P.2-19). If they are not set, they will ring according to the activated mode (P.14-10). If Security → Secret is set to Hide when a call from a secret entry number is received, the handset will ring according to the activated mode.

090***** Cancel & Menu

Phone Number **Entry Window**

- Confirm entered phone number →
- To end the call \rightarrow \bigcirc
- To correct entered digit, press (SEAR). Press (SEAR) for 1 + seconds to delete all.
- To enter P (pause), press (* in) twice. To enter + (International Code), press () for 1 + seconds.
- When entering phone number, press last digit 1+ seconds to initiate dialing.

- Incoming Call Window
 If a caller sends Caller ID, phone number appears.
 If saved in Phone Book, name also appears. If
 caller hides Caller ID, *Withheld* appears.
 If incoming image has been saved in Phone Book
 or for a group, saved image also appears (♠ P.2-16,
 P.2-19). If *Security* → *Secret* is set to *Hide* when a
 call from a secret entry is received, only number
 appears.
- When You Cannot Answer a Call
 Use Call Forwarding or Voicemail to handle calls.
 While handset rings/vibrates, press
 (Forward)
 to forward the call to Voicemail or designated
 number immediately (▶P.3-13, P.3-14). Alternatively,
 press (Record) to record caller message on
 handset (♠P.3-6).

In-Call Operations


Adjusting Volume



• Adjust Earpiece or Earphone (optional) volume. Setting remains even if handset is powered off.

Holding Incoming Call

Place call on hold and reconnect.

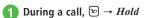

- When a call is put on hold, the party on hold hears a hold tone and neither party can hear each other's voice.
- To reconnect call, press > Answer.
- To put a current call on hold, separate subscription is required to use either Call Waiting (♠ P.3-15) or Conference Call (♠ P.3-15). No liability is assumed for any damage associated with SSL/TLS use.

Recording a Call

1 During a call, $\[\mathbf{v} \] \rightarrow Record \rightarrow \]$ (Record)



- 2 End recording $\rightarrow \square$ (Stop)
- Record voice for up to two minutes during a call.
- To pause recording, press (Pause).
 Press (Record) to resume recording; press ☒
 (Save) to save recording up to paused point.
- Recorded sound file is saved to Ring Songs Tones in Data Folder
- If Call Waiting is subscribed to, recording is stopped when there is another incoming call, and Incoming call window appears.
- If the call is terminated while being recorded, recording is automatically shut off, and the voice file is saved.

- 1 During a call, 🗹 → Memo

Advanced

• Advanced Settings P.3-18

- Saving Entered Phone Number to Phone Book
- Sending New Message to Entered Number
- Showing/Hiding Your Number for a Call
- Setting Mute
- Talking in Low Voice

₹ Settings

- Set Any Key Answer (P.13-3)
- Accept/Reject Calls from Specified Phone Numbers (P.13-8)
- Accept/Reject Calls from Unknown Numbers (P.13-9)
- Accept/Reject Calls When Number is Withheld (P.13-9)
- Accept/Reject Calls from Payphones (P.13-9)
- Accept/Reject Calls When Number is Unavailable
 (P.13-9)
- Show/Hide Your Own Number (P.13-10)
- Set Handset to Automatically Redial Busy Numbers (P.13-10)
- Activate/Cancel Automatic Ringer Reduction (P.13-10)
- Enable/Disable Calling via Stereo Earphone Microphone (P.13-10)
- Set Clear Talk (P.13-10)
- Adjust Earpiece Volume (P.13-10)

Favorites

Save Phone Book entries as Favorites for quick calling.

Saving Entries as Favorites

Save up to 20 frequently used entries.

- 2 🔳 (Add)
 - If more than one entry is saved in favorites, press $\bigcirc Add$.
- 3 Search and select Phone Book entry (�P.2-13)

- Secret entry phone numbers cannot be saved as Favorites.
- Setting phone number saved as Favorites to secret entry cancels Favorites setting automatically.

Using Favorites

- **1** → Phone → Favorites

- Alternatively, in Standby, press () to view Favorites.

Sending Messages

- \bullet Phone \rightarrow Favorites
- 2 Highlight designated number → ☑ (☑) → Create message (P.4-4 S! Mail 5)
- Alternatively, in Standby, press 🗖 to view Favorites.

Emergency Numbers

Call 110 (Police), 119 (Fire & Ambulance) or 118 (Maritime Safety Agency). These numbers can be dialed even when certain Call Barring settings are active. See details below.

001SC Status	Emergency Numbers
Offline Mode activated (�P.1-11)	N/A
Phone Lock activated (�P.10-3) N/A	
Password Lock activated (◆P.10-4) N/A	
Required PIN not entered (�P.10-4) N/A	
USIM Card cannot be authenticated (◆P.10-4)	N/A
Outgoing Call Barring activated (◆P.3-17)	Applicable

Note

 Emergency calls may not be possible outside Japan depending on available network, signal conditions or handset settings.

Emergency Location Report


When calls are placed to Police or other emergency agencies from handset, handset location information is automatically sent to the corresponding agency. Handset transmits location based on base station positioning information.


- Location accuracy may vary by geography or signal conditions. Always verify your location with address or nearby landmark.
- Base station positioning accuracy ranges from several hundred meters to ten kilometers. This information may differ from actual location due to distance of the closest base station location.
- This function is only available if the agency receiving an emergency call has implemented the infrastructure for receiving location information.
- If you hide Caller ID by dialing 184 before calling an emergency number, your location information is not sent. However, authorities may access this information when necessary.
- No subscription/Communication charges required.

Answering Machine

Handset records up to three 15-second messages.

Activating & Canceling

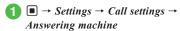

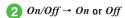

- If Answering machine is on, @ appears in Standby.
- In Standby, press (for 1 + seconds to activate/ cancel Answering Machine.
- Calls appear in Call Log records.

Note

- If handset is off, out-of-range, or in Offline Mode, Answering Machine is unavailable.
 Use Voicemail to handle incoming calls.
- Answering Machine requires at least 600 KB of unused handset memory.

Using Answering Machine

Use Answering Machine to record caller messages (�P.3-6).

- Select a message
- After Answering Machine records a message, appears on Standby.

Deleting Messages

- 1 → Phone → Play messages
- 2 Highlight message →

 (Delete) → Yes
- Message is deleted; Missed call appears in Call Log.

Advanced

₹ Settings

- Activate/Cancel Answering Machine (P.13-8)
- Set Answering Machine Response Time (P.13-8)
- Play Answering Machine Records (P.13-8)
- Set Answering Machine Response Language (P.13-8)

Black List

Reject incoming calls. Alternatively, reject calls from specified or unknown numbers (�P.13-9).

Rejecting Incoming Call

- 1 While handset rings, 1 (Reject)
- Rejected calls appear in Call Log records.

Call is unavailable due to the reasons of other party message appears on caller's handset before call is disconnected. If handset is incompatible, call is simply disconnected.

Calls from Specified Numbers

- 2 Set reject number → On/Off → On
 - For calls from Black list, caller hears a busy tone and call is not connected. Missed Call Notification appears in Standby. Select notification to check missed call.
 - Choose Off to allow calls from specified numbers.
- 3 Black list

- 4 (Add)
 - If more than one phone number is saved in Black list, press $[\Sigma] \rightarrow Add$.
- 5 Add an entry
 - To Add from Phone Book

 Phonebook → Search and select entry

 (◆P.2-13)

 - To Enter Phone Number Directly

 Direct input → Enter Phone Number
- 6

 □ (Done)
- To delete saved numbers after ③, highlight numbers → [xr] → Delete → Selected → Yes.

Calls from Unknown ID Numbers

- Q Unknown → On
 - Choose Off to allow calls from unknown numbers.

Calls from Withheld ID Numbers

- 1 → Settings → Call settings → Reject incoming calls
- Withheld → On
 - Choose Off to allow calls from withheld ID numbers.

Calls from Public Pay Phones

- Payphone → On
 - Choose Off to allow calls from pay phones.

Calls from Unavailable ID Numbers

- Q Unavailable → On
 - Choose Off to allow calls from unavailable ID numbers.

Call Log Records/Ranking

Viewing Call Log Records



- Alternatively, in Standby, press to show outgoing call log records.
- Alternatively, in Standby, press to show incoming call log records.



Call Log (Incoming Calls)

2 Select record

- Call Log Record Icons
 - 🕒 : Outgoing Voice Call
 - 🗓 : Incoming Voice Call
 - 🗗 : Missed Voice Call
- Rejected Voice Call
- : Voicemail Notification
- : Missed Call Notification
- (: Answering Machine
- If Security → Secret mode is set to Hide, names do not appear in Call Log for secret entries.

Viewing Ranking



Call Log (Ranking)

2 Select ranking

- If Security → Secret mode is set to Hide, numbers set as Secret mode On will not appear in Call Log.

Calling Call Log Records

- - → Highlight a log/ranking
- Place a call
 - To Place a Voice Call
 - Alternatively, highlight log → 🖅 → Voice call to place a Voice Call.
 - To Place an International Call

 □ → International call → Highlight
 country/Select Enter Code and Enter
 country code → ✓ / □ (□ ⑤ □)
 - Highlight log → ♥ → International call → Highlight country → ✓ / ■
 () Or

Highlight $\log \to \bigcirc \longrightarrow International$ $call \to Select Enter code \to Enter country code \to \bigcirc / \bigcirc (\bigcirc \bigcirc \bigcirc)$ to place an International Call

- - Alternatively, highlight log → ♥ →
 Copy to dial → Edit number → ■
 (●) / ♥ → International call
 (◆P.3-10).

Deleting Call Log Records

- 2 Delete records
 - To Delete a Record
 Highlight record → 🖾 → Delete →
 Selected → Yes
 - To Delete Several Records

 □ → Delete → Multiple → Check records → □ (Delete) → Yes
- To confirm and delete records one by one, after ①, select record → Confirm and 🖾 → *Delete* → *Yes*.

Resetting Ranking

- Reset ranking
 - To Reset a Ranking
 Highlight ranking → 🖅 → Reset ranking
 → Selected → Yes
 - To Reset Multiple Rankings

 ② → Ranking reset → Multiple →

 Check ranking → ② (Reset) → Yes
 - To Reset All Rankings $\textcircled{r} \rightarrow Ranking \ reset \rightarrow All \rightarrow \text{Enter}$ Phone Password $\rightarrow \textcircled{n}$ (OK) $\rightarrow Yes$

Advanced

- Advanced Settings P.3-18
- Viewing Phone Book Entry Details via Call Log
- Adding Log Record Numbers to Phone Book
- Adding Call Log Record Numbers to Black List
- Hiding/Showing Ranking

Checking Call Time/Cost

Show charge after call may not be available depending on your contract conditions.

Call settings menu includes items below.

Menu Item	Action
All calls	Confirm or reset approximate total call time/cost.
Last call	Confirm or reset approximate call time/cost of the previous call.
Data counter	Confirm or reset approximate incoming/outgoing data volume.
Show charge after call	Set whether to show call time/ cost after ending a call.
Set currency	Set or change currency.

- \blacksquare \rightarrow Settings \rightarrow Call settings \rightarrow Call time & cost
- Select item
- To reset All calls/Last call/Data counter, press (Reset).

Advanced

₹ Settings

- Check Call Time/Cost (P.13-8)
- Check Last Call Time/Cost (TP P.13-8)
- Check Data Counter (

 P.13-8)
- Show/Hide Call Time/Cost after Calls (P.13-8)
- Change Call Cost Currency (TP.13-8)

International Calling

- Enter a phone number including area code
- Σ \rightarrow International call \rightarrow Highlight country → <a> /
 - 0r Y → International call → Enter **Code** → Enter country number →
 - · Country code entry is not required to call SoftBank handsets outside of Japan, regardless of country.

Global Roaming

This handset is compatible with 3G networks. It will not function on GSM or GPRS networks. Apply for Global Roaming Service beforehand. For information, see SoftBank Mobile Website: (http://mb.softbank.jp/en/global_services/)

Setting Network

This handset is SoftBank 3G network compatible. To use this handset outside Japan, switch network (service provider) in 3G Roaming areas.

Selecting a Network

Select network (service provider) for the area where handset is used. Manual selection is also available.

- Select Network mode
 - To Set Automatically Automatic
 - To Specify Operator

 Manual → Select an item

Setting Preferred Network

Add Network list preferentially selected when *Automatic* is set.

- ■ → Settings → Call settings
 → International call → Select
 operator → Set priority
- Add Preferred Network list
 - To Select & Add from Network List

 ¬ Insert → Network list → Select
 network
 - To Add Network

 Highlight location to insert network,
 → Insert → New network → In Country

 code field, enter country code → In Network

 code field, enter Network code → Select

 Network name field → Enter Network name

 →

 (Save)
- To delete network, after ①, highlight network → ☑ → Delete → Yes.
- Items to set in New Network are as follows.
 Country code: Up to three digits
 Network code: Up to three digits
 Network name: Up to 20 words

Calling Outside Japan

Emergency calls may not be possible outside of Japan depending on network, signal conditions, or handset settings (�P.3-5).

- 1 Enter a phone number including area code →
- Place a call
 - To Place a Call to Japan Call to Japan
 - To Place a Call to Visiting Country Visiting country
 - To Place a Call to a Country Other than Japan

 Call to a country Other than Japan →

 Select country
 - To Place a Call by Entering Number Call this number
 - If Never is checked or Roaming dial assistant is Off, operation above is not required.
- To place a call by directly entering country number, press ① for 1 + seconds to enter ≠. Enter country number, phone number excluding the first 0 → Press to dial. To place a call to Italy, include the first 0 if there is one
- If + and country code is included at beginning of phone number, 2 is not required.

९ Settings

- Save International Code (P.13-9)
- Add/Change/Delete Country Number (

 P.13-9)
- Select Network to Access (P.13-9)
- Select Preferred Network from List (P.13-9)
- Add a New Preferred Network (P.13-9)
- Set Roaming Dial Assistant (P.13-9)
- Retrieve Network Information Manually (P.13-23)
- Seek the Most Prioritized Network (P.13-23)

Optional Services

Available optional services are as follows:

Service	Description
Voicemail	Divert all or all unanswered calls to Voicemail Center; access caller messages via handset from within the service area or via a touchtone phone anywhere. - Set Missed Call Notification to notify missed calls by notification when handset is off or out-of-range (◆P.3-14).
Call Forwarding	When you know you will be unable to answer calls, automatically divert calls to a specified number.
Call Waiting	Put the line on hold to answer another line or alternate between lines. Or toggle lines among multiple lines simultaneously.
Conference Call	Open another line while one is engaged; toggle lines or talk with up to six parties simultaneously.
Call Barring	Restrict incoming or outgoing calls by condition.
Caller ID	Show/hide your own number when placing calls.

Note

- Call Waiting and Conference Call require separate subscription.
- If Out appears, services are unavailable.
 For landline operation or service details, see SoftBank Mobile Website (http://www.softbank.jp).

Voicemail

Handset forwards Voice Calls to Voicemail Center according to the following conditions:

Forwarding Condition	Description
Always	Handset does not ring/vibrate for incoming calls; calls are diverted automatically. Missed Call Notification does not appear.
No reply	Unanswered calls are diverted after the specified ring time, or when the line is busy or handset is outside service area.

Note

- Voicemail and Call Forwarding cannot be active at the same time.
- Activating Voicemail cancels Call Forwarding.

Activating Voicemail

- 1 → Settings → Call settings →
 Optional services → Voicemail/Call
 forwarding → Voicemail on
- 2 Select an item
 - To Transfer Immediately Always (0 sec.)
 - To Set Ring Time before Transfer No reply (5 to 30 sec.)
- If No reply (5 to 30 sec.) is set, answer call within set ring time to cancel forwarding, or press
 (Forward) to Voicemail Center to forward immediately.

Canceling Voicemail

1 ■ → Settings → Call settings →
Optional services → Voicemail/Call
forwarding → Deactivate All → Yes

Listening to Voicemail Message

When a caller saves a Voicemail message, notification appears in Standby and 👺 appears at top of Display.



- When Notification Appears
 - Select notification → Highlight history →
 - Select View → Select record to view message detail.
 - Press (Close) to clear the notification without playing the message.
- When Notification Does Not Appear

 → Phone → Call voicemail

 → / □ (□ □)

 Or

 Enter 1416 → () / □ (□ □)
- If you delete a message you played, 🗃 disappears.

Activating Missed Call Notification

Notification appears for missed calls while handset is off or outside service area; or when caller saves message at Voicemail Center while the line is engaged.













- Alternatively, press

 → Settings → Call settings → Optional services → Missed call notification to activate Missed Call Notification.
- Notification is saved as Call Log record.
- Missed Call Notification is complimentary.

Advanced

3 Settings

- Forward All Calls to Voicemail (Handset Does Not Ring) (@P.13-7)
- Forward Unanswered Calls to Voicemail (Specify Ring Time) (@P.13-7)
- Cancel Voicemail/Call Forwarding (P.13-7)
- Confirm Current Voicemail/Call Forwarding Settings (@P.13-7)
- Cancel Voicemail/Call Forwarding (P.13-7)

Call Forwarding

Forward incoming calls to a specified number in accordance with the predefined forwarding condition which you can set (�P.3-14).

Note

- · Call Forwarding and Voicemail cannot be used at the same time.
- Activating Call Forwarding cancels Voicemail.

Activating/Canceling Call Forwarding

Specify a forwarding number beforehand.

- \blacksquare \rightarrow Settings \rightarrow Call settings \rightarrow Optional services → Voicemail/Call forwarding → Call forwarding on Deactivate All
 - When canceled, confirmation appears. Choose Yes to end operation.
- Always (0 sec.) or No reply (5 sec.) to No reply (30 sec.)

- Set forwarding number
 - To Use Previous Forwarding Number Last set number → Select number
 - To Enter from Phone Book **Phonebook** → Search and select entry (♠P.2-13) → Select number
 - To Enter Number Directly Enter number → Enter phone number
- If No reply (5 to 30 sec.) is set, answer call within set ring time to cancel forwarding, or press (Forward) to forward immediately.

Advanced

₹ Settings

- Activate & Set Forwarding (P.13-7)
- Cancel Voicemail/Call Forwarding (P.13-7)
- Confirm Current Voicemail/Call Forwarding Settings (@P.13-7)

Call Waiting

Separate subscription is required to use this service. For use with Voice Calls only.

Activating/Canceling Call Waiting

- **1** → Settings → Call settings → Optional services → Call waiting
- 2 On or Off
- For current status, select *Get status* after 1.

Accepting a Second Call

If a call arrives during a call, interrupt tone sounds and notice appears. Put first call on hold to answer.

- After interrupt tone sounds,
 (Accept) → Answer (Hold call)
 Answer (End call)
 - To put current call on hold to answer second call, press .
 - To put current call on hold to answer second call, select Hold call.
 - To end current call to answer second call, select End call.
- 2 To switch parties,
 ☐ (Group call)

- 3 Switch party
 - To End Selected Call End this call
 - To Switch to Group Call Call to all
 - To Switch Party Switch
 - To End All Calls

 End all calls
- If one party ends a call with another on hold, press

 → Answer to talk with party on hold again.
- If Call Forwarding or Voicemail is set and second call is not answered, it is forwarded to a forwarding number or Voicemail Center.
- If forwarding condition is set to *Always*, Call Waiting is unavailable.

Advanced

₹ Settings

- Activate/Cancel Call Waiting (P.13-7)

Conference Call

Talk with up to six parties simultaneously. This service requires separate subscription.

Placing New Call During a Call

Connecting a second call places first one on hold.

- 1 During a call → Enter phone number
 - To select from Phone Book, press

 Phonebook → Search and select entry
 (♠P.2-13) → Select phone number.
 - To select from Call log, press → Call log → Select log.
 - To enter phone number directly, press
 New call → Enter phone number.
 - 2 🗷 / 🔳 (🕓)
- Calling a third party is only possible with Conference Call (unavailable if a party is on hold).

Switching Party

- While connected with multiple parties,

 (Group call) → Switch
- If connected party ends call in Conference Call, party on hold remains on-hold. To talk with party on hold, press → Answer to cancel hold.

Talking with All Parties

- While connected with multiple parties,

 (Group call) → Call to all
 - To talk with one party again, highlight one party → ☐ (Group call) → Call to this person.
- To end all calls, press (Group call) → Select *End all calls*.
- When one party ends the call during Conference Call, continue talking with remaining parties.

Call Barring

Bar outgoing/incoming Voice Calls or SMS by conditions listed below.

Item	Description	
Outgoing call		
Bar all outgoing calls	Disables calling or sending SMS to all but emergency numbers.	
Bar all international calls	Disables outgoing international calls and SMS.	
Bar international calls	Disables calling or sending SMS to numbers outside of Japan and the country where you are.	
Incoming call		
Bar all incoming calls	Blocks all incoming calls and SMS.	
Bar all roaming calls	Blocks all incoming international calls and SMS.	
	Bar all outgoing calls Bar all international calls Bar international calls coming call Bar all incoming calls	

- Setting Call Barring requires Center Access Code (Network Password) (four-digit number specified at subscription).
- If a call is placed while Call Barring is active, a message appears indicating that Call Barring is active. The message may appear after a while depending on service area.

Note

- If incorrect Center Access Code (Network Password) is entered three consecutive times, Call Barring is disabled. In this case, change Center Access Code (Network Password). For details, contact SoftBank Mobile Customer Center, General Information (©P.14-29).
- If Call Forwarding or Voicemail is active, Bar all outgoing calls and Bar All incoming calls cannot be set (Optional Services override Call Barring settings).

Restricting Outgoing/Incoming Calls

Bar outgoing/incoming calls/transmissions by type (Voice Calls or SMS).

- → Settings → Call settings →
 Optional services → Call barring
- Select a restriction type
 - For Outgoing Calls

 Outgoing call → Bar all outgoing

 calls, Bar all international calls, or Bar

 international calls
 - For Incoming Calls

 Incoming call → Bar all incoming calls

 or Bar all roaming calls
- 3 On or Off
- 4 Enter Network Password →

 (OK)

Canceling All Barring

Cancel all barring for outgoing or incoming calls.

- **1** → Settings → Call settings → Optional services → Call barring
- Cancel all barring
- 3 Enter Network Password →
 (OK) → Yes

Checking Call Barring Status

- ① → Settings → Call settings → Optional services → Call barring
- Question 2 All outgoing calls, All international calls, International calls, All incoming calls or All roaming calls

Advanced

₹ Settings

- Activate/Cancel Outgoing Call Barring (P.13-7)
- Cancel All Call Barring (P.13-7)

Caller ID

Show/hide your own phone number.

Showing & Hiding Caller ID

- On or Off
- After 1, select Get status to confirm current setting.
- Regardless of *Caller ID* setting, you can show/ hide your phone number every time you place a call (◆P.3-18).

Advanced

₹ Settings

Advanced Settings

Voice Call

Saving Entered Phone Number to Phone Book
Enter a phone number including area code → 😭

→ Add to Phonebook → (♠P.2-19 Entering & Saving
Phone Number)

Sending New Message to Entered Number
Enter a phone number → 🐨 → Create message
→ S! Mail or SMS → (♠P.4-4 S! Mail ⑤, P.4-5 SMS
⑥)

Showing/Hiding Your Number for a Call
Enter a phone number including area code → 🖾

- To Hide Your Own Number $Hide\ my\ ID \rightarrow \bigcirc / \bigcirc (\bigcirc \bigcirc)$
- To Show Your Own Number Show my $ID \rightarrow \bigcirc / \bigcirc (\bigcirc \bigcirc)$
- · Otherwise, Caller ID setting applies.

Setting Mute

During a call, (Mute)

 During a call, press (Unmute) to switch to a normal call. Switching to Speakerphone

During a call, \blacksquare (\blacksquare) \rightarrow Yes

To cancel Speakerphone, press () during a call.

Talking in Low Voice

During a call, w → Whisper On

- With *Whisper On*, your voice is amplified on other party's phone.

Reducing Ambient Noise

During a call, \boxdot \rightarrow *Clear talk* \rightarrow *On*

Using Functions during Call
During a call,

™

- To Send Push Tones Send $DTMF \rightarrow \text{Enter digits} \rightarrow \bigcirc / \blacksquare \text{ (Send)}$
- To Search Phone Book during Call

 Phonebook → (◆ P.2-13 Entry Search ②)
- To View Call Log Records/Ranking Call log → (◆ P.3-8)
- To View Account Details

 Account details → (⑤ P.1-10)
- To View Message Menu Messaging → (�P.4-3)
- To View Calendar Calendar → (◆P.9-4)
- To View Memo

 Memo → (♠ P.9-8)

Call Log Records/Ranking

- If more than one phone number and mail address are saved in Phone Book with the call record, after

 (■ ■), select item → (● P.4-4 S! Mail ⑤).

Sending SMS from Call Log Records

• Alternatively, in Call Log/Ranking detail window, press → SMS → (♠P.4-5 SMS ⑤).

Viewing Phone Book Entry Details via Call Log

→ ♣ / ♣ / ♣ / ♣ / ₾ → Select/
Highlight a record → ♡ → View Phonebook

 Alternatively, in Call Log/Ranking detail window, press → View phonebook.

Adding Log Record Numbers to Phone Book

→ ♣ / ♣ / ♣ / ♣ / ੴ → Select/

Highlight record → ♥ → Add to Phonebook →

(◆P.2-13 Saving Entries from Call Log Records ④)

record $\rightarrow \mathbf{v} \rightarrow Add$ to black list $\rightarrow Yes$

• Alternatively, in Call Log/Ranking detail window, press \bigcirc \rightarrow *Add to black list*.

Hiding/Showing Ranking

 $Display \ setting \rightarrow Show \ ranking/Hide \ ranking$

Conference Call

Ending Selected Call

During Conference Call, highlight party $\rightarrow \square$ (Group call) \rightarrow *End this call*

Putting All Calls on Hold

During Conference Call, \square (Group call) \rightarrow *Hold all calls*

To cancel on-hold, press (Group call) → Call
to all.

Messaging

Messaging Basics	4-2
Customizing Mail Address	4-3
Creating/Sending Messages S! Mail SMS Graphic Mail	4-3 4-5
Incoming Messages	4-7
Viewing New Messages Retrieving Messages Manually Viewing from Message List Replying to Received Messages Forwarding Received Messages	4-7 4-8 4-9 4-10
Using Messages	
Using Message Information	
Locking/Unlocking Messages/Templates Deleting Messages/Templates	
Saving Attached Files to Data Folder	
Using Mail Group	
Managing Messages	4-14
Creating Folders	
Moving Messages	4-14
Sorting Messages	
Sorting Spam	4-15
Advanced Settings	
Sending S! Mail	
Sending SMS	
Sending Graphic Mail	
Received Messages	
Managing Folders	
managing rolacis	4-23



Messaging Basics

This handset supports S! Mail and SMS messaging. Learn how to send and manage text messages.

Use S! Mail to exchange long text messages with SoftBank and other E-mail compatible handsets, PCs and other mobile devices. Send Graphic Mail and media files via S! Mail.

Use SMS to exchange short text messages with SoftBank handsets.

Note

- S! Mail requires separate subscription.
- Maximum message size is increased to 2 MB. Sending messages might incur high Packet Communication charges depending on message size and your subscription.
- Messages created on handset may not appear on other party's handset correctly.
- Received Hangul messages are viewable.
- Hangul may be deleted from sent message or appear as spaces on other party's handset.
- Send message containing Hangul via E-mail; Hangul may be deleted even if message is sent to Hangul compatible mobile phone.

		S! Mail ¹	SMS
Entry Items			
	Address	0	0
	Subject	0	×
	Attachment	0	×
	Text	0	0
Character Limit		Up to 15,000 double-byte characters, or up to 30,000 single-byte characters (30 KB) ²	Up to 70 single-/double-byte characters, or up to 160 single-byte alphanumeric ³
Recipient		SoftBank mobile phones, other E-mail compatible mobile phones, PCs	SoftBank handset
Contents		Long text message, image, sound, Graphic Mail, and Feeling Mail ⁴	Short text message Transmit text, Pictograms, and Symbols, etc.

¹Maximum message size is 2 MB including address, subject, message text, attachments, etc. (this applies to replay and forward S! Mail messages). Change the limit for sending message size to 300 KB.

²Limit for text entry varies with attachment size, etc.

³When *Char-code* is set to *GSM 7 bit* (♠P.13-14).

⁴Exchange Feeling Mail only with compatible handsets.

Customizing Mail Address

Change the alphanumerics before the @ in the address (account name).

Default: Account name consists of random alphanumerics.

For details, see SoftBank Mobile Website (http://mb.softbank.ip/en/).

Customizing mail address may help reduce spam.

- English → Follow onscreen instructions
 - After customizing mail address, SoftBank sends a confirmation message.

Advanced

4 Settings

Customize/Change Handset Mail Address (P.13-11)

Creating/Sending Messages

Drafts and sent messages are saved in different folders.

Sent messages appear in Sent msg. and drafts in Drafts.

Create and send S! Mail/SMS, Graphic Mail, and attach files.

S! Mail

Note

- Sending messages might incur high Packet Communication charges depending on message size and your subscription.
 Set Max creation size to 300KB to limit message size (◆P.13-13).
- Messages containing Hangul characters or attachments with Hangul characters are converted to UTF-8 character encoding. Character encoding remains as UTF-8 even if Hangul characters are deleted from message. If character encoding is UTF-8, Graphic Mail and Auto art will be unavailable.
- If Hangul characters are entered in a message containing Japanese characters, Japanese characters in message are converted to UTF-8 character encoding, and character count of Japanese characters increases by 1.5 times. If character count exceeds limit, Hangul characters cannot be entered.

- Hangul characters are viewable only when other party uses Hangul compatible mobile phone.
- Enter phone number in Recipient to send S! Mail containing Hangul characters. If mail address is entered, Hangul characters will not be viewable.
- For Graphic Mail:
- If text to be inserted (Notepad, Phone Book, etc.) contains Hangul characters, Hangul characters will be deleted.
- If attachment file name is Hangul, file name will be converted to nonamexx (xx is number).
- If part of attachment file name is Hangul, Hangul characters will be deleted.

Sending S! Mail





 \square \rightarrow Create new

 Alternatively, in Standby, press
 ☐ for 1 + seconds to open Message creation window.



S! Mail Creation Window

- Select Recipient field
- From phonebook → Search and select Phone Book entry (€P.2-13)
 - Press

 (Multiple) to select multiple addresses from Phone Book at once
- Select number or address
- Select Subject field → Enter subject
- Select Attach field, when attaching files to message (SP.4-4)
- Select Enter Text field → Enter text

- Send S! Mail from From history/From mail group/Enter number/Enter address (\$P.4-16).
- Enter SoftBank handset numbers or mail addresses in Recipient field. Add up to 20 recipients.
- If (SEAR) is pressed with address, subject or text entered or a file attached, an exit confirmation appears. Choose Yes to save to Draft and exit. Choose No to exit. Select Cancel to return to Message creation window.
- If 🕝 is pressed with address, subject or text entered or a file attached, an exit confirmation appears. Choose **Yes** to exit. Choose **No** to return to Message creation window.
- Sent message is saved in Sent msg. or Unsent msg. If Auto delete (♠P.13-12) is On (Except protected) and memory is full, the oldest sent messages are deleted automatically (except protected ones) to make room for new ones. If Unsent msg. is full or messages cannot be deleted automatically, memory full confirmation appears. Delete items and then send message.
- During message creation, message size appears next to Create msg in Message creation window.

Attaching Files

Attach media files directly, or Phone Book/Calendar/ Tasks entries or Account Details as vcf file or vcs file Send messages up to 2 MB (including address, subject and text). If message size exceeds Max creation size (SP.13-13), attached image size is changed automatically. Alternatively, if message size exceeds Picture auto resize, attached image size changes automatically. Changing its size temporarily is available (♦P.4-18).

Attach up to 20 files per S! Mail message.

Note

- Some attachments may be lost depending on recipient's handset status. For supported file types, see SoftBank Mobile Website (http://www.softbank.jp).
- When attaching video, select a file recorded in Video (♦P.6-8). If file is incompatible, a warning appears.
- \square \rightarrow Create new \rightarrow Select Attach field
- Attach file
 - To Attach Data Folder Files Data Folder → Select a file location → Select a file
 - To Attach Images Captured by Camera Take photo → Capture still image → (Save)
 - To Attach Video Recorded by Camera Record video → Record video

- To Attach Phone Book Entries (vcf file) Phonebook details → Search and check entry (\bigcirc P.2-13) $\rightarrow \square$ (Add)
- To Attach Calendar/Tasks Entries (vcs file)

Calendar item → Select tab menu

- → Schedule or Tasks → Highlight file → (Attach)
- To attach multiple files, select Calendar $item \rightarrow \bigcirc \longrightarrow Multiple \rightarrow Check items$ → M (Add).
- To Attach Memo Saved as VNT Format $Notepad \rightarrow Highlight file \rightarrow \blacksquare$ (Select)
 - To attach multiple files, select Notepad (Add).
- To Attach Account Details
- To add files, select Attach field $\rightarrow (\Sigma) \rightarrow Add$ file, and repeat 2.
- When files are attached, file type indicators and file names appear in Attached file list.



: vcs file



: Sound



: Other

Advanced


Advanced Settings P.4-16

- Adding Address
- Removing Address
- Removing Attached File
- Inserting Information into S! Mail Messages
- Moving Cursor to Top/End of Text
- Adding Words to Dictionary (Japanese)
- Setting Conversion
- Saving to Drafts
- Sending Feeling Mail
- Resetting Feeling Setting
- Setting Message Actions
- Using Template to Create S! Mail
- Viewing Graphic Mail
- Saving Graphic Mail as Template

₹ Settings

- Change Message Text Font Size (P.13-6)
- Reguest/Cancel Delivery Report (P.13-11)
- Ouote Text from Received Message (P.13-11)
- Select Reply Setting (P.13-11)
- Set "Reply to" Address (P.13-11)
- Show/Hide Transmission Progress Bar (P.13-11)
- Change Font Size (P.13-12)
- Set/Cancel Auto Delete for Sent Messages When Sent Memory is Full (P.13-12)
- Set Max Creation Size (P.13-13)
- Set Message Sending Priority (P.13-13)
- Set Picture Auto Resize (P.13-13)
- Insert/Hide Signature (P.13-14)
- Edit Signature (P.13-14)

SMS

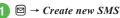



SMS Creation Window

- Select Recipient field
- From phonebook → Search and select entry (€P.2-13)
- Select a phone number
- Select Enter Text field → Enter text
- Enter SoftBank handset numbers in Recipient field. Add up to 20 Recipients.
- When entered text exceeds entry limit (♠P.4-2), S! Mail conversion confirmation appears. Choose Yes to switch to S! Mail. When Hangul text is included, Hangul characters will be converted to UTF-8 character encoding.

• Sent message is saved in Sent msg. or Unsent msg. If *Auto delete* (♠P.13-12) is *On (Except protected)* and memory is full, the oldest sent messages are deleted automatically (except protected ones) to make room for new ones. If Unsent msg. is full or messages cannot be deleted automatically, memory full confirmation appears. Delete items and then send message.

Advanced

Advanced Settings P.4-19

- Adding Recipient
- Deleting Recipient
- Inserting Information into SMS
- Adding Words to Dictionary (Japanese)
- Setting Conversion
- Saving SMS to Drafts
- Converting SMS to S! Mail
- Deleting All Text

₹ Settings

- Request/Cancel Delivery Report (

 P.13-11)
- Show/Hide Transmission Progress Bar (P.13-11)
- Set Mail Service Center Message Expiry Time (P.13-14)
- Set Message Center Number (P.13-14)
- Change Character Code (P.13-14)

Graphic Mail

Creating Graphic Mail

Note

- Message with Hangul characters cannot be converted to Graphic Mail.
- For Graphic Mail, Hangul characters are unavailable. If text to be inserted (Notepad, Phone Book, etc.) contains Hangul characters, Hangul characters will be deleted.

Examples:

- · Changing font size and background color.
- Inserting image and pictograms in Data Folder.
- Scrolling characters to the left and the right.
- For other items, see "Sending S! Mail" (�P.4-16).
- ② ☑ → Graphic Mail (Hold: Send Key)



Graphic Mail Creation Window

- 3 Font Size → Large, Standard, or Small → Enter text
 - To continue, press (Decorate).
 - \bigcirc (Decorate) → *Background color*
 - Select a background color
- 6 (Decorate) → *Image*
- **7** Pictures → Select a file
- To insert image, select Mail art.
 - If Memory Card is inserted, select from Digital Camera folder.
 - To capture image to insert, select Camera.
- 8 \square (Decorate) \rightarrow My Pict.
 - → Select a pictogram → (SLEAR)
- (9) ☑ (Decorate) → ☑ (Select area) →

 Move cursor to the first character
 - → \blacksquare (Start) → Move cursor to the last character → \blacksquare (End) → *Effect*
- 10 Scrolling
- 🕧 Right to left
- In Graphic Mail creation window, select *Undo* to reverse most recent change.
- In Graphic Mail creation window, select Cancel

 Yes to cancel all graphic settings and return to
 text entry window.

Decorate S! Mail with Auto Art

- Select Enter Text field → Enter text
- 3 楽デコ
- Select Auto Art with
 (Next) →
 (OK)

Incoming Messages

Retrieve complete S! Mail messages automatically or manually.

Auto download: Mail Service Center sends complete S! Mail messages and attachments to handset. Manual retrieval: Mail Service Center sends S! Mail Notice.

Retrieve complete message as required. Learn how to receive, confirm, reply to, or forward text messages.

Note

- Receiving messages might incur high Packet Communication charges depending on message size and your subscription. Set receiving options → *Auto receiving* to *Off* to receive part of message (⊗P.13-13). Select message to receive whole message.
- Forwarding/reusing messages containing Hangul characters causes them to be converted into UTF-8 character encoding. Character encoding remains as UTF-8 even if Hangul characters are deleted from message. If character encoding is UTF-8, Graphic Mail will be unavailable.

Viewing New Messages

When receiving new messages, in Standby, notification appears.

Note

- Default: Handset retrieves complete S!
 Mail messages, including attachments.
 Depending on your contract, retrieval may incur charges. Set Manual Retrieval (◆P.4-8).
- Default: Receiving options → Auto receiving to On (Up to 1MB)|On (Up to 300KB)

Handset automatically retrieves complete S! Mail messages, including attachments. Set *Auto receiving* to *Off* to receive part of message (⊕P.13-13).

Select message to receive whole message.

1 Select notification

 If messages are received out of Standby, sender numbers or mail addresses (names if saved in Phone Book), etc. scroll across Display top. Afterward appears (◆P.1-3, P.13-11).



Information Window (Received Messages)

View message



Message Window (S! Mail)

- When a file is attached, a file name and thumbnail appear at the bottom of the message.
- When a Delivery Report arrives, 🗟 flashes and disappears. In Standby, a notification appears.
- Received message is saved in Received msg. If
 Auto delete (♠P.13-12) is On (Except protected)/
 On (Only read) and memory is full, messages are
 automatically deleted starting first with the oldest
 to make room for new ones. However, if Auto
 delete is On (Except protected), protected
 messages are not deleted. If messages cannot
 be deleted automatically, confirmation appears.
 Delete messages and retry.

Retrieving Messages Manually

When *Receiving options* → *Auto receiving* (�P.13-13) is set to *Off*, S! Mail is temporarily stored on Mail Server; part of the received message is sent to handset as a reception notification. Retrieve complete



 \square \rightarrow Received msg.

messages from Mail Server.



Select a folder → Select a notification



- Retrieve mail
 - If Max receiving size is set to 2MB and received message exceeds 300KB, confirmation appears. Select Within 300KB/Maximum

Message List Indicators
 Unread Message Notification

Riority high

: Priority standard

Priority low

Read Message Notification

🛂 : Priority high

: Priority standard

: Priority low

Viewing from Message List

View messages from Received msg., Drafts, Sent msg., or Unsent msg.



Mail Folder List Window (Received Message)

Select a message



Message List Window (Received Messages)

- Secret folders do not appear when Security →
 Secret mode is set to Hide. To show secret
 folders, press → Unlock temporarily
 → Enter Phone Password → (OK).
- In Message list window, use to scroll. Use to select phone number in message → □ (Select).
- In Message window, press (***) / (#**) for next/ previous message.
- No Messages appears, when there are no messages in Received msg., Drafts, Sent msg., or Unsent msg. folders.

Message List

These indicators appear in message lists.

Received Message Indicators

Γ	Description Icon		on
L	Description	Unread	Read
٧	Vhile Receiving S! Mail	€<	
S	! Mail		
	Priority high	N N	
	Priority standard	$\boxtimes \boxtimes$	
	Priority low	N N	
	Media file inserted		
Ν	Message Notification		
	Priority high		
	Priority standard		
	Priority low		
SMS			
	Saved to Phone		
	USIM Card SMS		

• Draft Message Indicators

Description	Icon
S! Mail	\bowtie
Media file inserted	⊠ 🔀
SMS	

· Unsent Message Indicators

	Description	lcon
S	! Mail	
	S! Mail	
	Media file inserted	E
	Resending	×
S	MS	
	SMS	
	USIM Card SMS	

Sent Message Indicators

	Description	lcon	
S	! Mail		
	S! Mail	$\boxtimes \coprod$	
	Media file inserted		
S	SMS		
	SMS		
	USIM Card SMS		
Delivery Report			
	Unread S! Mail		
	Unread SMS		

 If Security
 — Secret is set to Hide, and in Phone Book, Secret is set to On, only number or address appears for sent/received messages to/ from secret entries

Replying to Received Messages

- Select a folder → Highlight message →

 (Reply) to replay
- 3 Create a message (♦P.4-4 S! Mail ⑤)
- Reuse received message to reply (�P.13-11).
- Re: appears in Subject field automatically.
- To send to all recipients, press \bigcirc \rightarrow *Reply to all* at \bigcirc .

(History)/SMS/SMS (History).

- \rightarrow Reply/Reply to all \rightarrow S! Mail/S! Mail
- To reply with a preset template (◆P.4-21), press (Hold: Quick) for 1 + seconds → Select a template.

Forwarding Received Messages

- 2 Select a message $\rightarrow \boxdot \rightarrow Forward$
- 3 Create a message (♦P.4-4 S! Mail 2)
- Fw: appears in Subject field automatically.
- To forward received SMS, select S! Mail or SMS.

Advanced

• Advanced Settings P.4-21

- Retrieving Part of Received Message
- Forwarding Reception Notification/Server Mail
- Calling Sender
- Deleting Server Mail via Notification

₹ Settings

- Change Message Text Font Size (P.13-6)
- Change Quick Reply Message (P.13-11)
- Set Received Message Notice Content/Hide Notice (P.13-11)
- Link External Light to Incoming Feeling Mail (P.13-11)
- Link External Light Color to Incoming Feeling Mail (P.13-12)
- Set Whether to Sound Handset When Feeling Mail Arrives (P.13-12)
- Link Ringtone to Incoming Feeling Mail (P.13-12)
- Set Feeling Mail Ringtone Duration (P.13-12)
- Change Font Size (P.13-12)
- Change Scroll Unit (P.13-12)
- Set Max Receiving Size (P.13-13)
- Set Auto Receiving Condition (P.13-13)
- Edit Auto Receiving Condition (P.13-14)
- Set Attached Image Appearance (P.13-14)
- Set Attached Image Auto Playback (P.13-14)
- Set Attached Sound Auto Playback (P.13-14)

Using Messages

Handset automatically sorts messages into five folders by type.

Folder	Message Type
Received msg.	Received messages are saved
Drafts	Incomplete messages are saved
Templates	Created templates are saved
Sent msg.	Sent messages are saved
Unsent msg.	Failed/Canceled/Outgoing messages are saved

Using Message Information

In Message creation window, highlight sender, recipient, phone number or mail address to save to Phone Book, place a call, send message, etc.

Saving to Phone Book

- 2 Save a number to Phone Book
 - To Save as a New Entry $New \rightarrow (\bigcirc P.2-12 \text{ Creating New Entries } \bigcirc 2)$
 - To Update Existing Entry

 Update → Search and select entry (�P.2-13)

 → Save a number to Phone Book (�P.2-12)

Saving to Bookmark

- Select Title field → Enter a title
- (Save)

Using Page Links

Use sender's address, phone number, mail address, or URL embedded in message text window.

- Use linked information
 - To Place a Voice Call
 Select a phone number → Voice call
 - To Edit a Number before Call
 Select a phone number → Edit before call
 - To Send a Message
 Select a phone number or a mail address

 → S! Mail/SMS as required (◆P.4-4 S! Mail

 ⑤, P.4-5 SMS ⑥
 - To Access the Internet
 Select URL → Open Yahoo! Keitai/Open
 PC site browser
- To message to a phone number, select S! Mail or SMS then create message.

Locking/Unlocking Messages/Templates

Lock a message/template or all messages in a folder. When deleting a locked message, confirmation appears. Cancel lock to delete.

Locking/Unlocking Messages

- 2 Lock Message
 - To Lock a Message
 Highlight message → 🐨 → Lock/Unlock
 → Selected
 - To Lock Multiple Messages

 ② → Lock/Unlock → Multiple →
 Check messages → ② (Lock)

 Selecting all messages requires Phone
 - To Lock All Messages

 ¬ → Lock/Unlock → All

Locking/Unlocking Templates

Password entry.

Deleting Messages/Templates

Deleting Messages

Delete specified messages or all messages in message folder.

- 2 Delete Message
 - To Delete a Message
 Highlight message → 🐨 → Delete →
 Selected → Yes
 - - Selecting all messages requires Phone Password entry.
 - To Delete All Messages $\textcircled{r} \rightarrow Delete \rightarrow All \rightarrow \text{Enter Phone}$ Password $\rightarrow \blacksquare$ (OK) $\rightarrow Yes$

Deleting Templates

Delete specified templates or all saved templates.

- 2 Delete Templates
 - To Delete a Template
 Highlight a template $\rightarrow \bigcirc \bigcirc \bigcirc \longrightarrow Delete$ $\rightarrow Selected \rightarrow \bigvee \bigcirc \bigcirc \bigcirc$
 - To Delete Multiple Templates

 □ → Delete → Multiple → Check
 templates → □ (Delete) → Yes

 Selecting all messages requires Phone

Password entry.

• If protected messages or templates are included in the specified messages, a confirmation appears.

Saving Attached Files to Data Folder

- - \rightarrow Select folder \rightarrow Select message
- - To Save Items

Items → Check files → \square (Save) → Select item

- If file being saved is an image file, select Save to Pictures/Save To Pictograms/ Save To Mail art.
- If file being saved is a music file, select Save To Ring Songs · Tones/Save to Music.
- To Save All My Pictograms

 All My Pictograms
- To Save Received Graphic Mail as Template

As template → Enter template name

• If files with same name exist, file name is renamed automatically.

Using Mail Group

Use Mail Group to send messages at once.

Creating Mail Group

- → Phone → Mail group → (New)
- 2 Enter group name → Select group name → (Add)
- 3 Search and select Phone Book entry (◆P.2-13)

Sending Message to Mail Group

- 1 → Phone → Mail group
- 2 Highlight Mail Group → ☑ (☑)
 → Create message (�P.4-4 S! Mail 5)
 - To send to a selected member in the group, select group → ■ (図).

Advanced

• Advanced Settings P.4-22

- Changing Mail Group Name
- Deleting Mail Group
- Viewing Sender & Recipient
- Copying Message Content
- Deleting Message
- Setting Character Code
- Reporting Received Message as Spam
- Moving to Top/Bottom of the Message
- Viewing Mail/Template Details
- Sorting Messages
- Set/Unset Message Flag
- Changing Messages to Read/Unread
- Moving SMS Message to Handset/USIM Card
- Viewing Delivery Report
- Canceling Sent Messages
- Sending Unsent Messages after Editing
- Viewing Error Details for Unsent Message
- Sending Saved Template via S! Mail
- Moving Template
- Copying Template
- Sorting Template
- Managing Template
- Forwarding Server Mail
- Deleting Mail List Messages

₹ Settings

- Set/Cancel Auto Delete for Received Messages When Received Memory is Full (P.13-12)
- Set/Cancel Auto Delete for Sent Messages When Sent Memory is Full (P.13-12)

Managing Messages

Create folders in *Received msg.* or *Sent msg.*, or set rules to each folder to sort messages automatically.

Set security to created folders. Received msg. and Sent msg. folder cannot be deleted and settings cannot be changed.

In received message lists, set flag to show/hide the flag. Messages can be sorted by flag status.

Creating Folders

- 3 Edit folder name
 - New folder appears at bottom of list.
 - Even if folders with same name exist, notification does not appear.
- 4 If a confirmation appears, Yes/No
 - If Yes, see (♦P.4-14 Sorting Messages ③).

Moving Messages

- Move Message
 - To Move a Message
 Highlight message → 🖅 → Move to folder → Selected

 - To Move All Messages $(x) \rightarrow Move \text{ to folder } \rightarrow All$
- Select a destination folder
 - If moving a message, move confirmation appears, Yes/No.
- Received messages are saved to Received msg. folder, and sent messages are saved to Sent msg. folder. To move back to the original folder after moving messages to another folder, operate and select original folder.

Sorting Messages

Automatically sort sent/received messages to specified folder by number or address, etc. Sort messages by S! Mail subject or SMS text. Set up to 20 rules per folder.

- 2 Highlight folder → 🗹 → Auto sort
 - To add a sorting rule for selected folder, press → Add rule.
- 3 Set sorting rule
 - To Select Phone Number/Mail Address from Phone Book

Sender (for some windows, Recipient)

→ From phonebook → Search and select
entry (�P.2-13) → Select phone number or mail
address

■ To Select Phone Number/Mail Address from History

Sender (for some windows, Recipient)

→ From history → Select tab menu →
Sent/Received → Select a history

■ To Select Phone Number/Mail Address from Group in Phone Book

Sender (for some windows, Recipient)

- → From group → Select a group
- Groups saved on USIM Card cannot be set as a rule.


■ To Enter Phone Number/Mail Address Directly

Sender or Sender (Partial match) (for some windows, Recipient) → (Enter number or Enter address when Sender (for some windows, Recipient) is selected) → Enter phone number or mail address

- To Select a Rule from Text Subject → Enter text to set as a rule
- 4 YeslNo
 - Choose Yes to sort messages in Received meg./Sent msg.
 - Choose No to sort only new messages.
- **6** 🖾 (OK)

Sorting Spam

Messages from unknown mobile address are allotted to *Spam folder* without notice.

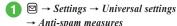

- 2 Enter Phone Password → (OK)
 - To Sort Unknown Address as Spam Unregistered → On
 - To Sort Message with Spam Filter Spam filter $\rightarrow On \rightarrow Spam$ filter $\rightarrow \boxdot$ (Edit) \rightarrow (if address already exists, in the list, $\boxdot \rightarrow Add$ filter) $\rightarrow Sender/Sender$ ($Partial match)/Subject <math>\rightarrow$ (\clubsuit P.4-14 Sorting Messages \circledcirc)
 - To Add Address to Permitted List

 Permitted list → On → Permitted list →

 (Edit) → (if address already exists, in the list, → Add filter) → Sender/Sender

 (Partial match)/Subject → (◆P.4-14 Sorting Messages ③)
 - Available only when *Spam filter*/ *Unregistered* is *On*.

Advanced

• Advanced Settings P.4-25

- Changing Folder Name
- Setting Secret to Folder
- Viewing Message/Folder Details
- Deleting Folders
- Changing Sorting Rules
- Deleting Sorting Rules

⊀ Settings

- Change Sent Message View (P.13-12)
- Sort Unregistered Mobile Address as Spam (P.13-12)
- Sort Message with Spam Filter (P.13-13)
- Add Address to Permitted List (
 P.13-13)
- Set Address for Report Spam (
 P.13-13)
- Select Save Location for Message (P.13-13)

Advanced Settings

Sending S! Mail

Specifying Recipient without Phone Book
In S! Mail creation window, select Recipient field

- To Enter Address from History Records

 From history → Select tab menu → Sent or

 Received → Select a record
- To Select from Mail Group

 From mail group → Select Mail Group
- To Enter Phone Number Directly

 Enter number → Enter phone number
- To Enter Mail Address Directly

 Enter address → Enter mail address

Adding Address

In S! Mail creation window, select Recipient field $\rightarrow [\Sigma] \rightarrow Add \ recipients$

- To Select from Phone Book

 From phonebook → Search and select entry

 (�P.2-13) → Select phone number or mail address
- To Enter Address from History Records

 From history → Select tab menu → Sent or

 Received → Select a record
- To Select from Mail Group

 From mail group → Select Mail Group
- To Enter Phone Number

 Enter number → Enter phone number

■ To Enter Mail Address

Enter address → Enter mail address

 The number of addresses appears next to the Recipient field in S! Mail creation window.

Viewing History Details

Deleting Messaging History Records

In S! Mail creation window, select Recipient field → From history → Select tab menu → Sent or Received

- To Delete a Record

 Highlight record → 🖭 (Delete) → Selected
- To Delete Multiple Records

 ② (Delete) → Multiple → Check records → ②
 (Delete)
- To Delete All Records

Changing Address Type to To/Cc/Bcc

In S! Mail creation window, select Recipient field → Highlight recipient → 🖾 → Change to To/ Change to Cc/Change to Bcc

Removing Address

In S! Mail creation window, select Recipient field

■ To Remove a Recipient

Highlight recipient → 🖾 → Remove →

Selected

- To Remove Multiple Recipients
- To Remove All Recipients
 - $\Sigma \rightarrow Remove \rightarrow All \rightarrow Yes$

Viewing Attached File

In S! Mail creation window, select Attach field

→ Select a file

Removing Attached File

In S! Mail creation window, select Attach field

- To Remove an Attached File
 Highlight file $\rightarrow \bigcirc \longrightarrow Remove \rightarrow Selected$
- To Remove Multiple Attached Files
- To Remove All Attached Files
 - $Y \rightarrow Remove \rightarrow All \rightarrow Yes$

Inserting Information into S! Mail Messages

- To Insert Notepad

 Notepad → Select an item
- To Insert Barcode

 Bar code reader → (�P.9-9 Barcode/Scan ②)
- To Insert Phone Number from Phone Book

 Phonebook → Search and select entry (�P.2-13)

 → Select an item

- To Insert Account Details

 Account details → Select an item
- To Insert Signature Signature
- To Insert a Part of Mail Address

 Ouick address list → Select an item
- For Graphic Mail, Hangul characters are unavailable. If text to be inserted (Notepad, Phone Book, etc.) contains Hangul characters, Hangul characters will be deleted.

Moving Cursor to Top/End of Text

In S! Mail creation window, while creating message,

✓ Cursor position → Select an item

Select all Item

Adding Words to Dictionary (Japanese)

In S! Mail creation window, while creating message,

→ Add to dictionary → (♠P.2-11 Saving to User Dictionary ②)

Setting Conversion

In S! Mail creation window, while creating message, r \rightarrow *Settings*

- To Activate/Cancel Prediction Prediction → On/Off
- To Activate/Cancel Learning

 Learning → On/Off
- To Activate/Cancel Auto Capitalization

 Auto capitalization → On/Off
- To Activate/Cancel Flexible Search Flexible search → On/Off

■ To Reset Learning

Reset learning \rightarrow Enter Phone Password $\rightarrow \blacksquare$ (OK) \rightarrow **Yes**

- To Clear Records of Pictograms/Symbols Clear history → Yes
- To Change Font Size

 Font Size → Large/Standard/Small
- To Change Cursor Movement Speed

 Auto cursor → Off|Slow|Normal|Fast|Very
 fast

Saving to Drafts

In S! Mail creation window, \bigcirc \rightarrow Save to drafts

• Only messages with recipient, subject or text entered, or file attached can be saved.

Sending Feeling Mail

In S! Mail creation window, 🗹 → Feeling setting
→ Select a Feeling → Select pictogram

Resetting Feeling Setting

In S! Mail creation window, \boxdot \rightarrow **Reset feeling**

Setting Message Actions

In S! Mail creation window, \bigcirc \rightarrow *Action settings*

- To Set Whether to Delete Automatically after the Other Party Reads the Message Set auto delete → On/Off
- To Set Reply Request

 Reply request → On/Off → On
 - When On is set, select Edit message from Reply request to edit a message.

- To Restrict Message Forwarding Forward $NG \rightarrow On/Off \rightarrow On$
 - When *On* is set, select *Edit message* from *Forward NG* to edit a message.

■ To Restrict Message Deletion Delete NG → On/Off → On

- When On is set, select Edit message from Delete NG to edit a message.
- To Restrict Message Access with an Open Question

Quiz → On/Off → Open question → Select Question field → Enter question → Select Answer field → Enter answer → Select Message (Correct) field → Enter message when answer is correct → Select Message (Incorrect) field → Enter message when answer is incorrect → 🖾 (Done)

- To edit question, select Edit question.
- To Restrict Message Access with a Multiple Choice Question

Quiz → On/Off → Multiple choice question → Select Question field → Enter question → Highlight Answer field → 🖸 to select number → Select Example1 to 4 field to enter choices → Select Message (Correct) field → Enter message when answer is correct → Select Message (Incorrect) field → Enter message when answer is incorrect → 🖾 (Done)

- To edit question, select *Edit question*.
- When Action settings are set, the recipient's action can be set.

Changing Maximum Size of Message

In S! Mail creation window, \bigcirc \rightarrow **Sending** options \rightarrow Max creation size \rightarrow 2MB/300KB

- If image files exceeding specified sizes are attached, the image file will be automatically resized.
- When Sending options setting is changed to 300KB while a message is being created, and an image file exceeding 300KB is attached, a message will appear informing the user that changes cannot be made until the attached file is deleted.

Requesting S! Mail Delivery Report In SI Mail creation window Sendin

In S! Mail creation window, \bigcirc \rightarrow **Sending options** \rightarrow **Delivery report** \rightarrow **On** or **Off**

 Set On to receive a Delivery Report when a message is sent from the Mail Server to the other party. Set this option to message being created.

Setting Reply Settings

In S! Mail creation window, $\[\Sigma \] \rightarrow Sending$ options $\rightarrow Reply$ settings $\rightarrow On$ or Off

• Set the address in "Reply to" address (�P.13-11).

Setting Message Priority

In S! Mail creation window, **⑤** → **Sending options** → **Priority** → Select an item

Setting whether to Delete Message from Server after Remote Forwarding

In S! Mail creation window, $\textcircled{P} \rightarrow Sending$ options $\rightarrow Remote\ Fwd\ action \rightarrow Select\ an\ item$

• This function is available only when forwarding Server Mail message (◆P.4-25).

Using Template to Create S! Mail

In S! Mail creation window, \bigcirc \rightarrow *Launch template* \rightarrow Select a template

 If Subject or message is entered/file is inserted or attached/template is used, confirmation appears.
 Choose Yes to discard previous modifications and set up new template.

Sending S! Mail Automatically within Signal Area In S! Mail creation window, \boxdot \rightarrow **Send Reservation** \rightarrow **Within network** \rightarrow **Yes**

Setting Delivery Time

In S! Mail creation window, $\textcircled{P} \rightarrow \textbf{Send Reservation} \rightarrow \textbf{Date \& time} \rightarrow \text{In Reserved date field, enter reserved date} \rightarrow \text{In Reserved time field, enter reserved time} \rightarrow \textcircled{1} (OK) \rightarrow \textbf{Yes}$

Changing Text Color

In Graphic Mail creation window, $Font\ color \rightarrow$ Select a color \rightarrow Enter text

Blinking Text

In Graphic Mail creation window, $Effect \rightarrow Blink \rightarrow On \rightarrow Enter text$

 To enter normal text subsequently, in Graphic Mail creation window, select Effect → Blink → Off → Enter text.

Aligning Text

In Graphic Mail creation window, $Effect \rightarrow Align \rightarrow Select$ an item \rightarrow Enter text

Inserting BGM/Line

In Graphic Mail creation window, Insert

- To Insert BGM from Data Folder

 BGM → Ring Songs · Tones or Music

 → Select a file
- To Record BGM to Insert

BGM → $Record\ sound$ → $Record\ sound$ (�P.9-13 Recording Sound ②) → \boxed{x} → $Add\ to\ message$

■ To Insert Line

Line

Canceling Inserted BGM

In Graphic Mail creation window with BGM, *Insert* → *Delete BGM*

Changing Entered Text Color/Size/Effect

In Graphic Mail creation window with text entered, P (Select area) \rightarrow Move cursor to the first character \rightarrow n (Start) \rightarrow Move cursor to the last character \rightarrow n (End)

■ To Change Font Color

Font Color → Select a color

■ To Change Font Size

Font Size → Select an item

■ To Change Effect

Effect → Select an effect → Select an item

■ To Cancel These Modifications *Undo*

Viewing Graphic Mail

In Graphic Mail creation window, while creating message, [\$\mathbb{r}] → **Preview**

Saving Graphic Mail as Template

In S! Mail creation window, \bigcirc \rightarrow *Save as template* \rightarrow Enter file name

• Available only when text is decorated (P.4-6).

Sending SMS

Specifying Recipient without Phone Book
In SMS creation window, select Recipient field

■ To Enter from History Records

From history → Select tab menu → **Sent** or **Received** → Select a log

■ To Select from Mail Group From mail group → Select Mail Group

■ To Enter Recipient Phone Number

Enter number → Enter phone number

Adding Recipient

In SMS creation window, select Recipient field $\rightarrow \boxed{\Sigma} \rightarrow Add \ recipients$

■ To Select from Phone Book

From phonebook → Search and select entry $(\clubsuit P.2-13)$ → Select phone number

■ To Enter from History Records

From history → Select tab menu → Sent or Received → Select a log

■ To Select from Mail Group From mail group → Select Mail Group

■ To Enter Phone Number

Enter number → Enter phone number

 The number of recipients appears next to the Recipient field in SMS creation window.

Viewing History Details

In SMS creation window, select Recipient field → From history → Select tab menu → Sent or Received → Highlight history → 🖾 (View)

Deleting Messaging History Records

In SMS creation window, select Recipient field → From history → Select tab menu → Sent or Received

■ To Delete a Record

■ To Delete Multiple Records

 $(Delete) \rightarrow Multiple \rightarrow Check records \rightarrow (Delete)$

■ To Delete All Records

(Delete) → All → Yes

Deleting Recipient

In SMS creation window, select Recipient field

■ To Delete a Recipient

Highlight recipient $\rightarrow \bigcirc Remove \rightarrow Selected$

■ To Delete Multiple Recipients

■ To Delete All Recipients

 $\Sigma \rightarrow Remove \rightarrow All \rightarrow Yes$

Inserting Information into SMS

In SMS creation window, while creating message,

∑ → Insert

■ To Insert Notepad

Notepad → Select an item

■ To Insert Barcode

Bar code reader → (♠ P.9-9 Barcode/Scan ②)

■ To Insert Phone Number from Phone Book

Phonebook → Search and select entry (�P.2-13)

→ Select an item

■ To Insert Account Details

Account details → Select an item

- To Insert Signature Signature
- To Insert a Part of Address

 Quick address list → Select an item

Adding Words to Dictionary (Japanese)

In SMS creation window, while creating message, \bigcirc \rightarrow *Add to dictionary* \rightarrow (\bigcirc P.2-11 Saving to User Dictionary \bigcirc 2)

Setting Conversion

In SMS creation window, while creating message, $rac{r}{} \rightarrow Settings$

- To Activate/Cancel Prediction

 Prediction → On/Off
- To Activate/Cancel Learning

 Learning → On/Off

- To Activate/Cancel Auto Capitalization

 Auto capitalization → On/Off
- To Activate/Cancel Flexible Search Flexible search → On/Off
- To Reset Learning

Reset learning → Enter Phone Password → \blacksquare (OK) → **Yes**

- To Clear Records of Pictograms/Symbols

 Clear history → Yes
- To Change Font Size

 Font size → Large/Standard/Small
- To Change Cursor Movement Speed

 Auto cursor → Off|Slow|Normal|Fast|Very
 fast

Saving SMS to Drafts

In SMS creation window, $[v] \rightarrow Save \ to \ drafts$

Available only when either recipient or text is entered.

Converting SMS to S! Mail

In SMS creation window, \bigcirc \rightarrow *Change to S!*Mail \rightarrow *Yes*

 If SMS containing Hangul characters is converted to S! Mail, Graphic Mail will be unavailable.

Requesting SMS Delivery Report

In SMS creation window, \boxdot \rightarrow **Sending options**

- → Delivery report → On or Off
- Set On to receive a Delivery Report when a message is sent from the Message Center to the other party.
 Set this option to message being created.

Setting Mail Server Expiry Time

In SMS creation window, \bigcirc \rightarrow **Sending options** \rightarrow **Expiry time** \rightarrow Select an item

Deleting All Text

In SMS creation window, $\ \ \, \longrightarrow \ \,$ $Remove\ text \rightarrow \ \,$ Yes

Sending SMS Automatically within Signal Area

In SMS creation window, \bigcirc \rightarrow **Send Reservation** \rightarrow **Within network** \rightarrow **Yes**

Setting Delivery Time

In SMS creation window, $\textcircled{P} \rightarrow Send \ Reservation \rightarrow Date \& time \rightarrow \blacksquare$ (OK) $\rightarrow Yes$

Sending Graphic Mail

Setting Position to Add Auto Art

In S! Mail creation window, 楽デコ → 😢 (Settings) → *Pictogram* → *Inline+Sentence end/*Sentence end → 🔳 (OK) → 🖾 (Send)

• Enter message to add Auto art.

Setting Text Color/Text Size/Background Color In S! Mail creation window, 楽デコ → 🕑 (Settings)

- → Text color/Text size/Background color → On/Off → \blacksquare (OK) → \boxtimes (Send)
- · Enter message to add Auto art.

Changing Auto Art Theme

In S! Mail creation window, 楽デコ → 🗑 (Settings) → Select theme → Emotional character/Black & Simple/Normal → 🔳 (OK) → 🗐 (Send)

• Enter message to add Auto art.

Using Templates

 \square \rightarrow *Templates* \rightarrow Select template \rightarrow \blacksquare (Mail) \rightarrow Send message (\triangleright P.4-4 S! Mail \bigcirc 2)

Received Messages

Retrieving Messages Manually

 $\square \rightarrow Retrieve\ new$

Setting Display Size of Attached Image

 \boxtimes \rightarrow Received msg. \rightarrow Select folder \rightarrow Select message \rightarrow \boxtimes \rightarrow Settings \rightarrow Picture appearance \rightarrow Select an item

Retrieving Part of Received Message

 \square \rightarrow Received msg. \rightarrow Select folder

■ To Retrieve a Message

Highlight message $\rightarrow \bigcirc Partieve \ mail \rightarrow Selected$

■ To Retrieve Multiple Messages

■ To Retrieve All Messages

 $[x] \rightarrow Retrieve mail \rightarrow All$

 If Max receiving size is set to 2MB and received message exceeds 300KB, confirmation appears.
 Select Within 300KB/Maximum.

Forwarding Reception Notification/Server Mail

Calling Sender

 \square \rightarrow Received msg. \rightarrow Select folder \rightarrow Highlight message \rightarrow \square \rightarrow Call \rightarrow \square \wedge \square \wedge \square \wedge \square

• The sender should be logged as a phone number.

Deleting Server Mail via Notification

 \boxtimes \rightarrow Received msg. \rightarrow Select folder \rightarrow Select notification \rightarrow \boxtimes \rightarrow Delete \rightarrow Select an item \rightarrow Yes

Replying to a Message with a Predefined Template

→ Received msg. → Select folder → Select message → Press (Hold: Quick) for 1 + seconds → Select template

- After selecting a folder, highlight a message →
 Press (Mold: Quick) for 1 + seconds → Select
 predefined template.
- After template is selected, message will be sent.

Using/Managing Messages

Viewing Attachment

- To save a file other than image file to Data Folder before viewing, in Message window, select a file
 → Save. For image file, in Message window, select a file → (Save) → Save to Pictures/Save to Pictograms/Save to Mail art.
- To register attachment to vcf file or vcs file before viewing, in Message window, select a file — Register to Phonebook or Register to Calendar.
- If a file requiring Content Key is attached, a confirmation appears. To view the file, choose Yes and purchase or acquire Content Key.
- Select a file which allows play/view only once → Yes, a confirmation appears.

Changing Mail Group Name

- → *Phone* → *Mail group* → Highlight Group →
- $(\mathbf{r}) \rightarrow Rename\ group \rightarrow Enter\ Group\ name$

Deleting Mail Group

- \blacksquare \rightarrow Phone \rightarrow Mail group
- To Delete a Mail Group

 Highlight Mail Group → 🏵 → Delete →

 Selected → Yes
- To Delete All Mail Groups
- $[\Sigma] \rightarrow Delete \rightarrow All \rightarrow Yes$

Removing Member in Mail Group

- → Phone → Mail group → Select group
- To Remove a Member

Highlight member → 🖭 (Remove) → Selected

- **■** To Remove Multiple Members
- To Remove All Members
 - $(Remove) \rightarrow All \rightarrow Yes$

Viewing Sender & Recipient

 \boxtimes \rightarrow Received msg. or Sent msg. \rightarrow Select folder \rightarrow Select message \rightarrow \boxtimes \rightarrow View mail address

Copying Message Content

- \boxtimes \rightarrow *Received msg.* or *Sent msg.* \rightarrow Select folder \rightarrow Select message \rightarrow \boxdot \rightarrow *Copy*
- To Copy Sender/Recipient Address

 Address → Select address
- To Copy Subject

Subject → (♠P.2-15 Specifying Range to Copy/Cut)

■ To Copy Text

Message text → (�P.2-15 Specifying Range to Copy/Cut)

Deleting Message

- □ → Received msg., Sent msg. or Unsent msg.

 → Select folder as required → Select message →
- $\Sigma \rightarrow Delete \rightarrow Yes$

Setting Font Size

- \square \rightarrow *Received msg.*, *Sent msg.* or *Unsent msg.* \rightarrow Select folder as required \rightarrow Select message \rightarrow
- Σ \rightarrow **Settings** \rightarrow **Font size** \rightarrow Select an item

Changing Scroll Unit

- □ → Received msg., Sent msg. or Unsent msg.
 → Select folder as required → Select message →
 \(\begin{align*}
 \text{Settings} \rightarrow Scroll unit \rightarrow \text{Select an item}
 \)
- **Setting Character Code**

 \square \rightarrow Received msg. \rightarrow Select folder \rightarrow Select message \rightarrow \square \rightarrow Char-code \rightarrow Select an item

Reporting Received Message as Spam \square \rightarrow Received msg. \rightarrow Select folder \rightarrow Select message \rightarrow \square \rightarrow Report spam \rightarrow \square (Send)

Moving to Top/Bottom of the Message

 □ → Received msg., Sent msg. or Unsent msg.
 → Select folder as required → Select message →
 □ → Scroll jump → Select an item

Viewing Mail/Template Details

- \boxtimes \rightarrow Received msg., Templates or Sent msg. \rightarrow Select folder as required \rightarrow Select message or template \rightarrow \boxtimes \rightarrow Details

Sorting Messages

 \boxtimes \rightarrow *Received msg.*, *Drafts*, *Sent msg.* or *Unsent msg.* \rightarrow Select folder as required \rightarrow \boxtimes \rightarrow *Sort by* \rightarrow Select an item

- · Sort messages by following items.
 - By time (Time ↓ /Time ↑)
- By recipients/sender (Recipients/Sender)
- By read or unread messages (Read/Unread)
- By subject (Subject)
- By message size (Size)
- By attachment (Attach)
- By locked/unlocked message (Lock)
- By flag (Flag)
- When Recipients, Sender or Subject is selected, messages are sorted in order by single-byte symbol, single-byte number, single-byte alphabet, singlebyte Katakana, double-byte Hiragana, doublebyte Katakana, Hangul, Kanji, Pictograms, doublebyte number, double-byte symbol and double-byte alphabet. When Subject is selected, messages with Untitled appear first.

Set/Unset Message Flag

 \boxtimes \rightarrow Received msg. \rightarrow Select folder \rightarrow Highlight message \rightarrow \boxtimes \rightarrow Set flag (Press: 1key)/Unset flag (Press: 1key)

Changing Messages to Read/Unread

- To Change a Message to Read/Unread
 Highlight message → 🗑 → Switch to unread/
 Switch to read → Selected
- To Change Multiple Messages to Read/ Unread

 ∑ → Switch to unread/Switch to read →
 Multiple → Check messages →
 ဩ (Unread)/
 ဩ (Read)

- To Change All Messages
 - \searrow \rightarrow Switch to unread/Switch to read \rightarrow All
- · Setting toggles according to each selection.

Moving SMS Message to Handset/USIM Card

- \square \rightarrow Received msg., Sent msg. or Unsent msg. \rightarrow Select folder as required \rightarrow Highlight SMS \rightarrow \square
- → Move to USIM/Move to Phone
- The number of messages that can be saved varies according to the USIM Card.
- When moving received SMS messages in a personal folder to USIM Card, a confirmation appears.
 Choose Yes to move to USIM Card.

Sending Draft Message

- $\square \rightarrow Drafts \rightarrow Select message \rightarrow \square (Send)$

Editing & Sending Sent Messages

- \square \rightarrow Sent msg. \rightarrow Select folder \rightarrow Select message \rightarrow \square (Edit) \rightarrow (\bigcirc P.4-4 S! Mail \bigcirc P.4-5 SMS \bigcirc)

Viewing Delivery Report

 \boxtimes \rightarrow **Sent msg.** \rightarrow Select folder \rightarrow Select a message with **Delivery report** setting \rightarrow \boxtimes \rightarrow **Report**

Canceling Sent Messages

 \boxtimes \rightarrow Sent msg. \rightarrow Select folder \rightarrow Select message to cancel \rightarrow \boxtimes \rightarrow Set sent cancel \rightarrow Yes \rightarrow Let me cancel the mail transmitted sometime ago is sent

Sending Unsent Messages after Editing

 \square \rightarrow *Unsent msg.* \rightarrow Select message \rightarrow \square \rightarrow *Edit* \rightarrow (\bigcirc P.4-4 S! Mail \bigcirc P.4-5 SMS \bigcirc)

Alternatively, press
 □ → Unsent msg. →
 Highlight message → □ → Edit.

Resending Unsent Messages

 \square \rightarrow *Unsent msg.* \rightarrow Highlight message \rightarrow \square (Resend)

Viewing Error Details for Unsent Message

 \square \rightarrow *Unsent msg.* \rightarrow Highlight message \rightarrow \square \rightarrow *Error details*

Viewing Saved Template

Editing Saved Template

- → (Mail) → Select Enter text field
- \rightarrow Edit message \rightarrow \bigcirc \rightarrow Save as template \rightarrow Enter file name

Sending Saved Template via S! Mail

 \square \rightarrow *Templates* \rightarrow Select template \rightarrow \square \rightarrow Send via message → (�P.4-4 S! Mail 2)

Sending Template

- \square \rightarrow *Templates* \rightarrow Highlight templates \rightarrow \square
- To Send via Message Send \rightarrow Via message \rightarrow (\bigcirc P.4-4 S! Mail \bigcirc 2)
- To Send via Infrared Send \rightarrow Via infrared \rightarrow (\bigcirc P.12-3)

Moving Template

- To Move a Template Highlight template $\rightarrow \boxdot \rightarrow Move \rightarrow Selected$
- → Select a destination

■ To Move Multiple Templates

 $[\Sigma] \rightarrow Move \rightarrow Multiple \rightarrow Check templates$ → Move) → Select a destination

■ To Move All Templates

- $[\Sigma] \rightarrow Move \rightarrow All \rightarrow Select a destination$
- To create new folder, in moved folder, press 🗹 (Create) → Enter folder name.

. When Memory Card is inserted, select Phone or Memory card, then select a move destination folder.

Copying Template

■ To Copy a Template

Highlight template $\rightarrow \bigcirc \longrightarrow Copy \rightarrow Selected$ → Select a location to copy

■ To Copy Multiple Templates

 $[\Sigma] \rightarrow Copv \rightarrow Multiple \rightarrow Check templates \rightarrow$

■ To Copy All Templates

- $[\Sigma] \rightarrow Copv \rightarrow All \rightarrow Select a location to copv$
- To create new folder, in copied folder, press 🗹 (Create) → Enter a folder name.
- . When Memory Card is inserted, select Phone or Memory card, then select a copy destination folder.

Sorting Template

 $\square \rightarrow Templates \rightarrow \square \rightarrow Sort by \rightarrow Select an item$

Managing Template

- To Change Template Name Highlight template $\rightarrow \boxed{\Sigma} \rightarrow Manage$
 - → Rename → Enter name

■ To Create Folder

- [\text{\text{\$\pi\$}}] → Manage → Create folder → Enter folder name
- . When Memory Card is inserted, select save location

■ To Change Folder Name

Highlight folder $\rightarrow \bigcirc Manage \rightarrow Rename$ folder → Enter folder name

· When Memory Card is inserted, select save location.

■ To View Contents Key

- [Yr] → Manage → Content key info → Select Content Key
- To Purchase/Acquire Contents Key

Highlight template $\rightarrow \mathbf{v} \rightarrow \mathbf{Manage}$ → Download Content key

Viewing Server Mail

 \square \rightarrow Server mail \rightarrow Retrieve mail list \rightarrow If a confirmation appears, choose Yes

Updating Mail List

 \square \rightarrow Server mail \rightarrow Retrieve mail list → 🖾 (Update)

Receiving Mail List Message

■ To Receive a Message

Retrieve mail list \rightarrow If a confirmation appears. choose $Yes \rightarrow Highlight message \rightarrow \blacksquare$ (Get)

- Alternatively. Retrieve mail list → If a confirmation appears, choose $Yes \rightarrow Highlight$
- To Receive a Selected Message

Retrieve mail list \rightarrow If a confirmation appears. choose $Yes \rightarrow [v] \rightarrow Get \rightarrow Multiple \rightarrow Check$ messages → 🖾 (Get)

■ To Receive All Messages

Retrieve mail list \rightarrow If a confirmation appears, choose $Yes \rightarrow \textcircled{r} \rightarrow Get \rightarrow All$

Forwarding Server Mail

 $oxed{\boxtimes}$ o $Server\ mail$ o $Retrieve\ mail\ list$ o If a confirmation appears, choose Yes o Highlight message

- $\rightarrow \mathbb{R} \rightarrow Remote\ forward\ (\bigcirc P.4-4\ S!\ Mail\ \bigcirc)$
- Fw: appears in Subject field automatically.
- Set whether to delete message from Server after forwarding Server Mail message (♠ P.4-18 Setting whether to Delete Message from Server after Remote Forwarding).

Deleting All Server Mail

 \square \rightarrow Server mail \rightarrow Delete all \rightarrow Enter Phone Password \rightarrow \blacksquare (OK) \rightarrow Select item

Deleting Mail List Messages

riangleq o Server mail o Retrieve mail list o If a confirmation appears, choose Yes

■ To Delete a Message

■ To Delete Multiple Messages

■ To Delete All Messages

 \longrightarrow **Delete** \rightarrow **All** \rightarrow Enter Phone Password \rightarrow \bigcirc (OK) \rightarrow **Yes**

Viewing Server Mail Usage

• To update status, press (Update).

Viewing Memory Status

 $\square \rightarrow Memory status \rightarrow Select tab menu \rightarrow \square$ (Count) / \square (Size)

- Received msg., Drafts, Sent msg., Unsent msg. and SMS (USIM) memory appears.
- USIM Card SMS (USIM) appears in Count only.
- To delete contents of current item, select ☑ (Delete) (�P.11-12 Deleting Registered/Saved Data).

Managing Folders

Changing Folder Name

 \square \rightarrow *Received msg.* or *Sent msg.* \rightarrow Highlight folder \rightarrow \square \rightarrow *Rename* \rightarrow Enter name

Changing folder name for *Received* or *Sent folder* is unavailable.

Setting Secret to Folder

 \square \rightarrow Received msg., Sent msg. or Templates

- → Highlight folder → r → $Set/Unset\ secret$ → Enter Phone Password → n (OK) → If a
- → Enter Phone Password → \blacksquare (OK) → If a confirmation appears, press \blacksquare (OK)

Viewing Message/Folder Details

 \square \rightarrow Received msg., Sent msg. or Templates \rightarrow Highlight folder \rightarrow \square \rightarrow Details

Deleting Folders

 \boxtimes \rightarrow Received msg., Sent msg. or Templates \rightarrow Highlight folder \rightarrow \boxtimes \rightarrow Delete/Delete folder \rightarrow Enter Phone Password as required \rightarrow Yes

 Deleting Received folder and Sent folder folder are unavailable.

Changing Sorting Rules

 □ → Received msg. or Sent msg. → Highlight folder →
 □ → Auto Sort → Highlight rule →
 □ → Replace rule → (⑤ P.4-14 Sorting Messages ③)

Deleting Sorting Rules

 \boxtimes \to *Received msg.* or *Sent msg.* \to Highlight folder \to \boxtimes \to *Auto Sort*

■ To Delete a Rule

■ To Delete Multiple Rules

 \searrow \rightarrow **Delete** \rightarrow **Multiple** \rightarrow Check rules \rightarrow \bowtie (Delete)

■ To Delete All Rules

 $\boxed{\text{Yr}} \rightarrow Delete \rightarrow All \rightarrow Yes$

Internet Services


Internet Services	. 5-2
Web Certificates (SSL/TLS)	5-2
Opening Saved Pages	5-3
Yahoo! Keitai	. 5-3
Yahoo! Keitai Main Menu	5-3
Viewing Page from Yahoo! Keitai Menu List	5-3
Entering URL	
Entering URL from History	5-3
PC Site Browser	. 5-4
PC Site Browser Homepage	5-4
Entering URL	5-4
Entering URL from History	5-4
Page Operations	. 5-5
Selecting Menu	
Entering Text	5-5
Page Zoom	
Multi Page (Tab)	5-6
Buttons & Check Boxes	5-7
Bookmarks & Saved Pages	5-7
Saving Bookmarks	
Accessing Bookmarks	5-7
Saving Pages	5-8
Opening Saved Pages	5-8
RSS Feed	5-8
Registering RSS	
Viewing Update Information	
Updating RSS	5-9



dvanced Settings	5-9
Yahoo! Keitai/PC Site Browser	
Yahoo! Keitai	5-11
PC Site Browser	5-11
Page Operations	5-12
Bookmarks	
Saved Pages	5-14
RSS	

Internet Services

Access Mobile sites via Yahoo! Keitai or Internet sites via PC Site Browser. View Web page contents or download media files.

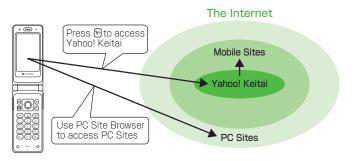

- In this guide, "Yahoo! Keitai" refers to SoftBank Mobile Internet portal and the service itself. "PC sites" are sites accessible via PC Site Browser. "Internet" refers to both Internet and Mobile Internet sites.
- Before using Internet, retrieve Network Information.

Note

- Separate subscription is required for Internet services.
- Internet connections incur Packet Communication charges.

Web Certificates (SSL/TLS)

Secure Sockets Layer (SSL) and Transport Layer Security (TLS) are encryption protocols for secure Internet transmissions of important/sensitive information (credit card numbers, etc.) and authentication.

Confirm electronic certificates saved on handset (�P.5-11).

Note

Using SSL/TLS

When a security notice appears, subscribers must decide for themselves whether or not to open a page.

Opening secure pages constitutes agreement to the terms of usage, SOFTBANK MOBILE Corp., Cybertrust Japan Co., Ltd., Furtust Japan Co., Ltd., GlobalSign K.K., RSA Security Inc. and SECOM Trust Systems Co., Ltd., COMODO Japan Inc. are not liable for the security of SSL/TLS. No liability is assumed for any damage associated with SSL/TLS use.

Opening Saved Pages

Retrieved Mobile Internet pages are temporarily saved in a cache. The cache remains even after a session ends or handset is turned off. When full, the oldest pages are automatically deleted to make room for new ones.

When a saved page is opened again, it may open from the Cache. For the latest content, reload the page.

- When another USIM Card is inserted, cache contents are automatically deleted.
- When a page with an expiry date is saved, the page is automatically deleted upon expiry.

Yahoo! Keitai

Use Yahoo! Keitai to view page contents or download image/music files.

Alternatively, access Yahoo! Keitai from Main menu, History, Bookmarks, Web search, or by entering URL.

Note

• When *Send referer* is set to *Not send*, pages may not open (**⊙** P.5-11).

Yahoo! Keitai Main Menu






Select an item

- When accessing Mobile site for the first time, a screen for Retrieving Network Information appears at ①. After the retrieval, website appears.
- To open PC Site Browser from Yahoo! Keitai, press

 → Switch to PC site browser → This page
 or Link → If a warning appears, select Yes.


Viewing Page from Yahoo! Keitai Menu List



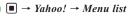

Entering URL



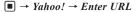

• Default: "http://" is set.

2 Enter URL

- Alternatively, in a page, press \boxdot \rightarrow *Enter URL* \rightarrow Enter URL.
- In URL field, URL for current page is entered.

Entering URL from History

Accessed URLs from Yahoo! Keitai are saved in Yahoo! Keitai History.

Access URL to save up to 50 URLs in History.



2 Select website

- To access last viewed page, press → Yahoo!
 → Last page.

Advanced

• Advanced Settings P.5-11

Moving to Main Menu

₹ Settings

- Show/Hide Manufacture Number (P.13-15)
- Send/Hide Referrer (P.13-15)
- Select Cookie Setting (

 P.13-15)
- Select Script Setting (
 P.13-15)
- Confirm Root Certificate (P.13-16)
- Set Certificate Retention Period (P.13-16)
- Show/Hide Secure Prompt (P.13-16)
- Initialize Browser (P.13-16)
- Reset Settings (P.13-16)

PC Site Browser

Use PC Site Browser to view page contents or download image/music files from PC sites.

Alternatively, access PC Site Browser from Homepage, History, Bookmarks, Web search, or by entering URL.

Note

- When *Send referer* is set to *Not send*, pages may not open (◆P.5-11).
- Viewing rich contents sites may incur high Packet Communication charges.

PC Site Browser Homepage

- **1** → Yahoo! → PC site browser → Homepage
 - If a warning appears, select Yes/No.

Select an item

- Activate PC Site Browser, 🗐 appears.
- In PC Site Browser, only document files can be downloaded.
- · Some sites may not appear correctly.
- To open Yahoo! Keitai from PC Site Browser, press

 → Switch to Yahoo! Keitai → This page!

 Link,

Entering URL

- 1 → Yahoo! → PC site browser → Enter URL
 - Default: "http://" is set.

Enter URL

- If a warning appears, select Yes/No.
- Alternatively, in a page, press $\textcircled{r} \rightarrow \textit{Enter URL} \rightarrow$ Enter URL.
- In URL field, URL for current page is entered.

Entering URL from History

Accessed URLs from PC Site Browser are saved in History.

Access URL to save up to 50 URLs in History.

- 1 → Yahoo! → PC site browser → History
- Select website
 - If a warning appears, select Yes/No.
- To access last viewed page, press → Yahoo!
- \rightarrow PC site browser \rightarrow Last page.

Advanced

Advanced Settings P.5-11

- Moving to Top/Bottom of Page
- Opening Homepage
- Changing Page Layout

₹ Settings

- Delete Cache/Cookie/Certificates (P.13-16)
- Show/Hide Manufacture Number (P.13-17)
- Send/Hide Referrer (P.13-17)
- Select Cookie Setting (

 P.13-17)
- Select Script Setting (P.13-17)
- Confirm Root Certificate (P.13-17)
- Set Certificate Retention Period (P.13-17)
- Show/Hide Secure Prompt (P.13-17)
- Show/Hide Warning (P.13-17)
- Silowiffide Walfilling (the 1.15-1
- Initialize Browser (P.13-17)
- Reset Settings (P.13-17)

Page Operations

Zoom in/out text and images shown in page. Alternatively, select menu to link page, set function with radio button.

Selecting Menu

- 🚹 🗖 / 👤 to scroll up or down
 - When a horizontal scroll bar appears, use <a> / D to scroll to the left or the right.
- 2 Highlight menu → (Select)



Yahoo! Keitai Top Page

- Press (Back) (with no previous page, you are prompted to close Internet connection. Choose Yes to close it.
- Press (Back) / (SEAR) to return previous page.
- ullet Highlight link ullet (Select) to move to page.
- Press → Next to return to the page viewed before pressing (Back) / (CLEAN).
- Press (##) for 1 + seconds to mute BGM in page.

Entering Text

- Select Text field
- 2 Enter text



Note

• Text entry and item selection varies by page.

Page Zoom

- 1 ☑ → Manage content → Zoom in/



Multi Page (Tab)

Use tabs at the top of Display to view pages. Open up to three pages simultaneously.

1 View a page

- To Open in a New Tab

 Highlight a link to view → 🗊 → Tab

 menu → Open new tab
- To Toggle Tabs

 - Alternatively, press for 1 + seconds to toggle tabs.
- To Close a Selected Tab
 - $[x] \rightarrow Tab \ menu \rightarrow Close \ selected \ tab$
- To Select & Close a Tab
 - $\boxed{\text{Y}} \rightarrow \textit{Tab menu} \rightarrow \textit{Close other tabs} \rightarrow$
 - lacktriangledown to switch to a tab ightarrow lacktriangledown (Select)



- Yahoo! Keitai and PC sites cannot be opened simultaneously.
- Some pages may open in a new tab automatically.
- When multiple tabs are open, some pages may be partially obscured. Close unnecessary tabs.

Buttons & Check Boxes



- Radio button
 Select one item only. Highlight an item with
 → (Select) (appearing as ●).
- ② Menu field Open a menu and select an item. Highlight menu → ■ (Select) → Highlight an item → ■ (Select).
- ② Command button Perform operations assigned to a button. Highlight a command button → ■ (Select).

Advanced

Advanced Settings P.5-9

- Copying Text
- Refreshing Page
- Sending Access History
- Deleting Access History
- Exiting Browser

₹ Settings

- Yahoo! Keitai
- Set Text Size in Yahoo! Keitai Pages (P.13-5)
- Set Encoding (P.13-15)
- Set Page Scroll Unit (@P.13-15)
- Set Whether to Use Pointer (P.13-15)
- Set Pointer Speed (P.13-15)
- Show/Hide Page Images (P.13-15)
- Play/Mute Page Sounds (P.13-15)
- Set Save Location for Images in a Page, etc. (@P.13-15)
- PC Site Browser
- Set Text Size in PC Site Browser (P.13-6)
- Change Page Font Size (P.13-16)
- Set Encoding (P.13-16)
- Set Scroll Unit (@P.13-16)
- Set Whether to Use Pointer (P.13-16)
- Set Pointer Speed (P.13-16)
- Show/Hide Page Navigation (P.13-16)
- Show/Hide Page Images (P.13-16)
- Play/Mute Page Sounds (@P.13-16)
- Set Save Location for Images in a Page, etc. (P.13-16)

Bookmarks & Saved Pages

Save site URLs to Bookmarks. Save page content to Saved Pages. Open pages without establishing an Internet connection.

Saving Bookmarks

Save up to 50 bookmarks each for Yahoo! Keitai and PC Site Browser.

- 1 Open a page
- ∑ → Bookmarks → Save
- 3 Enter title

Accessing Bookmarks

- → Yahoo! → PC site browser as required → Bookmarks
- Select a bookmark

Note

• Internet connections may incur Packet Communication charges.

Saving Pages

Save up to 30 pages each for Yahoo! Keitai and PC Site Browser.

- በ Open a page
- 3 Enter title

Opening Saved Pages

- **1** \rightarrow Yahoo! \rightarrow PC site browser as required \rightarrow Saved pages
- Select a page

Note

 If USIM Card that was inserted when page was saved is replaced, saved page will not open.

Advanced

1. Advanced Settings P.5-12

- Saving Bookmark by Direct Entry
- Editing Bookmark Title/URL
- Opening Bookmark URL with New Tab
- Sending Bookmark URL via S! Mail
- Sending Bookmark URL via SMS
- Sending Bookmark URL via Infrared
- Creating Folders in Bookmark List
- Moving Bookmark to Folders
- Changing Bookmark Order
- Changing Bookmark Format
- Saving Bookmark to Data Folder
- Viewing Bookmark Details
- Deleting Bookmarks
- Renaming Saved Pages
- Opening Saved Pages URL with New Tab
- Changing Saved Pages Format
- Deleting Saved Pages

RSS Feed

Register RSS compatible websites; content is automatically updated without accessing websites.

Registering RSS

Open RSS compatible website, appears.

- 🚹 Open a page
- 3 Check RSS →

 (Register)
- After registration, Auto update confirmation appears. Choose Yes to start automatic update. Choose No to cancel automatic update.
- In a page with RSS link, select link to register.

Viewing Update Information

- 1 → Yahoo! → PC site browser → RSS feed
- Select RSS → Select item
- If there is no update, confirmation appears. Choose **Yes**.
- When selecting titles in contents list, confirmation appears. Choose *Yes/No*.

Updating RSS

- 1 → Yahoo! → PC site browser → RSS feed
- RSS Update operation
 - To Update RSS Selected
 - To Update Selected RSS $Multiple \rightarrow Check RSS \rightarrow \boxdot$ (Update)
 - To Update All RSS All
 - Press 🗹 (Cancel) to stop update.

Advanced

• Advanced Settings P.5-15

- Sorting RSS
- Moving RSS to Folder
- Prohibiting RSS Update
- Creating Folders in RSS List
- Changing RSS Folder Name
- Deleting RSS Folder
- Sending RSS via Message
- Sending RSS via Infrared
- Saving RSS to Data Folder
- Loading RSS
- Viewing RSS Details
- Deleting RSS

Advanced Settings

Yahoo! Keitai/PC Site Browser

Copying Text

In a page, \boxdot \rightarrow *Copy text*

- To Copy Selected Text
 - to move cursor to the first character to copy
 (Start) → to specify a range → (End)
- To Copy All Text in Text Entry Window

 (xr) (All)

Refreshing Page

In a page, $\[\mathbf{v} \] \rightarrow \mathbf{Refresh}$

Entering URL from History

In a page, $\textcircled{v} \rightarrow Enter\ URL \rightarrow \textcircled{v} \rightarrow Insert \rightarrow Enter\ URL\ logs \rightarrow Select\ URL$

- Alternatively, press → Yahoo! → (PC site browser) → Enter URL → ♥ → Insert → Enter URL logs → Select URL.
- Up to ten URL logs appear, the latest first. When the limit is reached, the oldest page is deleted automatically.

Searching with New Window

In a page, \bigcirc \longrightarrow *Manage content* \rightarrow *Web search* \rightarrow Fnter text

Searching Text

In a page, \bigcirc \rightarrow *Manage content* \rightarrow *Search* \rightarrow Enter text to search

Moving to Top/Bottom of Page

In a page, \bigcirc \rightarrow *Manage content* \rightarrow *Jump in page* \rightarrow *Jump to top/Jump to bottom*

Sending URL

In a page, \bigcirc \rightarrow *Manage content* \rightarrow *Send URL* \rightarrow *S! Mail/SMS* \rightarrow (\bigcirc P.4-4 S! Mail \bigcirc P.4-5 SMS \bigcirc 2)

Opening Previously Viewed Page

In a page, \boxdot \rightarrow *Manage content* \rightarrow *History* \rightarrow Select item

- Alternatively, press → Yahoo! → (PC site browser) → History → Select URL.
- Save up to 50 accessed URLs.
- To open in a new tab, highlight URL → 🖼 → Open new tab.

Sending Access History

In a page, $\textcircled{P} \rightarrow \textit{Manage content} \rightarrow \textit{History} \rightarrow \text{Highlight URL} \rightarrow \textcircled{P} \rightarrow \textit{Send URL} \rightarrow \textit{S! Mail} / \textit{SMS} \rightarrow (\textcircled{P}.4-4 S! Mail ②, P.4-5 SMS ②)$

Deleting Access History

In a page, $> Manage content \rightarrow History$

■ To Delete a History

Highlight a URL \rightarrow r \rightarrow **Delete** \rightarrow **Selected** \rightarrow **Yes**

■ To Delete Multiple Histories

✓ Delete → Multiple → Check histories →
 ✓ (Delete) → Yes

■ To Delete All Histories

 $\begin{tabular}{ll} \hline \mathbf{Y} & \rightarrow & $Delete \rightarrow All \rightarrow Enter Phone Password \\ \rightarrow & \blacksquare & (OK) \rightarrow Yes \\ \hline \end{tabular}$

Using Text on Page

In a page, move cursor to text $\rightarrow \ \boxdot \rightarrow Manage$ $content \rightarrow Drag \rightarrow \ \blacksquare \ (OK)$

In a page, move cursor to text $\rightarrow \blacksquare$ (1 + seconds)

• Only if Pointer setting is *On*, *Drag* is available (♠P.5-10).

■ To Copy Text

Highlight the last character \rightarrow \blacksquare (Copy)

■ To Search with Selected Text

Highlight the last character $\rightarrow \boxdot \rightarrow Copy \ and \ search \rightarrow \blacksquare \ (OK)$

· Search result will appear with new tab.

■ To Insert Selected Text to Message Highlight the last character → 🖾 → Send message → (�P.4-4 S! Mail ②)

■ To Save Selected Text to Notepad

Highlight the last character → 🐨 → Save to

Notepad → 🔳 (OK) → 🖾 (Save)

Viewing Only Selected Frame

In a page, $\[\mathbf{v} \] \rightarrow \mathbf{Manage\ content} \rightarrow \mathbf{Frame\ in}$

- Some pages may be divided into multiple sections. Such a section is referred to as "Frame".
- To return to normal view, press ☑ → Manage content → Frame out.

Viewing Page Details

- To View Page Information Page information
- To View Server Certificate Server Certification

Changing Font Size

In a page, $\textcircled{P} \rightarrow Settings \rightarrow Font \ size \rightarrow Select$ an item

Changing Character Code

In a page, $\textcircled{v} \rightarrow Settings \rightarrow Encoding \rightarrow Select$ an item

• If page text appears garbled, changing character encoding may solve the problem.

Changing Scroll Unit

Switching to Pointer

In a page, \bigcirc \rightarrow *Settings* \rightarrow *Pointer settings* \rightarrow *On/Off* \rightarrow *On* or *Off*

Changing Pointer Speed

In a page, r o Settings o Pointer settings o Speed o Select item

Show/Play Image/Sound

In a page, \bigcirc \rightarrow *Settings* \rightarrow *Downloads*

■ To Set Image

Images → Show images/Do not show

■ To Set Sound

Sounds → Play sounds/Do not play

Setting Saving Location

In a page, \bigcirc \rightarrow Settings \rightarrow Save to \rightarrow Memory card first/Phone/Always ask

Clearing Cache

In a page, $\bigcirc T$ \rightarrow *Settings* \rightarrow *Memory manager* \rightarrow *Clear cache* \rightarrow *Yes*

Deleting Cookies

In a page, \bigcirc \rightarrow *Settings* \rightarrow *Memory manager* \rightarrow *Delete cookies* \rightarrow *Yes*

Deleting Certificates

In a page, \bigcirc \rightarrow *Settings* \rightarrow *Memory manager* \rightarrow *Delete certificates* \rightarrow *Yes*

Setting Manufacture Number Notification

In a page, \boxdot \rightarrow Settings \rightarrow Security \rightarrow Manufacture number \rightarrow On or Off

Sending/Not Sending Referrer Information

In a page, \bigcirc \rightarrow *Settings* \rightarrow *Security* \rightarrow *Send referer* \rightarrow Select an item

• Referrer is a link source URL information. It is sent to Web server when accessing websites.

Enabling Cookies

In a page, ☑ → Settings → Security → Cookies
→ Select an item

- Select *Confirm* for acceptance confirmation every time before a cookie is saved.
- Cookie automatically saves identification information of visitors to handset. Cookies contain user information and allow sites to recognize users and track preferences.

Enabling Script

In a page, \bigcirc \rightarrow *Settings* \rightarrow *Security* \rightarrow *Script* \rightarrow Select item

Checking Root Certificates

In a page, \bigcirc \rightarrow *Settings* \rightarrow *Security* \rightarrow *Root certificates* \rightarrow Select a certificate

• View electronic certificate preinstalled on handset.

Certificating Retention

In a page, \bigcirc \rightarrow *Settings* \rightarrow *Security* \rightarrow *Certificate retention* \rightarrow Select an item

Showing/Hiding Secure Prompt

In a page, \bigcirc \rightarrow Settings \rightarrow Security \rightarrow Secure prompt \rightarrow On/Off

Initializing Saved Information

In a page, \bigcirc \rightarrow *Settings* \rightarrow *Initialize browser* \rightarrow Enter Phone Password \rightarrow \bigcirc (OK) \rightarrow *Yes*

• Initialize browser settings or information such as Bookmarks or Saved pages.

Resetting Yahoo! Keitai/PC Site Browser Settings

In a page, \boxdot \rightarrow *Settings* \rightarrow *Reset settings* \rightarrow Enter Phone Password \rightarrow \blacksquare (OK) \rightarrow *Yes*

Exiting Browser

In a page, \boxdot \rightarrow *End application* \rightarrow *Yes*

Yahoo! Keitai

Moving to Main Menu

In a page, 🗹 → Yahoo! Keitai

PC Site Browser

Capturing Page

• Save screenshot to Picture folder.

Moving to Top/Bottom of Page

Opening Homepage

In a page, $\textcircled{r} \rightarrow Homepage$

Setting the Guide Show/Hide When Zooming

In a page, \bigcirc \rightarrow *Settings* \rightarrow *Page navigation* \rightarrow *On/Off*

Viewing Warning Messages

In a page, \bigcirc \rightarrow *Settings* \rightarrow *Warning messages* \rightarrow *On* or *Off*

 Set this function to show/hide warnings when activating PC Site Browser, or toggling between Yahoo! Keitai and PC Site Browser.

Deleting RSS Feed List

In a page, \boxdot \rightarrow *Settings* \rightarrow *Memory manager* \rightarrow *Delete RSS feed list* \rightarrow *Yes* \rightarrow Enter Phone Password \rightarrow \blacksquare (OK) \rightarrow *Yes*

Changing Page Layout

In a page, ☑ → Small screen/PC screen

Page Operations

Saving Phone Number/Mail Address

In a page containing phone number/mail address, select phone number or mail address → Save

Number → Phone or USIM

■ To Save as a New Entry

 $New \rightarrow (\bigcirc P.2-12 \text{ Creating New Entries } \bigcirc 2)$

■ To Update Entry

Available phone numbers and mail addresses appear underlined.

Sending Mail to Number/Mail Address

In a page containing phone number/mail address, select phone number or mail address → *Create Message* → *S! Mail/SMS* → (♠P.4-4 5! Mail ⑤, P.4-5

SMS ⑥

Available phone numbers and mail addresses appear underlined.

Calling Phone Number

In a page containing phone number, select phone number → *Voice Call*

Available phone numbers appear underlined.

Using URL to Open Another Page Select URL in a page

· Available URLs appear underlined.

Saving Images/Other Files from Pages

■ To Save Page Images

In a page, 🗑 → Save files → Save items → Select image → Save/Save to Pictograms/
Save to Mail art

 For Yahoo! Keitai, select an image to save only when there are multiple images.

■ To Save Background Images

In a page, \bigcirc \rightarrow Save files \rightarrow Save BG image \rightarrow Save

■ To Save Background Sound

In a page, \bigcirc \rightarrow Save files \rightarrow Save items \rightarrow Save

- · They cannot be saved with PC Site Browser.
- In a page with image, select 🗗 to save sound.

■ To Save Linked Files

In a page, highlight a link \rightarrow \blacksquare (Select) \rightarrow Save

- · For Auto Save files, select link to save files.
- The following operations are available when you highlight a link and press (Select) or save a file (available options vary depending on file type).

Play: Play file (e.g., media file) *Display*: Show file

Set as: Save file to Wallpaper or Ringtone

Details: Show file details

Back to browser: Return to page

 If files with same name exist, notification appears, choose Yes to save it with a different name.
 Choose No to edit the file name

Bookmarks

Toggling between Yahoo! Keitai/PC Site Browser Bookmark

In a page, $\boxdot \to Bookmarks \to Open\ list \to \boxdot$ (\blacksquare) / \boxdot (\blacksquare)

Alternatively, press → Yahoo! → (PC site browser) → Bookmarks → ☑ (②) / ☑ (②).

Opening Bookmarked Website

Saving Bookmark by Direct Entry

In a page, $\boxdot \to Bookmarks \to Open\ list \to \boxdot \\ \to Add\ bookmark \to Select\ Title\ field \to Enter\ title \to Select\ URL\ field \to Enter\ URL \to \boxdot\ (Save)$

Editing Bookmark Title/URL

In a page, \boxdot \rightarrow **Bookmarks** \rightarrow **Open list** \rightarrow Highlight bookmark \rightarrow \boxdot \rightarrow **Edit** \rightarrow Select Title field \rightarrow Edit title \rightarrow Select URL field \rightarrow Edit URL \rightarrow \boxdot (Save)

Opening Bookmark URL with New Tab

In a page, $\textcircled{P} \rightarrow Bookmarks \rightarrow Open\ list \rightarrow$ Highlight bookmark $\rightarrow \textcircled{P} \rightarrow Open\ new\ tab$

Sending Bookmark URL via S! Mail

In a page, $\textcircled{P} \rightarrow Bookmarks \rightarrow Open \ list$ $\rightarrow \text{Highlight bookmark} \rightarrow \textcircled{P} \rightarrow Send \rightarrow Via$ $message \rightarrow S! \ Mail \rightarrow \text{Check bookmarks} \rightarrow \textcircled{P}$ $(Send) \rightarrow (\textcircled{P}.4-4 \ S! \ Mail \ \textcircled{2})$

Sending Bookmark URL via SMS

In a page, $\textcircled{P} \rightarrow Bookmarks \rightarrow Open \ list$ \rightarrow Highlight bookmark $\rightarrow \textcircled{P} \rightarrow Send \rightarrow Via$ $message \rightarrow SMS \rightarrow (\textcircled{P}.4-5 \ SMS \textcircled{2})$

Sending Bookmark URL via Infrared

In a page, $\bigcirc \rightarrow Bookmarks \rightarrow Open \ list \rightarrow Highlight bookmark \rightarrow \bigcirc \rightarrow Send \rightarrow Via \ infrared \rightarrow (\bigcirc P.12-3)$

Creating Folders in Bookmark List

In a page, $\bigcirc \to Bookmarks \to Open \ list \to \bigcirc \to Create \ folder \to Enter \ folder \ name$

Alternatively, press ■ → Yahoo! → (PC site browser) → Bookmarks → ☑ → Create folder → Enter folder name.

Moving Bookmark to Folders

In a page, $\bigcirc \rightarrow Bookmarks \rightarrow Open \ list$

- To Move a Bookmark

 Highlight bookmark $\rightarrow \bigcirc \longrightarrow Move \rightarrow Se$
 - Highlight bookmark $\rightarrow \ \boxdot \rightarrow Move \rightarrow Selected$ \rightarrow Select a destination folder
- To Move Multiple Bookmarks

■ To Move All Bookmarks

 \longrightarrow *Move* \rightarrow *All* \rightarrow Select a destination folder

Changing Bookmark Order

In a page, $\boxdot \to Bookmarks \to Open\ list \to$ Highlight bookmark $\to \boxdot \to Change\ order \to$ \boxdot to move cursor to a destination $\to \blacksquare$ (Select)

Alternatively, press ■ → Yahoo! → (PC site browser) → Bookmarks → ♥ → Change order → Use ■ to move cursor to a destination → ■ (Select).

Changing Bookmark Format

In a page, $\bigcirc \to Bookmarks \to Open\ list \to \bigcirc \to View\ by \to List/List+Preview$

Saving Bookmark to Data Folder

In a page, $\textcircled{D} \rightarrow Bookmarks \rightarrow Open\ list \rightarrow$ Highlight bookmark $\rightarrow \textcircled{D} \rightarrow Save\ to\ data\ folder$ $\rightarrow Phone/Memory\ card \rightarrow Yes$

Alternatively, press ¬ Yahoo! → (PC site browser) → Bookmarks → Highlight bookmark
 ¬ Save to data folder → Phone/ Memory card → Yes.

Viewing Bookmark Details

In a page, $\bigcirc \rightarrow Bookmarks \rightarrow Open\ list \rightarrow$ Highlight bookmark $\rightarrow \bigcirc \rightarrow Details$

Deleting Bookmarks

In a page, $\bigcirc \rightarrow Bookmarks \rightarrow Open \ list$

- To Delete a Bookmark

 Highlight bookmark → 🗹 → Delete →

 Selected → Yes
- To Delete Multiple Bookmarks

 \longrightarrow **Delete** \rightarrow **Multiple** \rightarrow Check bookmarks \rightarrow \boxtimes (Delete) \rightarrow **Yes**

■ To Delete All Bookmarks

- \nearrow **Delete** \rightarrow **All** \rightarrow Enter Phone Password \rightarrow \bigcirc (OK) \rightarrow **Yes**

Saved Pages

Toggling between Yahoo! Keitai/PC Site Browser Saved Page

In a page, \bigcirc \rightarrow *Saved pages* \rightarrow *Open list* \rightarrow \bigcirc (\bigcirc) / \bigcirc (\bigcirc)

Alternatively, press ■ → Yahoo! → (PC site browser) → Saved pages → ② (②) / ② (②).

Opening Saved Pages in a Page

In a page, \boxdot \rightarrow *Saved pages* \rightarrow *Open list* \rightarrow Select saved pages

Renaming Saved Pages

In a page, \boxdot \rightarrow *Saved pages* \rightarrow *Open list* \rightarrow Highlight entry \rightarrow \boxdot \rightarrow *Rename* \rightarrow Enter name

Alternatively, press ¬ Yahoo! → (PC site browser) → Saved pages → Highlight entry → ¬ Rename → Enter name.

Opening Saved Pages URL with New Tab
In a page, \bigcirc \rightarrow Saved pages \rightarrow Open list \rightarrow Highlight saved page \rightarrow \bigcirc \rightarrow Open new tab

Changing Order of Saved Pages

In a page, $\textcircled{P} \rightarrow Saved\ pages \rightarrow Open\ list \rightarrow$ Highlight entry $\rightarrow \textcircled{P} \rightarrow Change\ order \rightarrow \textcircled{T}$ to move cursor to a destination $\rightarrow \textcircled{\blacksquare}$ (Select)

Changing Saved Pages Format

In a page, \bigcirc *Saved pages* \rightarrow *Open list* \rightarrow \bigcirc *View by* \rightarrow *List/List+Preview*

• Alternatively, ■ → Yahoo! → (PC site browser) → Saved pages → ▼ → Open list → List/List+Preview.

Deleting Saved Pages

In a page, $\[\Sigma \] \rightarrow Saved pages \rightarrow Open list$

■ To Delete an Item

Highlight entry $\rightarrow \mathbf{v} \rightarrow \mathbf{Delete} \rightarrow \mathbf{Selected} \rightarrow \mathbf{Yes}$

■ To Delete Multiple Items

■ To Delete All Items

 \nearrow **Delete** \rightarrow **All** \rightarrow Enter Phone Password \rightarrow \bigcirc (OK) \rightarrow **Yes**

RSS

Sorting RSS

- \rightarrow Yahoo! \rightarrow PC site browser \rightarrow RSS feed \rightarrow Highlight RSS \rightarrow [x] \rightarrow Change order \rightarrow Use

Moving RSS to Folder

- \blacksquare → Yahoo! → PC site browser → RSS feed
- To Move an Item

Highlight RSS $\rightarrow \boxdot$ \rightarrow *Move* \rightarrow *Selected* \rightarrow Select folder

- To Move Multiple Items
 - \bowtie \rightarrow *Move* \rightarrow *Multiple* \rightarrow Check RSS \rightarrow \bowtie (Move) \rightarrow Select folder
- To Move All Items
 - $\textcircled{Y} \rightarrow Move \rightarrow All \rightarrow \text{Select folder}$

Prohibiting RSS Update

- \blacksquare → Yahoo! → PC site browser → RSS feed
- To Prohibit an Item

- To Prohibit Multiple Items
- $\square \rightarrow Restrict\ update \rightarrow Multiple \rightarrow Check$ RSS $\rightarrow \square$ (Save)
- To Prohibit All Items
 - $\nabla \rightarrow Restrict\ update \rightarrow All$
 - Repeat setting operation to cancel Restrict update.

Creating Folders in RSS List

■ \rightarrow Yahoo! \rightarrow PC site browser \rightarrow RSS feed \rightarrow \bigcirc \rightarrow Create folder \rightarrow Enter folder name

Changing RSS Folder Name

Deleting RSS Folder

■ \rightarrow Yahoo! \rightarrow PC site browser \rightarrow RSS feed \rightarrow Highlight folder \rightarrow Y \rightarrow Delete folder \rightarrow Yes

Sending RSS via Message

■ \rightarrow Yahoo! \rightarrow PC site browser \rightarrow RSS feed \rightarrow Highlight RSS \rightarrow P \rightarrow Send \rightarrow Via message \rightarrow (P.4-4 S! Mail Q)

Sending RSS via Infrared

■ \rightarrow Yahoo! \rightarrow PC site browser \rightarrow RSS feed \rightarrow Highlight RSS \rightarrow \bigcirc \rightarrow Send \rightarrow Via infrared (\bigcirc P.12-3)

Saving RSS to Data Folder

- → Yahoo! → PC site browser → RSS feed → 🖾 → Export → Phone/Memory card → Yes
- The save location can be set to Memory Card if inserted.

Loading RSS

- → Yahoo! → PC site browser → RSS feed → 😰 → Import → Select file
- To Add RSS Feed
 - Add → Yes/No
- To Delete All & Add RSS Feed

Delete all & Overwrite → Enter Phone Password → \blacksquare (OK) → **Yes**

 After saving, update confirmation appears. Choose Yes to update.

Viewing RSS Details

■ \rightarrow Yahoo! \rightarrow PC site browser \rightarrow RSS feed \rightarrow Highlight RSS \rightarrow \boxdot \rightarrow Details

Deleting RSS

- \blacksquare → Yahoo! → PC site browser → RSS feed
- To Delete an Item

- To Delete Multiple Items
 - \searrow \rightarrow **Delete** \rightarrow **Multiple** \rightarrow Check RSS \rightarrow \boxtimes (Delete) \rightarrow **Yes**
- To Delete All Items
 - \longrightarrow **Delete** \rightarrow **All** \rightarrow Enter Phone Password \rightarrow \bigcirc (OK) \rightarrow **Yes**
- Alternatively, highlight folder → 🖭 → Delete all
 → Enter Phone Password → (OK) → Yes.

Camera & Imaging

Capturing Image, Recording Video & Editing	6-2
Camera	6-3
Using Display as Viewfinder	6-3
Single Shot	6-5
Normal	6-6
Scene	
Multi Shot	
Photo Combination	
Viewing Captured Images (Quick Play)	6-7
Video	6-8
Using Display as Viewfinder	6-8
Recording Video	
Video Mode	
Viewing Recorded Video (Quick Play)	6-10
Editing Still Images	6-10
Photo Library	6-11
Photo Album	6-11
Advanced Settings	6-12
Capturing Still Images/Recording Video	6-12
Capturing Still Images	6-12
Recording Videos	6-12
Quick Play	6-13
Photo Library	6-14



Capturing Image, Recording Video & Editing

Use handset camera to capture images and record movies.

Capturing Images & Recording Video Clips

Editing Images

Select Scene, Multi Shot, etc. to capture image/video. Record up to an hour per clip (�P.6-8).

Editing images, etc. (�P.6-10).





Variety of Capturing Mode

Choose applicable mode; Multi shot, Scene, etc., according to conditions (♠P.6-3).



Note

- Use a dry soft cloth to remove debris from camera lens cover.
- Avoid camera shake; hold handset steady or put it on something stable and use Timer to prevent unwanted image blur.
- Do not expose handset to devices with static electricity when using camera.
- Camera employs high precision technology, however, some pixels may seem brighter or darker than others.
- Leaving handset in a hot place for an extended period before capturing/saving image may affect image quality.
- Exposing lens to direct sunlight may affect image color.
- When battery is low, camera may be unavailable.

Camera


For capturing still images, select Shooting mode: Normal to shoot single image and Multi shot or Photo combi to shoot multi-shot.

Captured images are saved to Pictures. Insert Memory Card to save images to Digital camera.

Using Display as Viewfinder





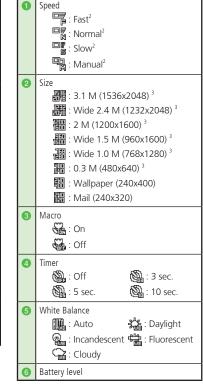

7	Quality 写: Superfine F: Fine 阅: Normal
8	ISO :: Auto :: 100 :: 100 :: 400
0	Exposure metering : Matrix : Center-weight : Spot
10	Number of remaining available shots
•	Save to p : Phone p : Memory card first, Digital camera first or Always ask

Shooting Mode	Description
Normal	Capture still image and select size by purpose; attach images to S! Mail, save as Wallpaper, etc.
Scene	Suitable for capturing night scenes and landscapes.
Multi shot	Capture six or nine images; select auto shutter speed or manual shutter release.
Photo combi	Capture sequential images manually. Select Frame to automatically combine the images into one image.


• Press 🗖 to show/hide icons and current settings.

¹Appears under Mode or Size.

²Appears under Size or Macro.

³Appears in *Normal* or *Scene* Mode.

Single Shot

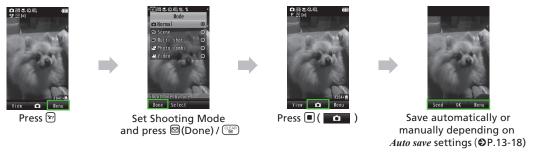

- Adjusting size and brightness are available for still images.
- Attach captured image to message (◆P.6-12).
- Captured images are saved to Pictures. Insert Memory Card and set save location to Digital Camera folder to save images to Digital camera.

Normal



· Adjust settings before capturing as required (P.6-12).

Frame image in Viewfinder

- For some sizes, use 📵 to zoom in/out.
- Use 🗖 to adjust brightness.




- - Images are saved automatically.
 - Set Auto save to Off to save manually (P.13-18).

Scene





 $[\Sigma] \rightarrow Scene$

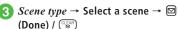

- · Adjust settings before capturing as required (**♦** P.6-12).
- ISO, Exposure metering and Effect are unavailable for Scene.

Frame image in Viewfinder

• For some sizes, use 🖸 to zoom in/out.



- · Images are saved automatically.
- Set Auto save to Off to save manually (P.13-18).

Multi Shot



- $[Y] \rightarrow Multi shot$
- Number of capture → Select image count
- 4 Speed → Fast, Normal, Slow or $Manual \rightarrow \square$ (Done) / \square
 - Adjust settings before capturing as required (P.6-12).
 - ISO, Face link display and Shutter sound are unavailable for Multi Shot.

Frame image in Viewfinder

- Use 🗖 to zoom in/out.
- Use to adjust brightness.
- - Images are saved automatically when capturing of images is over.
 - Set Auto save to Off to save manually (P.13-18).
 - If Speed is set to Manual, repeat 6. Press (Stop) and save the images. To redo, press (SEAR).
- When Auto save is Off, all images captured using Multi shot appear. After (6), select images to save → Press (Save).

Photo Combination

- 1 0
- \bigcirc Style → Style → Select a style
 - Adjust settings before capturing as required (◆P.6-12).
 - ISO and Face link display are unavailable for Photo Combination.
- 4 Frame image in Viewfinder → Apply selected frame and press ■
 (□ □ □)
 - Use 🖸 to zoom in/out.
 - Use 🖸 to adjust brightness.
- Repeat 4 to capture images
 - To redo, press .
 - Images are saved automatically when capturing images ends.
 - Set *Auto save* to *Off* to save manually (�P.13-18).

Viewing Captured Images (Quick Play)

- 2 🖻 to view Image
 - With Memory Card inserted, *Memory card first* or *Digital camera first* is selectable.
 - Saved media files are shown. Edit save location settings to switch between Phone/ Memory Card (◆P.13-18).
 - Alternatively, open still image from Data Folder (�P.11-3).

Advanced

- Advanced Settings P.6-12
- Setting Captured Still Image as Wallpaper, etc.
- Editing Face Link
- Playing Quick Play Image Slide Show

⊀ Settings

- Select Quality (P.13-18)
- Set Exposure Metering (
 \mathbb{P}.13-18)
- Select Effect (P.13-18)
- Activate/Cancel Auto Save (P.13-18)
- Set Save Location When Memory Card is Inserted (P.13-18)
- Adjust Flicker (
 P.13-18)
- Show/Hide Guideline (
 P.13-18)
- Set Shutter Sound (P.13-18)
- Set Timer Sound (P.13-18)

Video

Record clips easily. Files are saved in 3GP format to Video folder in Data Folder. When recording a video to attach or insert into an S! Mail, set Shooting size to *S! Mail* (�P.6-12).


Using Display as Viewfinder

Hold handset sideways to record video.



Video Viewfinder



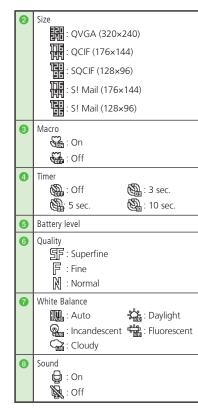

- S Elapsed/Available Recording Time

 If Size is set to S! Mail, only the elapsed recording time appears.

 Progress bar
 Save to

 □ Phone
 □ : Phone
 □ : Memory card first

 Expected Video Size/Available Memory at Start


 If Size is set to S! Mail, shooting size/
- Press 📵 to show/hide icons/current settings.

available shooting size appears.

 If recorded video size is too big/memory insufficient, recording ends before maximum recording time is reached.

Shooting Mode	Description
Video	Record video suitable for attaching to S! Mail or saving to handset.

Recording Video

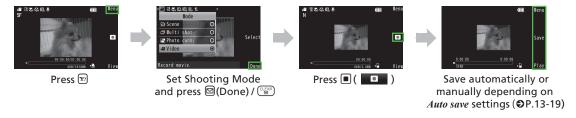

- · Adjusting size and brightness are available for video.
- Attach recorded video to message (�P.6-12).
- If video file is encoded beyond 15 FPS, it may not play properly.
- If save location is set to Memory Card, removing card while video recording is paused will damage file, preventing playback.

Video Mode

Record up to an hour for one clip.

- 1 (1+ seconds)
 - Adjust settings before capturing as required (♠P.6-12).
- Frame image in Viewfinder
 - Use 🖸 to zoom in/out.
 - Use 🚺 to adjust brightness.
- 3 🔳 (🔼)
- 4 (Stop)
 - Video is saved automatically. When recordable time has elapsed, recording automatically ends.
 - Set Auto save to Off to save manually (♠P.13-19).

Viewing Recorded Video (Quick Play)

- 2 \blacksquare to highlight video $\rightarrow \blacksquare$ (Play)
 - Alternatively, check video from Data Folder (♠P.11-3).

Advanced

• Advanced Settings P.6-12

Using Recorded Video as Ringtone

₹ Settings

- Select Quality (P.13-19)
- Set Effect (P.13-19)
- Set Sound Recording (P.13-19)
- Activate/Cancel Auto Save (P.13-19)
- Set Save Location (P.13-19)
- Show/Hide Guideline (
 P.13-19)
- Adjust Flicker (
 P.13-19)
- Set Shutter Sound (P.13-19)
- Set Timer Sound (P.13-19)

Editing Still Images

Set image brightness, size and effect.

- 2 Select a file
- 4 Edit image
 - To Set Effects on Image
 - ✓ Effect → Filter, Style or Warp →
 Select an effect → Select preview image →
 (OK)
 - For some effects, adjust the effect level.
 - To Adjust an Image Automatically \bigcirc \rightarrow $Adjust \rightarrow$ Auto level

 - To Resize an Image

 ⑤ → Transform → Resize →

 Wallpaper/Customize
 - After selecting *Customize*, enter *Width* and *Height*, press (OK).
 - To Rotate an Image
 - To Flip an Image
 - $\Sigma \rightarrow Transform \rightarrow Flip \rightarrow \square (\square) / \square$

■ To Crop an Image

- To undo, press 🖾 (Undo).
- **5** (Save) \rightarrow *Yes* \rightarrow Enter file name

Photo Library

Photo Album

View JPEG still images in handset or Memory Card.



■ → Camera → Photo album

🗅 Photo album 🖭



- 🔞 🖻 to view file



- Some files may not appear.
- Press (Zoom) → ☑ (②) / ☑ (②) to zoom in/out image. To go back to normal view, press ■ (OK) / ○☑.

Advanced

• Advanced Settings P.6-14

- Switching Folder
- Setting Opened Still Image as Wallpaper, etc.
- Editing Opened Still Image
- Saving Tag Information
- Editing Tag
- Deleting Opened File

Advanced Settings

Capturing Still Images/Recording Video

Setting Capture Method

In Viewfinder, 🗹

■ To Set Capturing Size

 $Size \rightarrow Select item \rightarrow \square (Done) / \square$

■ To Set Macro

 $Macro \rightarrow On/Off \rightarrow \square$ (Done) / \square

■ To Set Time

Timer → Select item → 🖾 (Done) / 🖼

■ To Set White Balance

White balance → Select item → \square (Done) / \square

■ To Set Effect (Color Tone)

Settings → Effect → Select item → \boxtimes (Done) / $\stackrel{\bigcirc EMP}{\boxtimes}$

Viewing Capturing Shortcut Key Assignments In Viewfinder, ☑ → *Help*

Capturing Still Images

Setting Captured Still Image as Wallpaper, etc.

After capturing still image, $(S) \rightarrow Set \ as$

- To operate above, set *Auto save* to *Off* or *On* (*Preview manual*) (**②**P.13-18).
- To Set Image to Wallpaper

Wallpaper → Use these functions as needed:

(Rotate) to adjust image orientation

Or

- To Set Image to Incoming Image

 Caller ID → Search and select Phone Book
 entry (�P.2-13) → (Set)
 - · This setting is unavailable for some sizes.

Editing Face Link

• Before capturing, set Face link display to On.

Sending Captured Still Images

After capturing still image, (Send)

- For video, after recording, 🗹 → Send.
- To operate above, set Auto save to Off or On (Preview manual) (◆P.13-18).
- To Send via Message
 Via message → (♠ P.4-4 S! Mail ②)
- To Send via Infrared

 Via infrared (◆P.12-3)

Recording Videos

Viewing Recorded Video before Saving

After recording video, (Play)

• To operate the above, set *Auto save* to *Off* (♠P.13-19).

Using Recorded Video as Ringtone

- To operate the above, set Auto save to Off (◆P.13-19).
- To Set Video to Voice Ringtone Voice ringtone
- To Set Video to Caller Ringtone

 Caller ringtone → Search and select Phone
 Book entry (�P.2-13)

Setting Sound Recording

In viewfinder, $\boxdot \to Settings \to Settings \to Sound recording \to On$ or $Off \to \boxdot$ (Done) /

Sending Recorded Video

After recording video,

→ Send

- To operate the above, set Auto save to Off (◆P.13-19).
- To Send via Message

 Via message → (◆ P.4-4 S! Mail ②)
- To Send via Infrared

 Via infrared (◆ P.12-3)

Quick Play

Editing/Setting/Sending Still image

- lacktriangledown ightarrow ightarrow to view still image
- To Send Still Image
 - (Send)
 - To Send via Message

Via message → (•P.4-4 S! Mail ②)

- To Send via Infrared
 - Via infrared (♦P.12-3)
- To Use Quick Play Still Image as Wallpaper, etc.
 - Σ \rightarrow Set as
 - To Set Image as Wallpaper

Wallpaper → Use these functions as needed:

(Rotate) to adjust image orientation

Or

- To Set Image as Incoming Image
 Caller ID → Search and select Phone Book entry (◆P.2-13) → (Set)
 This setting is unavailable for some sizes.
- To Edit Still Image

 \nearrow *Edit* \rightarrow *Image editor* \rightarrow (\bigcirc P.6-10 Editing Still Images \bigcirc)

- To View Still Image Details
 - [Y/] → Details
- To Delete Still Image
 - $[Y'] \rightarrow Delete \rightarrow Yes$

Editing/Setting/Sending Video

 \bigcirc (1+ seconds) \rightarrow \bigcirc (View) \rightarrow \bigcirc to view video

- To Send Video
 - ∑ → Send

 - Via message → (♠P.4-4 S! Mail ②)

 To Send via Infrared
- To Set Video as Ringtone

Via infrared (©P.12-3)

- ∑ → Set as
- To Set Video as Voice Ringtone Voice ringtone
- To Set Video as Caller Ringtone
 Caller ringtone → Search and select Phone
 Book entry (◆P.2-13)
- To View Video Details
 - ∑ → Details
- To Delete Video
 - To Delete a Video
 Highlight video → 🖾 → Delete → Selected
 → Yes
 - To Delete Multiple Videos
 - \nearrow *Delete* \rightarrow *Multiple* \rightarrow Check videos \rightarrow \bowtie (Delete) \rightarrow *Yes*
 - To Delete All Videos

Playing Quick Play Image Slide Show

- $\square \rightarrow \square$ (View) $\rightarrow \square \rightarrow Slide\ show$
- Press (Pause) during playback to pause Slide Show. Press (Restart) to replay Slide Show.
- Press (Stop) to cancel Slide Show.

Exiting Quick Play

during Quick Play

Photo Library

Changing Still Image Display

■ → Camera → Photo album → 🖾 (Category) → Folder/Month/Date/Tags/Faces

Switching Folder

■ → Camera → Photo album → 🖾 →
Memory switch → Phone+Memory card/Phone/
Memory card/Digital camera

 When Memory Card inserted, Phone+Memory card/Phone/Memory card/Digital camera are selectable.

Setting Opened Still Image as Wallpaper, etc. $\blacksquare \to Camera \to Photo \ album \to Select \ file$ location $\to \square$ to view file $\to \square$ $\to Set \ as$

■ To Set Image to Wallpaper

Wallpaper → Use these functions as needed:

(Rotate) to adjust image orientation

- To Set Image to Incoming Image

 Caller ID → Search and select Phone Book
 entry (�P.2-13) → (Set)
 - This setting is unavailable for some sizes.

Sending Opened Still Image

 \blacksquare \rightarrow *Camera* \rightarrow *Photo album* \rightarrow Select file location \rightarrow \boxdot to view image \rightarrow \boxdot (Send)

■ To Send via Message
Via message → (♠ P.4-4 S! Mail ②)

■ To Send via Infrared

Via infrared (◆ P.12-3)

Editing Opened Still Image

■ \rightarrow Camera \rightarrow Photo album \rightarrow Select file location \rightarrow © to view image \rightarrow $\textcircled{$\mathcal{P}$} \rightarrow$ Edit \rightarrow Image editor \rightarrow (\bigcirc P.6-10 Editing Still Images \bigcirc

Saving Tag Information

■ To Save Existent Tag

Check tags → 🏻 (Save)

- To Save New Tag

 - · Only files saved on handset are available.

Editing Tag

■ \rightarrow *Camera* \rightarrow *Photo album* \rightarrow Select file location \rightarrow \boxdot to view image \rightarrow \boxdot \rightarrow *Manage tags* \rightarrow Highlight tag \rightarrow \boxdot

■ To Change Tag Name

Rename → Change name

■ To Sort Tag

Change order → Move tag → ■ (Select)

To Delete Tag
 Delete → Yes
 Only files saved

• Only files saved on handset are available.

Deleting Opened File

 \blacksquare → *Camera* → *Photo album* → Select file location → \blacksquare to view image → \boxdot → *Delete* → *Yes*

Media Player

Using Media Player	7-2
Downloading Media Files Downloading Music & Movies	7-3
Playing Music Media Player Music Window Playing Music	7-4
Playing Movie Media Player Movie Window Playing Movie	7-6
Using Playlist Creating Playlist Playing Playlist	7-8
Advanced Settings. Music Playback. Movie Playback. Playlist.	7-8 7-9



Using Media Player

This handset features a Media Player.

Download media files via Yahoo! Keitai or create personal playlists.

Playing Media Files



Play music or movies via Media Player (�P.7-4, P.7-7). Select a music or movie file from folders or playlists.

Saving Music/Movie from PC to Memory Card



Insert Memory Card with music or movies on it that was saved on PC into the handset (�P.7-3).

Downloading Media Files



Access Yahoo! Keitai to download music or movies (�P.7-3).

Creating Playlists



Add your favorite music or movies to a playlist and create your own music or movie album (�P.7-8).

Downloading Media Files

Access Yahoo! Keitai to download music or movies and copy them to handset.

Note

 Downloading music or movies may incur high Packet Communication charges since they contain a large volume of data.

Downloading Music & Movies

- O
- → Media
- 2 Download music or movie
 - To Download Music

 Music → All music → Download

 Music
 - To Download Movie Movie → All movies → Download Movies

Saving Media Files to Phone/Memory Card

To convert music or movie file formats, software is required.

- SoftBank Mobile does not guarantee proper operation with any specific software.
- For software specifications or operations, see SoftBank Mobile Website.
- 1 Insert Memory Card into handset
 - Follow instructions (♠P.11-8).
- Save files to the following folders by type:
 Music file: PRIVATE/MYFOLDER/My Items/Music
 PRIVATE/MYFOLDER/My Items/Sounds
 & Ringtones

Movie file: PRIVATE/MYFOLDER/My Items/Movie

• After saving files, insert Memory Card into handset; load files to play them.


Playing Music

Folder structure is as follows.

Folder	Description
Last played/Now playing	Last/currently playing file
All music	Up to 9999 music files
Playlists	View playable files in Music in created folders
Artists	All music files by Artist
Albums	All music files by Album
Genres	All music files by Genre
Folders	All music files in Ring songs • tones and Music folders in Data Folder
Recently played music	100 most recently played files (most recent first)
Most played music	100 most frequently played files (most frequent first)

- Files on Memory Card may take longer to load.
- ullet Only files playable via ${\it Music}$ appear.

Media Player Music Window

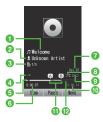

Music Playback

- 1 Title (file name when title is unknown)
- 2 Artist's name
- 3 File number/Total number of files
- 4 Copyright protection
- 6 Playing status: Play/Pause/Stop
- 6 Elapsed playing time
- Volume level
- 8 Shuffle
- 9 Repeat mode

A : Off

[1] : One

CAD: All

- 10 Total playing time
- Repeat section
- Progress bar

Shortcut Key Operations

Press shortcut assigned key to perform the operation. Available operations vary according to playing status and file type.

Key	Description
	Play/Pause
	Next song
•	Previous song/Beginning of current song
	Volume up
	Volume down
	Stop/Set as
\$7	Menu
1 .50	Repeat pattern setting
2 ABC	Shuffle
4 ² (del)	Time search
(5 .m.)	Repeat section

• Shortcuts may not work with some music files.

Playing Music

- **1** → Media → Music
- Play a file
 - To Play Most Recently Played File Last played
 - While playing, Last played will be Now playing.
 - To Select from All Files

 All music → Select a file
 - To Select from Playlists

 Playlists → Select a playlist → Select a file
 - To Select from Artists List

 Artists → Select an Artist → Select a file
 - To Select from Albums List

 Albums → Select an Album → Select a file
 - To Select from Genres list Genres → Select a genre → Select a file
 - To Select from Folder List

 Folders → Select a folder → Select a file
 - To Select from Recent Music List

 *Recently played music → Select a file
 - To Select from Most Played Music List Most played music → Select a file

- When Memory Card is inserted, Memory Card files appear in file list with ...
- While Media Player is active, press ** repeatedly to hide Music playback window.

 In Standby, press ** to end Media Player. Stop confirmation appears, choose **Yes.
- If a call arrives while playing music in Music playback window, playback pauses and handset rings. After call ends, paused Music playback window returns.
- When Alarm is activated while music is being played in Music playback window, playback pauses, Alarm sounds and indicator appears. Press any key to stop Alarm and to clear the indicator.

Advanced

• Advanced Settings P.7-8

- Searching File by Text
- Sending Files
- Sorting Files
- Purchasing/Downloading Content Key
- Viewing File Details
- Playing from Specified Point
- Viewing Lyrics
- Connecting to Web Link
- Checking Shortcut Key Assignments

₹ Settings

- Set Repeat Mode (P.13-19)
- Set Shuffle (@P.13-19)

Playing Movie

Folder structure is as follows.

Folder	Description
Last played	Play most recently played file
All movies	View all playable files in Movie up to 9999
Playlists	View playable files in Movie in created folders
Folders	View files in Movie folders in Data Folder
Recently played movies	View up to 100 most recently played files (most recently played file appears first)
Most played movies	View up to 100 most frequently played files (most frequently played file appears first)

- Files on Memory Card may take longer to load.
- Only files playable via *Movie* appear.

Media Player Movie Window



Movie Playback (Portrait)



Movie Playback (Landscape)

- 1 Video title (or file name when title is unknown) and artist's name
- 2 File number/Total number of files
- 8 Playback speed
- 4 Copyright protection
- 6 Playing status: Play/Pause/Stop
- 6 Elapsed playing time
- Volume level

- Shuffle
- 9 Repeat mode

A : Off

[1] : One

CAD: All

- 10 Total playing time
- Progress bar

Shortcut Key Operations

Press shortcut assigned key to perform the operation. Available operations vary according to playing status and file type.

Normal Screen Display (Portrait)

Key	Description
	Play/Pause
	Next clip
e e	Previous movie/Beginning of current movie
Ō	Volume up
	Volume down
	Stop/Set as
\$7/	Menu
(1 . ž	Repeat pattern setting
2 ABC	Shuffle
3 👼	Switch Display size
4 a	Time search
(5 .8)	Capture frame
(6 mg)	Playback speed

Fullscreen View (Landscape)

Key	Description
	Play/Pause
G	Volume up
•	Volume down
	Next movie
Ō	Previous movie/Beginning of current movie
(t)	Repeat pattern setting
2 ABC	Shuffle
(5 .%)	Screen capture
6 sea	Playback speed

Playing Movie

- 1 → Media → Movie
- Play a file
 - To Play Most Recently Played File Last played
 - To Select from All Files

 All movies → Select a file
 - To Select from Playlists

 Playlists → Select a playlist → Select a file
 - To Select from Folder List Folders → Select a folder
 - To Select from Recent Movie List Recently played movies → Select a file
 - To Select from Most Played Movie List Most played movies → Select a file
- ullet Highlight $All\ movies \to {\sf Press} lacksquare$ (Play) to play all the appropriate files in list.
- When Memory Card is inserted, Memory Card files appear in file list with ...
- In file list, highlight file to show preview.

Advanced

• Advanced Settings P.7-9

- Searching Files by Text
- Sending Files
- Sorting Files
- Purchasing/Downloading Content Key
- Viewing File Details
- Changing Window Size
- Playing from Specified Point
- Capturing Still Image from Movie
- Connecting to Web Link
- Changing Playback Speed
- Checking Shortcut Key Assignments

₹ Settings

- Set Repeat Mode (P.13-20)
- Set Backlight (TP P.13-20)
- Set Portrait Style (P.13-20)
- Set Display for Activating Movie (P.13-20)
- Show/Hide Movie Preview (P.13-20)

Using Playlist

Create Playlist to make your own album.

Creating Playlist

Create up to 20 playlists with 100 files in each playlist.

- 1 → Media → Music or Movie → Playlists → 🖾 (New)
- Enter playlist name
- 3 Select created playlist
- 4 ₪ (Add)

Playing Playlist

- 1 → Media → Music or Movie → Playlists
- Select a playlist
- 3 Select a file
- Playlist cannot be played if a saved file has been deleted, or if file was added from Memory Card and Memory Card was removed. Insert Memory Card and load file to play.

Advanced

• Advanced Settings P.7-10

- Adding Files to Playlist
- Removing Files from Playlist
- Changing Order of Files in Playlist
- Renaming Playlist
- Deleting Playlist

Advanced Settings

Music Playback

Setting Files to Ringtone in Normal Mode

- \rightarrow *Media* \rightarrow *Music* \rightarrow *All music* \rightarrow Highlight a file \rightarrow \square (Set as) \rightarrow Select an item
- · Only available for compatible files.

Searching File by Text

 \blacksquare → *Media* → *Music* → *All music* → \boxdot → *Search files* → Select Search field → Enter title or artist name → Check *Title* or *Artist* → \boxdot (Search)

Sending Files

■ \rightarrow *Media* \rightarrow *Music* \rightarrow *All music* \rightarrow Highlight a file \rightarrow \bigcirc \rightarrow *Send*

- To Send via Message

 Via message → (♠ P.4-4 S! Mail ②)
- To Send via Infrared

 Via infrared \rightarrow Check files \rightarrow \bowtie (Send) (\bigcirc P.12-3)

Sorting Files

■ \rightarrow *Media* \rightarrow *Music* \rightarrow *All music* \rightarrow \boxdot \rightarrow *Sort by* \rightarrow Select an item

- Perform the same operation on files in Folders.
- While loading files from Memory Card, the order of music files may not be changed. Perform the same operation again.

Purchasing/Downloading Content Key

 \blacksquare → Media → Music → All music → Highlight a file → \boxdot → Download Content key → Yes

Viewing File Details

- Perform the same operation in other folders.

Playing from Specified Point

In Music playback window, \boxdot \to *Time search* \to Enter time \to \blacksquare (Jump)

Viewing Lyrics

In Music playback window, \bigcirc \rightarrow *View lyrics*

• Only available for compatible files.

Connecting to Web Link

Unavailable if web link does not exist.

Checking Shortcut Key Assignments
In Music playback window, [४] → Help

Movie Playback

Setting Files to Ringtone in Normal Mode

- \rightarrow *Media* \rightarrow *Movie* \rightarrow *All movies* \rightarrow Highlight a file \rightarrow \bowtie (Set as)
- · Only available for compatible files.

Searching Files by Text

- → Media → Movie → All movies → 🗹
 → Search files → Select search field → Enter title or author's name → Check Title or Author
 → 🖾 (Search)
- **Sending Files**

■ \rightarrow *Media* \rightarrow *Movie* \rightarrow *All movies* \rightarrow Highlight a file \rightarrow \bigcirc \bigcirc \rightarrow *Send*

■ To Send via Message

Via message → (♠P.4-4 S! Mail ♠)

■ To Send via Infrared

Via infrared → Check files → 🖾 (Send) (�P.12-3)

Sorting Files

■ \rightarrow *Media* \rightarrow *Movie* \rightarrow *All movies* \rightarrow \bigcirc \rightarrow *Sort by* \rightarrow Select an item

• Perform the same operation on files in Folders.

Purchasing/Downloading Content Key

■ \rightarrow *Media* \rightarrow *Movie* \rightarrow *All movies* \rightarrow Highlight a file \rightarrow r \rightarrow *Download Content key* \rightarrow *Yes*

Viewing File Details

■ \rightarrow *Media* \rightarrow *Movie* \rightarrow *All movies* \rightarrow Highlight a file \rightarrow \bigcirc \bigcirc *Details*

- Alternatively, in Movie playback window (Portrait view), press ☑ → *Details*.
- Perform the same operation in other folders.

Changing Window Size

■ → Media → Settings → Movie settings → Display → First view → Select an item

Changing Window Size

In Movie playback window (Portrait view), \bigcirc \rightarrow $Resolution \rightarrow$ Select an item

• To view movie in fullscreen, the file has to be 320 x 192 resolution.

Playing from Specified Point

In Movie playback window (Portrait view), $\ \ \ \ \ \ \ \$ Time search \rightarrow Enter time \rightarrow $\ \ \ \ \ \ \ \ \ \$ (Jump)

Capturing Still Image from Movie

In Movie playback window (Portrait view), **→** *Capture frame*

Connecting to Web Link

In Movie playback window (Portrait view), \boxdot \rightarrow *Connect web link* \rightarrow *Yes*

Changing Playback Speed

In Movie playback window (Portrait view), 🗹 → **Playback speed** → Select an item

• Sound is muted while changing playback speed.

Checking Shortcut Key Assignments

Playlist

Adding Files to Playlist

■ → Media → Music/Movie → All music/All movies

■ To Add an Item

Highlight a file $\rightarrow \bigcirc \rightarrow Add$ to playlist \rightarrow Selected \rightarrow Select a playlist

■ To Add Multiple Items

$$\square$$
 \rightarrow *Add to playlist* \rightarrow *Multiple* \rightarrow Check files \rightarrow \square (Add) \rightarrow Select a playlist

Removing Files from Playlist

■ → Media → Music/Movie → Playlists → Select a playlist

■ To Remove an Item

 $\mathsf{Highlight} \ \mathsf{a} \ \mathsf{file} \ {\color{red} \rightarrow} \ {\color{red} \mathbf{\Sigma}} \ {\color{red} \rightarrow} \ {\color{red} \textit{Remove}} \ {\color{red} \rightarrow} \ {\color{red} \textit{Selected}}$

■ To Remove Multiple Items

- To Remove All Items

$$[\Sigma] \rightarrow Remove \rightarrow All \rightarrow Yes$$

Changing Order of Files in Playlist

■
$$\rightarrow$$
 Media \rightarrow *Music/Movie* \rightarrow *Playlists* \rightarrow Select a playlist \rightarrow Highlight a file \rightarrow (Σ)

Change order → Highlight a destination with \square → \square (OK)

Renaming Playlist

■ \rightarrow Media \rightarrow Music/Movie \rightarrow Playlists \rightarrow Highlight a playlist \rightarrow \boxdot \rightarrow Rename \rightarrow Enter playlist name

Deleting Playlist

■ → Media → Music/Movie → Playlists

■ To Delete an Item

Highlight a playlist
$$\rightarrow \bigcirc Delete \rightarrow Selected \rightarrow Yes$$

■ To Delete Multiple Items

- \square \rightarrow *Delete* \rightarrow *Multiple* \rightarrow Check playlists \rightarrow \square (Delete) \rightarrow *Yes*
- If all playlists are checked, enter Phone Password

■ To Delete All Items

$$[\Sigma] \rightarrow Delete \rightarrow All \rightarrow Yes$$

Entertainment

Entertainment Functions	8-2
S! Information Channel (Japanese)	8-3
Service Registration	.8-3
New Received Information	.8-3
Using Weather Indicator	.8-3
S! Quick News (Japanese)	8-3
Opening List	
Viewing Update Information	
Registering S! Quick News List	.8-4
Refreshing Entries Manually	.8-4
Deleting Entries	.8-4
Free Contents (Japanese)	8-5
Advanced Settings	8-5
S! Information Channel	.8-5
S! Quick News	.8-6



Entertainment Functions

Access the Internet to view or download content. Subscribe to content for automatic updates. Learn how to download and use content.



S! Information Channel/Weather (◆P.8-3)



Delivers subscribed content such as overnight news. Weather Indicator appears in Standby.

S! Quick News (**♦ P.8-3**)



View Yahoo! Keitai content update information.

Free Contents (�P.8-5)



Access free content.

Note

These services require separate subscriptions:

- S! Quick News
- S! Information Channel/Weather

S! Information Channel (Japanese)

- S! Information Channel delivers subscribed contents such as overnight news. Weather Indicator appears in Standby.
- This service is only available in Japan.
- S! Information Channel requires separate subscription.

Note

• Using S! Information Channel incurs Packet Communication charges.

Service Registration

- → Entertainment
 → S! Information Channell

 Weather → Registration|Cancel
- 2 Follow onscreen instructions

New Received Information

S! Information Channel contents is received automatically; notification appears in Standby.

- Select a notification
- Pollow onscreen instructions
 - · Operations are same as Yahoo! Keitai.

Using Weather Indicator

Upon subscription to S! Information Channel, Weather Indicator appears in Standby.

- 🔆 : Clear (daytime)
- 🕗 : Clear (nighttime)
- Cloudy :
- : Rain
- 🚱 : Snow
- 分: Thunderstorm
- Later
- / : Intermittent

Example : \bigcirc / \Longrightarrow \rightarrow Cloudy, Intermittent rain

• In addition to the above, other information such as rainfall probability or seasonal information appears.

Advanced

₹ Settings

- Set Weather Indicator Display Settings (P.13-20)
- Set Weather Indicator Update Notification (P.13-20)
- Set Weather Indicator Automatic Update (P.13-20)

S! Quick News (Japanese)

View Yahoo! Keitai content update information.

• S! Quick News requires separate subscription.

Opening List



- : Unread Special News
- : Unread News Flash
 : Unread General News
- : Unread General News
 : Read Special News
- Read News Flash
- 🗑 : Read General news
- S! Quick News List

Note

 Using S! Quick News incurs Packet Communication charges.

Viewing Update Information

- 1 → Entertainment → S! Quick News
- 2 Select content
- Select an entry
 - Press (Back) to return to S! Quick News/Contents list.
 - To connect to Internet and check for update, select an item → Yes.

Registering S! Quick News List

Register up to one special and five general news/ newsflash in S! Quick News list.

- → Entertainment → S! Quick
 News
- 2 Register contents → Yes
- 3 Select content → Follow onscreen instructions

Refreshing Entries Manually

- 1 → Entertainment → S! Quick News
- Update Contents
 - To Refresh Content
 Highlight content → 🖾 (Update) →
 Selected
 - To Refresh Multiple Contents

 (Update) → Multiple → Check contents → (Update)
 - To Refresh All Contents

 (Update) → All
 - Press ➤ (Cancel) / E to cancel update in process.

Deleting Entries

- 1 → Entertainment → S! Quick News
- 2 Delete Contents
 - To Delete Content

 Highlight content → 🐨 → Delete →

 Selected → Yes
 - To Delete Multiple Contents

 ② → Delete → Multiple → Check
 contents → ② (Delete) → Yes
 - To Delete All Contents $\textcircled{x} \rightarrow Delete \rightarrow All \rightarrow Enter Phone$ $Password \rightarrow \blacksquare$ (OK) $\rightarrow Yes$

Advanced

- Advanced Settings P.8-6
- Viewing Content Details
- Refreshing S! Quick News List
- Viewing S! Quick News from List

Free Contents (Japanese)

Access free contents.

- Tada-Deco (Graphic Mail) → Follow onscreen instructions

Note

• Using Free Contents incurs Packet Communication charges.

Advanced Settings

S! Information Channel

Viewing after Indicator Disappears

■ → Entertainment → S! Information Channel/Weather → What's new?

Viewing Information Previously Received

■ \rightarrow Entertainment \rightarrow S! Information Channel/Weather \rightarrow History \rightarrow Select an item

Receiving Disrupted Information Again

■ → Entertainment → S! Information Channel/Weather → Get latest contents → Yes

Showing Weather Indicator

■ → Entertainment → S! Information Channel/Weather → Weather Indicator → Weather

Updating Weather Indicator Manually

■ → Entertainment → S! Information Channel/Weather → Weather Indicator → Manual update → Yes **Changing Settings for Weather Indicator**

■ → Entertainment → S! Information Channel/Weather → Weather Indicator → Settings

- To Change Display Settings

 Display setting → On/Off
- To Change Missed Event Settings

 Missed event setting → On/Off
- To Set Auto Update

 Auto update → On/Off

S! Quick News

Viewing Content Details

In S! Quick News list, highlight content → 🖾 → **Details**

Refreshing S! Quick News List

In S! Quick News list, select content \rightarrow Highlight item $\rightarrow \bigcirc \rightarrow Update$

• Press ❤️ (Cancel) / to cancel.

Viewing S! Quick News from List

In S! Quick News list, select content → Highlight item

- $\rightarrow \ \ \ \ \rightarrow \ \ Access to web \rightarrow Yes$
- Press 🖅 (Cancel) / 🕮 to view S! Quick News List.

Updating S! Quick News List Automatically

- → Entertainment → S! Quick News → $\boxed{\Sigma}$ → Settings → Auto update
- To Update Newsflash Automatically

 Flash news → Select an item
- To Update General News Automatically General → On or Off
- To Update Special Automatically Special → On or Off
- Auto update is executed based on a set time.
 To view next update time, in S! Quick News list, highlight content → ♥ → Details.
- Set General to On to update automatically once a day.

- Setting Special to On may incur high Packet Communication charges.
- Set Special to On to update automatically once every four hours.
- Special and Flash news auto update is not executed between midnight and early a.m. If General is set, news is updated automatically during that period.
- Auto update is not performed while roaming. Instead, update manually (◆P.8-4).
- Auto update may fail outside service area or where signal conditions are poor.
- If auto update fails, update news manually (>P.8-4).
- Removing/replacing USIM Card cancels auto update.

Showing/Hiding Image

■ → Entertainment → S! Quick News → $\boxed{\Sigma}$ → Settings → Show image → On or Off

Deleting S! Ouick News List

■ → Entertainment → S! Quick News → \heartsuit → Settings → Delete S! Quick News List → Enter Phone Password → \blacksquare (OK) → Yes

Handy Extras

Useful Handset Applications	9-2
Alarm	
Setting/Canceling Alarms	
Editing Alarm	
Calendar	
Viewing Calendar Opening Calendar	
Saving Schedule	
Viewing Schedule	
Tasks	
Saving Tasks	
Viewing Tasks	9-6
Marking a Task as Completed	9-6
Stopwatch	9-6
Countdown Timer	9-7
World Clock	9-7
Viewing World Clock	9-7
Selecting Areas	9-7
Good Night Timer	9-7
Setting Good Night Timer	9-7
Calculator	9-8
Notepad	9-8
Adding Notepad	
Viewing Notepad	9-8
Barcode/Scan	
Scanning Barcode/QR Code/Name Card/Text/Keyword	
Using Barcode Files	
Creating QR Code	
Cricking Scarned Barcode rest	



Converter	
Converting Units	
Split the Bill	9-12
Voice Recorder	9-13
Voice Recorder Window	9-13
Recording Sound	
Playing Sound	9-13
File Viewer	9-14
Using File Viewer	9-14
Zooming In/Out	9-14
Magnifier	9-15
Dictionary	9-15
Dictionary	
Advanced Settings.	9-16
Advanced Settings	9-16 9-16
Advanced Settings	9 -16 9-16 9-16
Advanced Settings. Alarm Calendar Tasks Countdown Timer	9-16 9-16 9-16 9-18
Advanced Settings. Alarm Calendar Tasks Countdown Timer Good Night Timer	9-16 9-16 9-18 9-20
Advanced Settings Alarm Calendar Tasks Countdown Timer Good Night Timer Notepad	9-16 9-16 9-16 9-18 9-20 9-20
Advanced Settings Alarm Calendar Tasks Coundown Timer Good Night Timer Notepad Barcode/Scan	9-16 9-16 9-16 9-18 9-20 9-20 9-20
Advanced Settings Alarm Calendar. Tasks Countdown Timer Good Night Timer Notepad Barcode/Scan Currency/Unit Conversion	9-16 9-16 9-18 9-20 9-20 9-20 9-21 9-22
Advanced Settings Alarm Calendar Tasks Countdown Timer Good Night Timer Notepad Barcode/Scan Currency/Unit Conversion Split the Bill	9-16 9-16 9-18 9-20 9-20 9-20 9-21 9-22
Advanced Settings Alarm Calendar. Tasks Countdown Timer Good Night Timer Notepad Barcode/Scan Currency/Unit Conversion	9-16 9-16 9-18 9-20 9-20 9-20 9-21 9-22 9-22

Alarm



Set Alarms (♠P.9-3).

Calendar



See calendar and save schedule entries (�P.9-4).

Tasks



Create/view to-do lists (�P.9-6).

Stopwatch



Use handset as a stopwatch (◆P.9-6).

Countdown Timer



Set Alarm to sound after specified length of time (P.9-7).

World Clock



See current time in major world cities (�P.9-7).

Good Night Timer



Disable sound and Vibration for specified amounts of time (�P.9-7).

Calculator



Use handset as a calculator (♠P.9-8).

Notepad



Create/view text memos (�P.9-8).

Barcode/Scan



Scan barcodes or QR Codes; create QR Codes on handset (♠P.9-9).

Converter



Convert currencies or measurement units (�P.9-12).

Split the Bill



Calculate costs and amount of carry-over (�P.9-12).

Voice Recorder



Record/playback voice memos, etc. (P.9-13).

File Viewer



View documents (♠P.9-14).

Magnifier



Use handset as a magnifier (�P.9-15).

Dictionary



Find English expressions for Japanese words or vice versa (♠P.9-15).

Handy Extras

Alarm

Save up to ten Alarms. Use Alarm activation to activate or cancel Alarm settings. Set Alarms to repeat on specific days of the week or everyday.

Setting/Canceling Alarms

Example: Setting Alarm time


For other items, see "Editing Alarm" (♠P.9-3).

Setting

- \blacksquare \rightarrow Alarm
- Select Alarm → In Alarm time field, enter Alarm time
- - \triangle is shown.
 - Alarm is set to On automatically.
- At Alarm time, tone sounds and indicator appears. Handset vibrates if Vibration is not Off. When Snooze is *Off*, press (Stop) to stop Alarm and Vibration.
- If calling, dialing (Connecting... appears), or dialing (Dialling... appears) at Alarm time, an indicator appears. Press (Stop) to clear indicator, when Snooze is Off.
- When Snooze is set to something other than Off, Alarm sounds at the specified interval and specified number of times until Snooze is canceled. When you press (Snooze) while Alarm sounds. Alarm is set to sound again at the specified interval. Press (End) → End to stop Alarm and to clear indicator.

- If multiple Alarms are set for the same time, first set sounds first. If Schedule or Tasks Alarm is set. for the same time as Alarm (Tools), Alarm sounds first.
- When Manner mode is active, setting in Manner mode setting (P.9-17) applies.
- If Camera or Voice Recorder is active at Alarm Time, Alarm sounds upon operation termination.

Canceling Alarm

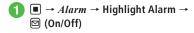

Editing Alarm



- \blacksquare \rightarrow Alarm \rightarrow Select Alarm
 - To Set Alarm Time Highlight Alarm Time → Enter Alarm time →
 - To Set Alarm to Repeat $Repeat \rightarrow Select item \rightarrow \square$ (Save)
 - If Selected day is selected, check day → ☑ (Done).
 - If you set Alarm for every day, Alarm will activate daily.
 - To Activate/Cancel Alarm for Holidays Except holidays \rightarrow On or Off $\rightarrow \square$ (Save)
 - To Set Snooze

 $Snooze \rightarrow Select an item \rightarrow \square$ (Save)

- · When Snooze is set to something other than Off. Alarm sounds at the specified interval and specified number of times until Snooze is canceled. When you press (Snooze) while Alarm sounds, Alarm is set to sound again at the specified interval. Press $(End) \rightarrow End$ to stop Alarm and to clear indicator
- . For Other, enter minutes.
- To Set Snooze Repeat Time (s) Snooze repeat times → Select an item →
- To Set Alarm Sound/Sound Video Alarm tone/video → Select a file location \rightarrow Select a file $\rightarrow \square$ (Save)
 - In list, press (Play) to play file.

■ To Adjust Alarm Volume

Volume → Adjust volume → \square (Save)

• Press (play) to play file.

■ To Set Vibration

Vibration → Select an item → \square (Save)

• Press (play) to view a pattern.

■ To Set Alarm Duration Time

Duration → Select an item → \square (Save)

• For Other, enter duration.

■ To Edit Alarm Name

Alarm name → Enter Alarm name → \square (Save)

 If a Memory Card file is set as Alarm sound, copy to handset confirmation appears. For a copy protected file, move to handset confirmation appears. Choose Yes to complete setting.

Advanced

• Advanced Settings P.9-16

- Resetting Alarm
- Setting Alarm Sound/Vibration in Manner Mode

Calendar

To view Calendar, add schedule in Calendar. Select from three view modes. Add Title, Start date or other information. Save up to 500 events including Tasks.

Viewing Calendar

Select from three view modes; Monthly view, Weekly view and Daily view.

- ■ → Calendar → 🖾 → View mode → Month/Week/Day to change view mode.
- If you select a date with Calendar entries, the entries appear as per the following.

Black: Monday to Friday

Blue: Saturday

Red: Sunday/Holiday


Dates in black rectangle: Highlighted position Day with gray background: Today

: Schedule registered



- To change Monthly/Weekly/Daily view window for previous/next month/week/day, press (# 35) / (# 34).
- If you select a date with Calendar entries or Alarms set, the titles of Calendar entries, icons and other items appear.
- : Schedule (No category)
- a : Schedule (Appointment)
- *: Schedule (Meeting)
- : Schedule (Business)
- e : Schedule (Personal)
- : Schedule (Holiday)
- .: Schedule (Anniversary)
- : Schedule (Birthday)
- Schedule (Phone call)
- : Schedule (Date)
- ♠ : Schedule (Travel)
 ★ : Schedule (Shopping)
- : Schedule (Miscellaneous)
- : Alarm set
- 🔁 : Repetition set

Opening Calendar

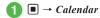

Saving Schedule

Save up to 500 events including Tasks.

Example: Saving title, start date & time, end date & time.

- For other items, see "Saving to Schedule" (◆P.9-16).
- **1** ■ → Calendar
- (Add new)
- 3 Enter title
- Select date & time → In Start date field, enter start date → In Start time field, enter start time
- In End date field, enter end date
 → In End time field, enter end time
 → (OK)
- **6 ☑** (Save)
- In Calendar, select date before 2 to enter the date in Start date or End date field.

Viewing Schedule

- **1** → Calendar
- 2 Select the day to view
- 3 Select a schedule
- To view the registered number of Schedule and Task in Calendar, press 🖼 → *Memory status*.

Advanced

• Advanced Settings P.9-16

- Switching View Mode
- Opening a Specific Date
- Viewing All Events
- Viewing Schedule by Category
- Sending Schedule
- Viewing Secret Schedule
- Checking Missed Alarm Event
- Viewing Calendar Memory Status
- Deleting Schedule
- Sending Selected Schedule
- Sending Schedule to Guests
- Saving Schedule

Example: Saving title, due date & time

- For other items, see "Saving Task" (�P.9-19).
- **1** → Tools → Tasks
- (Add new)
- 3 Enter a title
- Due date & time → In Due date field, enter due date → In Due time field, enter due time → ■ (OK)
- (Save)

Viewing Tasks

- **1** → Tools → Tasks
- Alternatively, → *Calendar* → Select date → *Tasks*.
- In Tasks, press to toggle (All tasks), (Completed tasks), (Uncompleted tasks), and (Expired tasks).

Marking a Task as Completed

- Highlight uncompleted task/ expired task → ☑ → Status → Completed



Highlight completed tasks → ♥ → Status
 → Uncompleted tasks to toggle tasks
 before due date as ♥ (Uncompleted) and
 tasks after due date as ♥ (Expired).

Advanced

• Advanced Settings P.9-18

- Sending Tasks
- Sorting Tasks
- Searching Tasks
- Saving Tasks
- Setting Alarm Sound/Vibration in Manner Mode
- Viewing Secret Tasks
- Viewing Missed Alarm Event
- Viewing Task Item Status
- Deleting Tasks

Stopwatch

Use handset as a stopwatch. Save up to ten lap times and total elapsed time.

- 1 → Tools → Stopwatch
- (Start)
- (Stop)
- Press (Restart) to start Stopwatch again.
- Press (Reset) to clear all times.

Countdown Timer

Count down up to 60 minutes.

- 1 → Tools → Countdown timer
- 2 Enter countdown time
- (Start)
- To stop counts, press
 (Stop).
- Press (Restart) to restart countdown.
- Press (Reset) to reset Countdown Timer.

Advanced

Advanced Settings P.9-20

Changing Alarm

World Clock

See current time in world's major cities.

Viewing World Clock

1 ■ → Tools → World clock

Selecting Areas

Set second time zone to show time in World clock.

- - ullet Alternatively, press lacktriangle o Settings
 - \rightarrow Display settings \rightarrow Clock/Calendar
 - → Dual clock
- 2 to select time zone
 - Press to select First clock field or Second clock field.
 - To set/cancel summer time setting, press [27] (DST).
- (Save)

Good Night Timer

Disable Alarm/Vibration/Light for a specific period of time.

- When Good night timer is On, Alarm/Vibration/ Light is set to Off, and volume level is set to 0 for functions that use sound.
- Even when Good night timer is On, other functions such as Voice Call, etc. are available.

Setting Good Night Timer

Note

- Deactivate other functions before Good night timer activates. If any other function is activated, Good night timer cannot be activated.
- 2 Timer
- 3 In Start time field, enter start time
 → In End time field, enter end time
 - Check Activate now to start timer after Good night timer is set.
- 4 (OK)
- Repeat → Select an item
 - Check *Every day* to repeat Alarm everyday.
 - If *Activate now* is selected in ③, setting in Repeat will be canceled.

- 6 Alarm sounds → On to activate
 Alarm with Alarm tone
- 🕜 🖾 (Save)
 - Good night timer will be **On** automatically.

Canceling Good Night Timer

- → Tools → Good night timer
- (On/Off)

Calculator

Perform four math operations of up to 13 digits.

- Enter numbers and operators

 - To exit calculator, press $\mathfrak{D} \to End$.
- To erase a symbol in a mathematical expression, press (CLEAN).
- To erase mathematical expression and result all at once, press

 (AC).

Notepad

Add up to 100 memos. Add memos even while placing calls (�P.3-18).

Adding Notepad

- 1 → Tools → Useful → Notepad
- (Add) → Enter text
- Select category field → Select category

Viewing Notepad

■ → Tools → Useful → Notepad
 → Select Notepad

<u>Advanced</u>

• Advanced Settings P.9-20

- Searching Notepad
- Viewing Notes by Category
- Sending Notepad
- Saving Notes to Data Folder
- Viewing Notepad Memory Status
- Deleting Notepad

Barcode/Scan

Use Camera to scan printed barcodes, QR Codes, name cards, text, or keywords. Use scanned barcodes to acquire images from websites, etc.

Scanning Barcode/QR Code/Name Card/ Text/Keyword

Note

- If text is too small to scan or is not focused on, scanned result may be incorrect.
- · Some barcodes/text may be invalid.
- Scan may fail if barcode/text is not clear.
- Indoors, scan may fail if handset shadows barcode/text.
- Hold handset approximately 10 cm away from barcode/text. If it does not scan, move handset slowly to adjust the distance to fix focus.
- Press

 (Macro) to set/cancel Macro.
- To adjust brightness, use .

Barcodes/QR Codes

Barcode Reader automatically identifies and scans Barcodes (JAN code) and QR Codes. Use scan results for handset operations such as calling.



QR Code

- 1 → Tools → Useful → Barcode/ Scan → Scan barcode
- ② Use Display to frame barcode →

 (Scan)
 - Camera focuses on and scans barcode automatically.

- Scan may fail when capturing multiple barcodes.
- JAN codes are one-dimensional codes made up of combinations of vertical bars of varying widths and spaces. Handset is not compatible with other 1D codes (e.g., ITF code, Code39, or Codebar/NW-7).
- QR Code is two-dimensional code with information in matrix.
- To scan multiple barcodes continuously, activate Barcode code reader → ☑ → Continues scan. After a scan is complete, choose Yes to scan the next barcode.
- Split barcodes cannot be opened or saved unless all split barcodes are scanned.
- You can use any phone numbers, mail addresses, or other items for Phone Book entries if they are contained in the scanned data (◆P.9-21). For usable information, the background color of the text turns theme color; however, if the text contains any character that is not allowed to be used for that information, the background area for the following characters does not change into theme color.
- Use QR Codes for text only. Handset cannot scan QR Codes created from media files.

- → Tools → Useful → Barcode/
 Scan → Name card reader
- Use Display to frame name card →(Scan)
 - Camera focuses on and scans name card automatically.
- To save the scanned result, press \blacksquare (Register) \rightarrow \boxtimes (Save).

Text

Scan text and save/edit it.

- 1 → Tools → Useful → Barcode/ Scan → Text reader
- 2 Use Display to frame text →

 (Scan)
 - Camera focuses on and scans text automatically.
 - Press 🗖 to adjust scanning range.
- To edit the scanned result, edit after scanning.
- To toggle recognition language, press

 → Language → Automatic/Japanese/English.

Scanning a Keyword & Looking It up in Dictionary

- 1 → Tools → Useful → Barcode/ Scan → Dictionary reader
- Use Display to frame word → ■ (Scan)
 - Camera focuses on and scans text automatically.
- 3 Select scanned result
- To toggle dictionary, press ☑ (Switch) → *English/Japanese*.

Use a barcode file saved in Data Folder.

- - With Memory Card inserted, select a file from Pictures or Digital Camera folder.
- Select a file
 - Camera focuses on and scans text automatically.
- For split barcodes, once one portion is scanned, the rest is automatically recognized and scanned.
 If file name or saved directory of a split barcode has been changed, select unrecognized part to be scanned.
- If file has been altered, barcode may not scan.
- If barcode is unrecognizable, notification appears.

Creating QR Code

Use Phone Book entry or enter text to create QR Code.

- A QR Code holds up to 211 single-byte or 105 double-byte characters.
- When volume of information is large, a split QR Code automatically appears (up to 16 QR Codes).
- Created QR Code is saved in Pictures in Data Folder. Check saved QR Code in Data Folder (◆P.9-10).
- 1 → Tools → Useful → Barcode/ Scan → Create QR code
- Create QR Code
 - To Create QR Code from Phone Book Entry

Phonebook \rightarrow Search and select entry (♠P.2-13) \rightarrow Select a phone number

- To Enter Account Details My details
- To Create Text QR Code Text input → Enter text
- (Save)
 - To specify saving location for created QR Code, press → Save to → Select an item → (Save).

- Phone Book entries converted to QR Codes contain Name, Reading name, Phone number, Mail address, Address, and Memo. Other items will not be included.
- Press (Send) in QR Code confirmation window to create S! Mail with the created QR Code attached.

Checking Scanned Barcode/Text

Check the saved scanned result.

- 1 → Tools → Useful → Barcode/ Scan → Scan results
- 2 Select a result
- If scanned result is too large, it will not appear. Some files cannot be opened.

Advanced

Advanced Settings P.9-21

- Renaming Scanned Data
- Viewing Scanned Data Detail
- Deleting Scanned Data

Converter

Convert various currencies or units of measurement.

Converting Currencies

- Select Original currency field → Select currency
- 3 In Original currency value field, enter value

Converter		
Cu	rrency	•
	JPY	
10000		
* .		
105. 48	USD	
74. 15	EUR	\circ
130759	KRW	300
64. 01	GBP	62
721. 6	CNY	•)
817. 5	HKD	*
Rate		Menu

- 4 See result in Converted currency value field
 - To save results to notepad, press 🖅 → Save to Notepad → Yes.

Converting Units

- ■ → Tools → Useful → Converter
 → Length, Weight, Volume, Area,
 or Temperature
- Select Original unit field → Select unit
- 3 In Original unit value field, enter value
- See result in Converted value field
 - To save results to notepad, press 🖾 → Save to Notepad → Yes.

Split the Bill

Divide Total Cost with two different ratios.


- → Tools → Useful → Split the
 bill
- In Total Cost field, enter price
- 3 In Number of people A field, enter number
- 4 In Number of people B field, enter number
- 뒼 🖻 to charge ratio
 - Cost and amount of carry-over for A and B are shown.
- In Split the Bill window, press (Settings) → **Payment unit** → Select an item → (CLEAR).
- To change method of collecting extra changes, in Split the Bill window, press (★) (Settings) → Collect extra fee → On/Off → (□♠).

Voice Recorder

Record up to 60 minutes; activate from Tools, or via Menu in Data Folder, or during a call, Message creation window.

Voice Recorder Window

Use Softkeys and Multi Selector operations to control Voice Recorder.

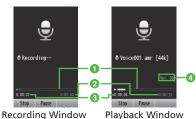

Status bar

2 Recordable time (while recording)/

Playback time (while playing)

3 Elapsed time

4 Volume

Recording Sound

Recorded sound is saved to Ring Songs $\boldsymbol{\cdot}$ Tones in Data Folder.

- 1 → Tools → Useful → Voice recorder
- (Record)
- 3 🖾 (Stop)
 - After recording, files are saved automatically to *Ring Songs · Tones* under Data Folder.
 - When recordable time has elapsed, recording automatically ends.
 - After pressing (Pause), press 🖾 (Save) to save file.
 - Press (Pause) to pause recording. Press
 (Record) to resume recording.
- To quickly confirm recorded content, press (Play). Press (Pause) again to pause playback.
- ullet To start the next recording, press lacktriangle lacktriangle

Playing Sound

Play sound file saved in Data Folder.

- 2

 Data folder
- 3 Select a sound file
- Use 🚺 to adjust volume.
- Use 🗖 to rewind/fast forward.

Advanced

• Advanced Settings P.9-22

- Moving Recorded Sound File
- Copying Recorded Sound File
- Sending Recorded Sound File
- Editing Recorded Sound File Name
- Viewing Recorded Sound File Details
- Deleting Recorded Sound File

File Viewer

View document files in Standard view or Fullscreen. Rotate Display image using menu.

Fullscreen. Rotate Display image using menu.

• This quide describes standard view operations.





Standard View

Fullscreen View

Note

- If a document includes many pages or complicated designs, all pages of the document may not appear properly.
- To view file containing Japanese/English/ Hangul/Chinese (simplified characters)/ Portuguese properly, set the language.

Using File Viewer

- 1 → Tools → Useful → File
- Select a file
- Scroll the file
 - Use 🔲 to flip page.
- Open PDF, XLS, DOC, PPT, or TXT files saved in Data Folder. Select an image file saved in Data Folder and File viewer is activated automatically.
- Files with up to approximately 4 MB can be browsed. However, browse files of up to 4 MB. In some cases, files under 4 MB may not be browsable.

Zooming In/Out

- 1 → Tools → Useful → File viewer → Select a file



- Alternatively, press ☑ / ☑ to adjust magnification.
- Press ☑ → *Fit to screen* → *Page*/*Width*/ *Height* to change Display view.

Advanced

• Advanced Settings P.9-23

- Deleting Files
- Toggling Standard View/Fullscreen View
- Searching Characters in Page
- Going to Pages
- Rotating Display Image
- Capturing Images
- Sending Files
- Editing File Name
- Protecting File
- Viewing File Details
- Viewing Shortcut Key

Magnifier

Use Magnifier to view small characters or distant scenery.



- \blacksquare \rightarrow Tools \rightarrow Useful \rightarrow Magnifier
- Press (Macro) to set Macro.
- To adjust brightness, press 🗖.
- To adjust zoom, press 🗖.
- Alternatively, press → Camera → Magnifier.

Dictionary

Look up words in English/Japanese dictionaries.

- 2 English dictionary or Japanese dictionary
- 3 Enter a word
 - Select a word
 - To save search data to notepad, press (Save) → Yes.

Advanced Settings

Alarm

Resetting Alarm

 \blacksquare \rightarrow Alarm

■ To Reset an Alarm

Highlight alarm $\rightarrow \bigcirc \rightarrow Reset \rightarrow Selected \rightarrow Ves$

■ To Reset Multiple Alarms

■ To Reset All Alarms

 $\Sigma \rightarrow Reset \rightarrow All \rightarrow Yes$

Setting Alarm Sound/Vibration in Manner Mode

■ \rightarrow Alarm \rightarrow \boxdot \rightarrow Manner mode setting \rightarrow Alarm sound/Vibration \rightarrow On or Off

Calendar

Adding Schedule Quickly

■ \rightarrow Calendar \rightarrow \boxdot (Hold: Quick) \rightarrow Enter title \rightarrow Select date \rightarrow In Start date field, enter start date \rightarrow In Start time field, enter start time \rightarrow In End date field, enter end date \rightarrow In End time field, enter end time \rightarrow \blacksquare (OK)

To set schedule for all day, check All day → ■
 (OK).

Saving to Schedule

 \blacksquare \rightarrow Calendar \rightarrow \boxdot (Add new)

→ Enter title → Select date & time → In Start date field, enter start date → In Start time field, enter start time → In End date field, enter end date → In End time field, enter end time → \blacksquare (OK)

■ To Set Schedule for All Day

Select date & time \rightarrow Check $All\ day \rightarrow \blacksquare$ (OK) $\rightarrow \boxtimes$ (Save)

■ To Set Category

 $Category \rightarrow Select an item \rightarrow \square (Save)$

■ To Set Alarm

 $Alarm \rightarrow Alarm \ time \rightarrow Select \ an item$

 \rightarrow **Duration** \rightarrow Select an item \rightarrow **Alarm tone/ video** \rightarrow Select a file location \rightarrow Select a file

- \rightarrow *Volume* \rightarrow Adjust Volume \rightarrow *Vibration* \rightarrow Select an item \rightarrow \square (Done) \rightarrow \square (Save)
- For *Other* in *Alarm time* or *Duration*, enter Alarm time or duration
- While selecting *Alarm tone/video*, press

 (Play) to playback a file.
- While selecting *Vibration*, press ☑ (Play) to view a pattern.
- If a Memory Card file is set as Alarm sound, copy to handset confirmation appears. For a copy protected file, move to handset confirmation appears.

■ To Repeat a Set Schedule

Repeat → Select an item → Enter a number of times to repeat → \blacksquare (OK) → \boxtimes (Save)

 If No repetition is selected, you do not need to enter the number of times to repeat.

- During a call, while dialing (*Connecting...* appears) or while dialing (*Dialling...* appears), at Alarm time, an indicator appears. Press (Stop) to clear indicator.

■ To Set Location

Location → Enter location → \square (Save)

■ To Set Guests

Guests → From phonebook/Enter number/ Enter address → Search and select phone number (P.2-13)/Enter number/Enter address → O (OK) → O (Save)

- Press 🗹 → Add to add guests.
- To remove guest, perform following operations.
 - To Remove a Guest Highlight a guest → 🖅 → Remove → Selected
 - To Remove Multiple Guests

 \nearrow \rightarrow Remove \rightarrow Multiple \rightarrow Check guests

- ightarrow (Remove)
- To Remove All Guests
- $[Y] \rightarrow Remove \rightarrow All$

■ To Automatically Delete Schedule

 $Expiry \rightarrow Select an item \rightarrow \square$ (Save)

 Upon expiry, schedule is automatically deleted from Calendar (e.g. if Expiry is After 1 year, and Repetition is unset, schedule is deleted one year from event end date). If Repetition is set, schedule is deleted one year after last repetition. Select Off to cancel Auto delete.

- To Set Schedule in Detail

 Details → Enter text → 🖾 (Save)
- To Set Secret Secret \rightarrow On or Off \rightarrow \bowtie (Save)

Editing Schedule

■ → *Calendar* → Select date → Select schedule → ■ (Edit) → Edit and save to Schedule (◆P.9-16)

Switching View Mode

 \blacksquare \rightarrow Calendar \rightarrow \boxdot \rightarrow View mode \rightarrow Month/ Week/Day

Opening a Specific Date

- \blacksquare \rightarrow Calendar \rightarrow \boxdot \rightarrow Go to
- To Show Today's Date Today
- To Toggle to a Specified Date

 Date → Enter date

Viewing All Events

 \blacksquare \rightarrow Calendar \rightarrow \boxdot \rightarrow Show all events

Viewing Schedule by Category

 \blacksquare \rightarrow Calendar \rightarrow \boxdot \rightarrow List by category \rightarrow Select item

Sending Schedule

■ \rightarrow Calendar \rightarrow \boxdot \rightarrow Send via infrared \rightarrow Check Schedule \rightarrow \boxdot (Send) (\clubsuit P.12-3)

Setting Holiday

- \rightarrow Calendar \rightarrow v \rightarrow Settings \rightarrow Set holiday \rightarrow (if holiday is already added, v \rightarrow Add \rightarrow) Enter title \rightarrow o (Save)
- To change date, highlight *Date* → Enter date.
- To change frequency, $Frequency \rightarrow Select$ an item.

Changing Holiday Display

Editing Added Holiday

 \blacksquare → Calendar → \boxdot → Settings → Set holiday → Select holiday → Edit the entry → \boxdot (Save)

Deleting Added Holiday

Setting Beginning of Week

 \blacksquare \rightarrow Calendar \rightarrow \boxdot \rightarrow Settings \rightarrow Starting day \rightarrow Sunday of Monday

Setting Default Calendar View

- \blacksquare \rightarrow Calendar \rightarrow \boxdot \rightarrow Settings
- → Default view mode → Select an item

 \blacksquare → Calendar → \boxdot → Settings → Manner mode setting → Alarm sound/Vibration → On or Off

Viewing Secret Schedule

 $\blacksquare \to Calendar \to \boxdot \to Unlock\ temporarily \to Enter Phone Password <math>\to \blacksquare$ (OK)

Checking Missed Alarm Event

■ → Calendar → 🖾 → Missed alarm event → Select a schedule

Viewing Calendar Memory Status

- \blacksquare \rightarrow Calendar \rightarrow \boxdot \rightarrow Memory status

Deleting Schedule

- → Calendar
- To Delete an Entry

Select a date in Monthly view or Weekly view \rightarrow Highlight schedule $\rightarrow \boxdot Delete \rightarrow Selected \rightarrow Yes$

■ To Delete Schedules for Selected Date

Select a date in Monthly view or Weekly view $\rightarrow [Y] \rightarrow Delete$

- Alternatively, in Monthly view/Weekly view →
 Highlight date → ♥ → Delete → All this
 day → Yes.
- To Delete Schedules for a Specified Period of Time

In Monthly view or Weekly view, \bigcirc \rightarrow **Delete** \rightarrow **Periods** \rightarrow In From field, enter start date \rightarrow In To field, enter end date \rightarrow (Delete) \rightarrow **Yes**

■ To Delete Schedules of Currently Shown Month/Week

In Monthly view or Weekly view, $\bigcirc \rightarrow Delete$ $\rightarrow This month$ or $This week \rightarrow Yes$

■ To Delete All Schedules before the Highlighted Date

In Monthly view or Weekly view, $\[\bigcirc \] \rightarrow Delete \]$ $\rightarrow All \ past \ data \rightarrow$ Enter Phone Password $\rightarrow \[\blacksquare \] (OK) \rightarrow Yes \]$

■ To Delete All Schedules

In the Monthly view or Weekly view, 🔄

- → Delete → All → Enter Phone Password
- \rightarrow \blacksquare (OK) \rightarrow Yes
- To Delete Multiple Schedules Listed by Category

In Monthly view or Weekly view, $\bigcirc \rightarrow List\ by$ category \rightarrow Select a category

- To Delete All the Schedules in Category

 → Delete → All (This category) → Yes

- To Delete from Daily View
 - To Delete A Schedule
 In Daily view, highlight schedule → w →
 Delete → Selected → Yes
 - To Delete Multiple Schedules
 In Daily view → ☑ → Delete → Multiple → Check Schedule → ☑ (Delete) → Yes

 To Delete All the Schedules
 - To Delete All the Schedules
 In Daily view → Y → Delete → All → Enter
 Phone Password → (OK) → Yes

Sending Selected Schedule

■ \rightarrow *Calendar* \rightarrow Select date \rightarrow Highlight schedule \rightarrow \boxdot \rightarrow *Send*

■ To Send via Message

Via message → Check schedules → \square (Send) → (\bigcirc P.4-4 S! Mail \bigcirc 2)

■ To Send via Infrared

Via infrared → Check schedules → \square (Send) (\bigcirc P.12-3)

Sending Schedule to Guests

■ \rightarrow Calendar \rightarrow Select date \rightarrow Highlight schedule \rightarrow \boxdot \rightarrow Send invitation \rightarrow \boxdot (Send)

Saving Schedule

 \blacksquare → Calendar → Select date → highlight schedule → \boxdot → Save to Data Folder → Phone/Memory card → Yes

- Save location can be set to *Memory card* if inserted.

Tasks

Saving Task

 \blacksquare \rightarrow *Tools* \rightarrow *Tasks* \rightarrow \boxdot (Add new) \rightarrow Enter title \rightarrow *Due date & time* \rightarrow In Due date field, enter due date \rightarrow In Due time field, enter due time \rightarrow \blacksquare (OK)

■ To Set Alarm

- If Other is selected in Alarm time/Duration, enter alarm date and time/duration.
- While selecting *Vibration*, press

 (Play) to view a pattern.

- If a Memory Card file is set as Alarm sound, copy to handset confirmation appears. For a copy protected file, move to handset confirmation appears. Choose Yes to complete setting.
- At Alarm time, tone sounds and indicator appears. Press (Stop) to stop Alarm and indicator is cleared. If no Alarm is stopped, Missed Alarm message appears. Select the message to view the event.
- During a call, while dialing (Connecting...
 appears) or while dialing (Dialling... appears),
 at Alarm time, an indicator appears. Press
 (Stop) to clear indicator.
- To Set Priority

 $Priority o ext{Select an item} o ext{ } ext{$oxed{\square}$ (Save)}$

■ To Set Details

 $Details \rightarrow \text{Enter content} \rightarrow \square \text{ (Save)}$

■ To Activate/Cancel Secret

 $Secret o On ext{ or } Off o ext{ } extstyle ext{ } ext{(Save)}$

Editing Tasks

■ \rightarrow *Tools* \rightarrow *Tasks* \rightarrow Select a task \rightarrow ■ (Edit) \rightarrow Edit Task (\diamondsuit P.9-18)

Sending Tasks

- \blacksquare \rightarrow Tools \rightarrow Tasks \rightarrow \boxdot \rightarrow Send
- To Send via Message

Via message → Check tasks → \square (Send) → (\bigcirc P.4-4 S! Mail \bigcirc 2)

■ To Send via Infrared

Via infrared → Check tasks → \square (Send) → (\bigcirc P.12-3)

Sorting Tasks

■ → Tools → Tasks → 🖾 → Sort by
→ Deadline of Priority

Searching Tasks

Saving Tasks

- → Tools → Tasks → Select a task → 🖾 → Save to Data Folder → Phone/Memory card → Yes
- Alternatively, in list, press → Save to Data
 Folder → Phone/Memory card → Yes.
- With Memory Card inserted, *Memory card* can be set as save location.

Setting Alarm Sound/Vibration in Manner Mode

■ → Tools → Tasks → x → Manner mode setting → Alarm sound/Vibration → On or Off

Viewing Secret Tasks

 \blacksquare \rightarrow *Tools* \rightarrow *Tasks* \rightarrow \boxdot \rightarrow *Unlock temporarily* \rightarrow Enter Phone Password \rightarrow \blacksquare (OK)

Viewing Missed Alarm Event

■ \rightarrow *Tools* \rightarrow *Tasks* \rightarrow \boxdot \rightarrow *Missed alarm event* \rightarrow Select a missed task

Viewing Task Item Status

- \blacksquare → Tools → Tasks → \boxdot → Memory status

Deleting Tasks

■ → Tools → Tasks

■ To Delete a Task

Highlight task $\rightarrow \textcircled{v} \rightarrow \textit{Delete} \rightarrow \textit{Selected} \rightarrow \textit{Yes}$

- Alternatively, in Detailed information window, press ¬ Delete → Yes.
- To Select a Tab & Delete

Highlight Completed tasks/Uncompleted tasks/Expired tasks tab $\rightarrow \bigcirc D$ Delete

- To Delete a Task
 Selected → Yes
- To Delete Multiple Tasks
 Multiple → Check tasks → ☑ (Delete) →
 Yes
- To Delete All the Tasks in a Tab

 All this tab → Yes
- To Delete Multiple Tasks
 - \bigcirc \rightarrow *Delete* \rightarrow *Multiple* \rightarrow Check tasks \rightarrow \bigcirc (Delete) \rightarrow *Yes*
- To Delete All Tasks

 \longrightarrow **Delete** \rightarrow **All tasks** \rightarrow Enter Phone Password \rightarrow \bigcirc (OK) \rightarrow **Yes**

Countdown Timer

Changing Alarm

 \blacksquare \rightarrow *Tools* \rightarrow *Countdown timer* \rightarrow \boxdot (Settings)

■ To Set Duration

Duration → Select item

- When selecting *Other*, enter duration time.
- To Set Alert Tone

Sounds/**Alerts** → Select a file location → Select file

- While selecting file, press (Play) to check the sound.
- If a Memory Card file is set to alarm, copy to handset confirmation appears. For a copy protected file, move to handset confirmation appears. Select Yes to complete settings.

■ To Set Volume

Volume → Adjust volume

■ To Set Vibration

Vibration → Select item

• While selecting a Vibration pattern, press (Play) to check the pattern.

Good Night Timer

Resetting Good Night Timer

Notepad

Changing Notepad Category

■ → *Tools* → *Useful* → *Notepad* → Select a Notepad → Select Category field → Select category

Editing Notepad

 \blacksquare \to *Tools* \to *Useful* \to *Notepad* \to Select a Notepad \to Select Edit memo field \to Edit Notepad

Searching Notepad

■ → Tools → Useful → Notepad → 🖾 →
Search → Enter search text

Viewing Notes by Category

Sending Notepad

 \blacksquare \rightarrow Tools \rightarrow Useful \rightarrow Notepad \rightarrow \boxdot \rightarrow Send

- To Use Notepad Data as Message Text

 As message text \rightarrow (\bigcirc P.4-4 S! Mail \bigcirc)
 - If Notepad contains Hangul characters, Graphic Mail and Auto art will be unavailable.
- To Send via Message

Via message → Check Notepads → \square (Send) → (\P) (A-4 S! Mail \square)

■ To Send via Infrared

Via infrared → Check Notepads → \square (Send) → $(\bigcirc$ P.12-3)

• Press (Send) in Details window to send.

Saving Notes to Data Folder

 \blacksquare → *Tools* → *Useful* → *Notepad* → Highlight Notepad → \boxdot → *Save to Data Folder* → *Phone/Memory card* → *Yes*

- With Memory Card inserted, Memory Card is selectable.

Viewing Notepad Memory Status

■ → Tools → Useful → Notepad → 🖾 → Memory status

Deleting Notepad

 \blacksquare \rightarrow Tools \rightarrow Useful \rightarrow Notepad

■ To Delete a Notepad

Highlight a Notepad $\rightarrow \textcircled{r} \rightarrow \textbf{\textit{Delete}} \rightarrow \textbf{\textit{Selected}} \rightarrow \textbf{\textit{Yes}}$

- To Delete Multiple Notepads
 - $\[egin{aligned} & \nearrow & Delete & \rightarrow & Multiple & \rightarrow & \text{Check Notepads} \\ & \rightarrow & \[egin{aligned} & \bigcirc & \text{Check Potens} \\ & & \rightarrow & \[egin{aligned} & \bigcirc & \text{Check Notepads} \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\ & & & \\$
- To Delete All Notepads
 - \longrightarrow **Delete** \rightarrow **All** \rightarrow Enter Phone Password \rightarrow \bigcirc (OK) \rightarrow **Yes**

Barcode/Scan

Using Scanned Data

■ → Tools → Useful → Barcode/Scan → Scan barcode → Scan a barcode

■ To Call Scanned Phone Number

Highlight a number with **TEL**: or ten to 32-digit number starting with $0 \rightarrow \blacksquare$ (Select) \rightarrow **Voice call** or **Edit before call**

- If *Edit before call* is selected, edit phone number then press / ().
- To Send Message to Scanned Phone Number Highlight a number with *TEL*: or ten to 32-digit number starting with 0 → (Select) → *Create message* → *S! Mail* or *SMS* (�P.4-4 S! Mail ⑤, �P.4-5 SMS ⑤)
- To Send Message to Scanned Mail Address
 Highlight mail address contained with @ → ■
 (Select) → Create message → (�P.4-4 S! Mail
 ⑤)

■ To Access Scanned URL

Highlight URL starting with $http: // \rightarrow \blacksquare$ (Select) $\rightarrow Open \ Yahoo! \ Keitai/Open \ PC \ site$ $browser \rightarrow Yes$

- To Save Scanned Entry to Phone Book
 Highlight an entry → (Select) → ⊠ (Save)
- To Save Scanned Number, etc. as a New Phone Book Entry

Highlight a phone number, etc. $\rightarrow \blacksquare$ (Select) $\rightarrow Add$ to phonebook $\rightarrow New \rightarrow (\bigcirc P.2-12$ Creating New Entries $\bigcirc P.2-12$

■ To Add Scanned Number, etc. to an Existing Phone Book Entry

Highlight a phone number, etc. $\rightarrow \blacksquare$ (Select) $\rightarrow Add$ to $phonebook \rightarrow Update \rightarrow$ Search and select entry (\bigcirc P.2-13) \rightarrow Creating New Entries (\bigcirc P.2-12)

\blacksquare To Add Scanned URL to Bookmarks

Highlight a URL $\rightarrow \blacksquare$ (Select) $\rightarrow Add$ to bookmark \rightarrow Enter a title

■ To Copy Scanned Mail Address or Phone Number, etc.

■ To Paste Scanned Phone Number, Mail Address, etc. to Message Text

■ To Copy Scanned Characters

Scanning Name Card & Setting to Save

■ \rightarrow Tools \rightarrow Useful \rightarrow Barcode/Scan \rightarrow Name card reader \rightarrow [27] (Settings)

■ To Set Scan Method

Scan mode → Automatic scan/Manual Scan

■ To Set Save Location

Save to → Phonebook/Phone (vCard)/ Memory Card (vCard) ■ To Save Scanned Name Card Image to Phone Book

 $Add\ image \rightarrow On/Off$

Using Scanned Name Card

 \blacksquare → Tools → Useful → Barcode/Scan → Name card reader → Scan name card

■ To Paste Scanned Text to Message

★ Send → S! Mail/SMS → (♠ P.4-4 S! Mail
 ♠ P.4-5 SMS ②)

■ To Copy Scanned Character

- \bigcirc \rightarrow *Copy* \rightarrow Highlight the first character \rightarrow \bigcirc (Start) \rightarrow Highlight the last character \rightarrow \bigcirc (End)
- To Save Scanned Name Card to Notepad

Attaching Created QR Code to Message to Send

Using Saved Scanned Data

■ \rightarrow *Tools* \rightarrow *Useful* \rightarrow *Barcode/Scan* \rightarrow *Scan results* \rightarrow Select scanned result \rightarrow \boxdot

■ To Send Scanned Result

Send \rightarrow S! Mail or SMS \rightarrow (�P.4-4 S! Mail ②, P.4-5 SMS ②)

■ To Edit Text

Manual edit → Edit text → \square (Save)

■ To Copy Scanned Result

 $Copy \rightarrow Highlight the first character \rightarrow \blacksquare$ (Start) $\rightarrow Highlight the last character <math>\rightarrow \blacksquare$ (End)

■ To Save Scanned Result to Notepad

 \boxtimes \rightarrow Save to Notepad \rightarrow Edit memo \rightarrow Select category \rightarrow \boxtimes (Save)

Renaming Scanned Data

$$\blacksquare$$
 → Tools → Useful → Barcode/Scan → Scan results → Highlight result → \boxdot → Rename → Enter name

Viewing Scanned Data Detail

■ \rightarrow Tools \rightarrow Useful \rightarrow Barcode/Scan \rightarrow Scan results \rightarrow Highlight result \rightarrow \bigcirc \rightarrow Detail

Deleting Scanned Data

■ → Tools → Useful → Barcode/Scan → Scan results

■ To Delete a Selected Result

Highlight result $\rightarrow \textcircled{v} \rightarrow Delete \rightarrow Selected \rightarrow Yes$

■ To Delete Multiple Results

■ To Delete All Results

 \nearrow **Delete** \rightarrow **All** \rightarrow Enter Phone Password \rightarrow \bigcirc (OK) \rightarrow **Yes**

Currency/Unit Conversion

Viewing Exchange Rate

Changing Exchange Rate

 \blacksquare → Tools → Useful → Converter → Currency → \boxdot (Rate) → Highlight a currency → \blacksquare (Edit) → Enter rate → \blacksquare (Save)

Adding Currency Unit

 \blacksquare → Tools → Useful → Converter → Currency → \boxdot (Rate) → \boxdot (Add) → Enter currency unit name → Enter rate

Deleting Added Currency Unit

■ \rightarrow Tools \rightarrow Useful \rightarrow Converter \rightarrow Currency \rightarrow \bowtie (Rate) \rightarrow Highlight currency \rightarrow \bowtie (Delete)

Split the Bill

Calculating Price with Calculator

In Split the Bill window, highlight Total Cost $\rightarrow \boxtimes$ (Calc)

Saving Costs & Carry-over

In Split the Bill window, \blacksquare (Save) \rightarrow Yes

 To save costs or carry-over, Total Cost and Number of People in A or B must be entered.

Voice Recorder

Setting Recorded Sound File as Ringtone, etc.

 \blacksquare → *Tools* → *Useful* → *Voice recorder* → Record a sound → \boxtimes (Set as) → Select a Ringtone

 If *Caller ringtone* is selected, search and select entry (♠P.2-13).

Moving Recorded Sound File

■ To Move a File

Highlight file $\rightarrow \boxdot \rightarrow Move \rightarrow Selected \rightarrow$ Select save location

■ To Move Selected Files

 $\bigcirc Move \rightarrow Multiple \rightarrow Check files \rightarrow \bigcirc (Move) \rightarrow Select save location$

■ To Move All Files

 $\longrightarrow Move \rightarrow All \rightarrow$ Select save location

Copying Recorded Sound File

 \blacksquare → Tools → Useful → Voice recorder → Record a sound → \boxdot → Data folder

■ To Copy a File

Highlight file $\rightarrow \boxdot$ \rightarrow *Copy* \rightarrow *Selected* \rightarrow Select save location

■ To Copy Selected Files

 \bigcirc \rightarrow $Copy \rightarrow Multiple \rightarrow$ Check files \rightarrow \bigcirc (Copy) \rightarrow Select save location

■ To Copy All Files

 $> Copy \rightarrow All \rightarrow$ Select save location

Sending Recorded Sound File

- To Send via Message
 Via message → (◆ P.4-4 S! Mail ②)
- To Send via Infrared Via infrared (◆P.12-3)

Editing Recorded Sound File Name

 \blacksquare → Tools → Useful → Voice recorder → Record a sound → \boxdot → Rename → Enter file name

Viewing Recorded Sound File Details

Deleting Recorded Sound File

■ \rightarrow Tools \rightarrow Useful \rightarrow Voice recorder \rightarrow Record a sound \rightarrow \boxed{v} \rightarrow Delete \rightarrow Yes

Changing Default Name at Saving

■ → Tools → Useful → Voice recorder →

→ Rec. settings → Default name → Enter file name

Changing Recording Time

- \blacksquare → Tools → Useful → Voice recorder → \boxdot → Rec. settings → Recording time → Select an item
- If Other is selected, enter recording time.

Changing Default Saving Location

■ \rightarrow Tools \rightarrow Useful \rightarrow Voice recorder \rightarrow \boxdot \rightarrow Rec. settings \rightarrow Save to \rightarrow Select an item

Viewing Previous Sound Files

- \rightarrow Tools \rightarrow Useful \rightarrow Voice recorder \rightarrow \boxed{x} \rightarrow Data folder
- To Change View Mode
 - $[v] \rightarrow View\ by \rightarrow File\ name/Title$
- To Sort Files
 - $\Sigma \rightarrow Sort \ by \rightarrow Select \ item$
- To View Secret Voice Files
- Toggle Handset/Memory Card
 - → Memory switch → Phone+Memory card/
 Phone/Memory card

File Viewer

Deleting Files

- \blacksquare \rightarrow Tools \rightarrow Useful \rightarrow File viewer
- To Delete a File

Highlight file $\rightarrow \bigcirc Delete \rightarrow Selected \rightarrow Yes$

- To Delete Selected Files

$$\nearrow$$
 \rightarrow **Delete** \rightarrow **Multiple** \rightarrow Check files \rightarrow \boxtimes (Delete) \rightarrow **Yes**

■ To Delete All Files

$$\longrightarrow$$
 Delete \rightarrow **All** \rightarrow Enter Phone Password \rightarrow \bigcirc (OK) \rightarrow **Yes**

Toggling Standard View/Fullscreen View

■ \rightarrow Tools \rightarrow Useful \rightarrow File viewer \rightarrow Select file \rightarrow \boxdot \rightarrow Full screen/Normal screen

Alternatively, press .

Searching Characters in Page

■ \rightarrow *Tools* \rightarrow *Useful* \rightarrow *File viewer* \rightarrow Select a file \rightarrow \boxdot \rightarrow *Search* \rightarrow Enter keyword

- After the search results appear, to find the next/ previous word in the document that matches the same search word, press (Next).
- To exit the search mode, press (LEAR).

Going to Pages

- \rightarrow *Tools* \rightarrow *Useful* \rightarrow *File viewer* \rightarrow Select a file \rightarrow \boxdot \rightarrow *Go to* \rightarrow Select an item
- For Page, specify page number.
- Use 🖸 to go to another page.

Rotating Display Image

- \blacksquare \rightarrow *Tools* \rightarrow *Useful* \rightarrow *File viewer* \rightarrow Select file \rightarrow \boxdot \rightarrow *Rotate*
- Alternatively, press (3 ...).

Capturing Images

- Captured image is saved in JPEG format to Pictures in Data Folder of handset.

Sending Files

- \rightarrow *Tools* \rightarrow *Useful* \rightarrow *File viewer* \rightarrow Select a file \rightarrow \bigcirc \bigcirc \rightarrow *Send*
- To Send via Message

Via message → (�P.4-4 S! Mail ②)

■ To Send via Infrared

Via infrared (�P.12-3)

Alternatively, select File viewer → Highlight file
 → Send → Via message/Via infrared.

Editing File Name

- \rightarrow *Tools* \rightarrow *Useful* \rightarrow *File viewer* \rightarrow Select a file \rightarrow \boxdot \rightarrow *Rename* \rightarrow Enter file name
- Alternatively, select *File viewer* → Highlight file → 🖾 → *Manage* → *Rename* → Enter file name.

Protecting File

- \rightarrow *Tools* \rightarrow *Useful* \rightarrow *File viewer* \rightarrow Select a file \rightarrow \boxdot \rightarrow *Lock* or *Unlock*
- · Only files saved in handset are selectable.
- Set file lock to restrict renaming, moving, or deleting.

Viewing File Details

- \blacksquare \rightarrow *Tools* \rightarrow *Useful* \rightarrow *File viewer* \rightarrow Select a file \rightarrow \boxdot \rightarrow *Details*
- Alternatively, select *File viewer* → Highlight file
 → 🖅 → *Details*.

Assigning Scroll Range

 \blacksquare → *Tools* → *Useful* → *File viewer* → Select a file → \boxdot → *Settings* → *Panning* → Select an item

Fitting to Display

■ \rightarrow *Tools* \rightarrow *Useful* \rightarrow *File viewer* \rightarrow Select a file \rightarrow \boxdot \rightarrow *Settings* \rightarrow *Reflow* \rightarrow *On* or *Off*

Setting Map

- \rightarrow *Tools* \rightarrow *Useful* \rightarrow *File viewer* \rightarrow Select a file \rightarrow \boxdot \rightarrow *Settings* \rightarrow *Map on* \rightarrow *On* or *Off*
- · Current position is framed in blue.
- To view/hide map temporarily, in file viewer, press

 □ (Show) / □ (Hide).

Setting Controller Display

- \blacksquare → Tools → Useful → File viewer → Select file → \boxdot → Settings → Controller → On or Off
- \bullet Set to ${\it On}$ to show controller only for fullscreen.

Editing Default File Name at Screen Capture

■ → Tools → Useful → File viewer → Select a file → 🖾 → Settings → Screen capture name → Enter file name

Viewing Shortcut Key

■ → Tools → Useful → File viewer → Select file → Shortcut

Handset Security

Handset Security	10-2
Changing Phone Password Changing Phone Password Changing PIN/PIN2	10-3
Phone Lock Activating/Canceling Phone Lock Password Lock Activating/Canceling PIN Code Activating/Canceling USIM Lock Secure Remote Lock	10-3 10-4 10-4 10-4
Function Lock	10-5 10-5 10-5
Restoring Default Settings Clearing Phone Memory Resetting Settings All Reset	10-6 10-6



Handset Security

This handset features built-in security measures for safer handset use.

Locking & Restricting Handset Operations

Lock handset for information security. Handset operations cannot be executed while locked.

Password
 Use Phone Lock, Password Lock, or USIM Lock (◆P.10-3).



Function Lock

Activate to require Phone Password to use Phone Book, Messaging, or other privacy related functions.



Restoring Default Settings


Clear Phone Book entries; restore function settings to defaults.

Changing Phone Password

There are two security codes; Phone Password and PIN/PIN2.

Changing Phone Password

Default: Phone Password is set to "9999".

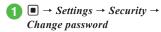



- Enter current Phone Password →

 (OK)
- 3 Enter new Phone Password (fourto eight-digit) → (OK)
- 4 Enter new Phone Password again → (OK)

Advanced

₹ Settings

Change Phone Password (P.13-21)

Changing PIN/PIN2

- 1 → Settings → Security → Change PIN or Change PIN2
 - Set *PIN certification* to *On* to enable PIN code (◆P.10-4).
- Enter current PIN or PIN2 →

 (OK)
- 3 Enter new PIN or PIN2 (four- to eight-digit) → (OK)
- 4 Enter new PIN or PIN2 again (fourto eight-digit) → ■ (OK)

Phone Lock

The following lock functions are available:

- Phone Lock
- Password Lock
- PIN Certification
- USIM Lock

Activating/Canceling Phone Lock

Activate this function to require Phone Password each time handset is powered on.

- 1 → Settings → Security
- Phone lock → On or Off
- 3 Enter Phone Password → (OK)
- All operations including receiving calls are not accepted unless you enter Phone Password.

10

Password Lock

When active, press any key in Standby for Phone Password entry window. Enter Phone Password to cancel Password Lock and access handset.

- 1 → Settings → Security
- Password lock → On
- 3 Enter Phone Password → (OK)
- Even if Password Lock is set, some operations such as receiving calls can be performed.
- Upon Password Lock activation, Standby Display reappears. Press any key to show Phone Password entry window. Enter Phone Password to unlock, Password lock is automatically set to Off.

Activating/Canceling PIN Code

PINs are security codes for USIM Card. For details, see "USIM Card" (♠P.1-4).

To activate PIN Certification each time the power is turned on, set this function to **On**.

Setting

- → Settings → Security
- 2 PIN certification → On or Off
- 3 Enter PIN \rightarrow (OK)

Canceling

If PIN or PIN2 is incorrectly entered three consecutive times, PIN Lock or PIN2 Lock is activated to restrict handset operations.

Note

- For more information about PUK and PUK2, contact SoftBank Mobile Customer Center, General Information (◆P.14-29).
- Entering PUK incorrectly ten consecutive times activates PUK Lock. Purchase USIM Card reissue at a SoftBank Shop.

To cancel PIN Lock or PIN2 Lock, perform following operations.

- 1 In PUK Code entry window, enter PUK Code → (OK)
- Enter new PIN or PIN2 (four- to eight-digit) → (OK)
- 3 Enter new PIN or PIN2 again →
 (OK)

Activating/Canceling USIM Lock

Activate this function to require USIM Password to use handset with a different USIM Card.

- $2 USIM lock \rightarrow On or Off$
- 3 Enter USIM Password (four- to eight-digit) → (OK)
 - To set to *On*, enter USIM Password (fourto eight-digit) again and press (OK).
- USIM Password is dedicated to USIM Card authentication. If USIM Password matches, another USIM Card can be used in handset. Change USIM Password each time *USIM lock* is set to *On*.
- If you forget USIM Password, insert USIM Card with *USIM lock* set to *On* and reset all settings (◆P.10-7).

Secure Remote Lock

If handset is lost, lock handset functions or clear handset data remotely from PCs or other mobile phones.

The following functions are available in Secure Remote Lock.

- Lock
- Unlock
- Clear data
- · Confirm handset status
- · Show history
- For details, see SoftBank Mobile Website, or contact SoftBank Mobile Customer Center, General Information (P.14-29).

Advanced

3 Settings

- Activate/Cancel Phone Lock (P.13-21)
- Activate/Cancel Password Lock (P.13-21)
- Change PIN (@P.13-21)
- Change PIN2 (@P.13-21)
- Activate/Cancel USIM Lock (P.13-21)

Function Lock

Activating Function Lock

Activate this function to require Phone Password to open Phone Book, Calendar/Notepad/Tasks, Yahoo! Keitai, Messages, Call Log, or Data Folder.

- **2** Check functions \rightarrow **□** (Save)
- 3 Enter Phone Password → (OK)

Activating/Canceling Secret Mode

Select *Hide* to activate this function and hide secret Phone Book entries, Messaging folders, Calendar schedules, or Tasks.

- 2 Enter Phone Password → (OK)
- 3 Show or Hide
- Powering off then back on activates Secret Mode.

Activating/Canceling Secret Data Folder

Activate **Secret mode** to see additional Secret folders within **Data Folder**.

- **2** Enter Phone Password → \blacksquare (OK)
- 3 Show or Hide
- Powering off handset then back on activates **Secret data folder**.

Activating Mobile Tracker

Activate this function to send SMS notification to a specified address when a different USIM Card is inserted. Specify up to two addresses.

- 2 Enter Phone Password → (OK)
- \mathbf{S} Select Activation field $\rightarrow On$
- Select Recipients field

- Select To field → Direct input → Enter address $\rightarrow \square$ (Done)
 - To enter an address from Phone Book. select To field $\rightarrow Phonebook \rightarrow Search$ and select entry (♠P.2-13)
 - → Select a phone number.
- 6 Select Sender field → Enter sender name
- - . When a different USIM Card is inserted. SMS notification is sent to the specified address upon handset activation. Nothing appears on handset whose USIM Card is replaced. If Phone Password is incorrectly entered three consecutive times when trying to set Mobile Tracker, SMS notification is also sent
 - To delete a recipient address, press <a> and select *Remove* in **6**3.

Advanced

4 Settings

- Activate/Cancel Function Lock (P.13-21)
- Activate/Cancel Secret Mode (P.13-21)
- Set Secret Mode on Sub-folder in Data Folder (@FP.13-21)
- Set Mobile Tracker (P.13-21)

Restoring Default Settings

Clearing Phone Memory

Clear Data Folder, Messaging, handset Phone Book entries, Calendar/Tasks, Notepad, or User Dictionary. Alternatively, clear all handset files at once.

- → Settings → Memory settings \rightarrow *Phone memory* \rightarrow \square (Clear)
- Check items $\rightarrow \square$ (Clear)
- Enter Phone Password →

 (OK) → Yes

Resetting Settings

Reset settings to clear saved contents/settings and resort default settings.

The following settings are affected.

Item	Affected Settings	
_	• Alarms	
Settings	Every setting	

The following settings are not affected.

Item	Unaffected Settings
_	Calendar
Tools	Tasks Exchange rate in Currency Notepad
Data Folder	Contents in each folder
Phone	 Phonebook Call log Numbers in My details Group name in Group settings Favorites Mail group
Settings	
Phone settings	User dictionary
Security	USIM lock PIN certification Change PIN Change PIN2
Call settings	Voicemail on settings Call forwarding on settings Call waiting settings Call barring settings Edit Black list contents
Messaging	Messages in folders

- Enter Phone Password → (OK)
 Yes
 - · Handset restarts.

All Reset

Restore handset to defaults and delete Phone Book entries (Phone), Call Log, Messaging, and Data Folder contents/settings. However, preinstalled files are not deleted.

- Enter Phone Password → (OK)
 Yes
 - Handset restarts.

Advanced

₹ Settings

- Restore Settings to Default Values (@P.13-21)
- Delete Phone Book Entries, Messages, etc. (P.13-21)

Data Folder & Memory Card

Data Folder	11-2
Default Folders	11-2
Viewing Files	11-3
Using Image Viewer	
Zooming In/Out	11-4
Saving Face Link	11-4
Face Link	11-5
Managing Files/Folders	11-6
Creating Folders	
Renaming File/Folder	
Moving File/Folder	
Copying Files/Folders	
Deleting Files/Folders	
Memory Card	11-8
Initializing Memory Card	
Memory Card Installation	
Viewing Memory Card Files	11-9
Viewing Memory Status	11-9
Advanced Settings	11-10
Viewing Files	
Managing Files/Folders	
Memory Status	11-12



Data Folder

Handset files are organized in folders according to file format.

Default Folders

Handset automatically sorts files into these folders:

Pictures

Image files captured with handset Camera

Digital camera

Image files captured with handset Camera (available only when Memory Card is inserted)

My Pictograms

Downloaded Pictograms

Mail Art

Image related to message

Ring Songs · Tones

Voice Recorder files, downloaded music, and other sound files

Music

Downloaded Chaku-Uta®

Videos

Handset video files

Message Templates S! Mail Templates

Other documents

Document or graphic files requiring File viewer for use on handset, vcf files, vcs files, etc.

- Save up to 999 files/folders in each default folder.
- In a folder, use *Memory status* to confirm memory. Alternatively, confirm memory in *Settings* (◆P.11-9).
- appears in some folders as downloaded site shortcut. Select the link to access website via Yahoo! Keitai.
- If files in one default folder are too large, handset performance may fall.

Viewing Files

View files in Data Folder, like image, animation, etc. Select Data Folder, file list appears.

- 1 → Data Folder
- 2 Select a file location
- 3 Select a file in List window

File List Indicators

- : Nontransferable and unusable
- ☐ : Protected
- •• Copy protected file (transferable, content key valid)
- : Copy protected file (transferable, content Key expired)
- S : Copy protected file (nontransferable, content key valid)
- Copy protected file (nontransferable, content key expired)
- Nontransferable/copy protected files other than preinstalled ones cannot be used.

Activating Camera/Voice Recorder from Data Folder

- With Pictures folder open, activate Camera in Camera mode (◆ P.11-11).
- With Videos folder open, activate Camera in Video mode (�P.11-11).
- With Ring Songs Tones folder open, activate Voice Recorder (◆P.11-11).

Using Image Viewer

View images in Portrait or Landscape view. Wide image is shown as small image to show entire image.

- 1 → Data Folder → Pictures
- 2 Select a file



- 3 to change image
- Some images may not appear.

Zooming In/Out

- → Data Folder → Pictures
 → Select an image
- (Zoom)
- 3 🗹 / 🖾 to zoom in/out
 - To scroll window, use 🗖.

Saving Face Link

Link images to Phone Book entries to place calls or message directly from still images.

Link up to ten Phone Book entry items to a still image.

Capturing & Setting Still Images

- ∑ → Settings → Settings → Setup
 → Face link display → On →
 - (Done)
- 3 🗖 (🗖



- Available only when Face Link is On and Auto save is Off or On (Preview manual).
- If captured image is recognized, frame appears.
- If Face Link has been saved, name appears. If not, ? appears.

- If captured image is not recognized, frame does not appear. The image is saved and Viewfinder reappears.
- If *Auto save* is *On*, image will be saved and Viewfinder will reappear.
- $4 \quad \boxdot \rightarrow Edit face link$
- Search and select entry (♦P.2-13)
- **6** (OK)

Adding Data to Saved Image

- **1** → Data Folder → Pictures
- 2 Select a file
- 4

 □ → Add name tag
- 5 Search and select entry (�P.2-13)
- 🗿 🖸 to move name tag → 🔳 (Save)

Face Link

Place a call or message via Face Link image.

Calling/Messaging from Image Window

- ② → Face link → (③)
 If multiple Face Links are set, use ② to select one
- Place a call or message
 - To View Other Face Link Images This person's photo
 - To Select Images to be Saved as Face Link Images
 - This person's photo → \boxdot → Add → Select file → \blacksquare (Register)
 - For an image without Face Link, select
 This person's photo → 🗑 → *Add* → Select a file → *Yes* → Use 🔂 to
 move name tag → (Save).
 - To Search & Save Same Face Link Images

This person's photo $\rightarrow \boxdot$ \rightarrow Face search \rightarrow Yes

- To Cancel Same Face Link Images

 This person's photo \rightarrow Highlight a file $\rightarrow \boxed{x} \rightarrow Remove \rightarrow Selected \rightarrow Yes$
 - To Cancel Multiple Face Link Images
 This person's photo → 🐨 → Remove
 → Multiple → Check files → 🖾
 (Remove) → Yes
 - To Cancel All Face Link Images
 This person's photo → 🐨 → Remove
 → All → Enter Phone Password
 → 🔳 (OK) → Yes
- To Place a Voice Call Call
- To Send Face Link Data via Message Mail → (�P.4-4 S! Mail ⑤)
- To View Phone Book Phonebook

Sending Face Link Image via Message

- 2 \bigvee \rightarrow Face link \rightarrow Highlight name tag
- 4 Send (♠P.4-4 S! Mail ⑤)

Advanced

Advanced Settings P.11-10

- Viewing Slide Show
- Purchasing/Downloading Content Key
- Deleting File
- Confirming File Details
- Capturing Document View Page
- Going to PDF/DOC File View Pages
- Searching PDF/DOC File Text

Managing Files/Folders

Make sub-folder under default folders. Copy, move, or delete folder or file.

Creating Folders

Create sub-folder in default folders.
Use **Set secret** to hide created folder.

- 1 → Data Folder
- 2 Select default folder
- - If there is no sub-folder or file in the folder, menu varies.
- 4 Enter folder name
 - With Memory Card inserted, select *Phone!* Memory card → Enter folder name.
- New folder cannot be created in a created folder.

Renaming File/Folder

- 1 → Data Folder
- Select default folder → Highlight a file or sub-folder
- 3 ☑ → Manage → Rename/Rename folder
- 4 Enter name
- · Protected files cannot be renamed.

Moving File/Folder

When Memory Card is inserted, move files or subfolders between handset (Phone) and Memory Card.

Note

- Protected files cannot be moved.
- Downloaded files may not appear/play properly if moved to another device or if a different USIM Card is inserted.
- Nontransferable and unusable files (
), protected files (□), or nontransferable and Copy protected files (
) or
) cannot be moved to Memory Card.
- **1** → Data Folder
- Select default folder
- 3 Highlight a file or sub-folder → 🗹 → *Move*
- Move files or sub-folders
 - To Move an Item Selected
 - To Move Multiple Items

 Multiple → Check files or sub-folders

 → □ (Move)
 - To Move All Files/Sub-folders in the Same Folder All

- Select a destination folder
 - → Move here
 - When Memory Card is inserted, select *Phone* or *Memory card*, then select a move destination folder.
- If file/sub-folder with the same name exists, text entry window appears; edit file/sub-folder name.
- To move a file set for Wallpaper or Ringtone to Memory Card, a confirmation appears. Choose **Yes** to release the setting and move the file. When moving multiple or all files, choose **No** to move only files without set functions. Press (Fig. 1) (Cancel) to cancel moving.

Copying Files/Folders

Paste copied file in the folder/sub-folder, or paste copied sub-folder in the folder. When Memory Card is inserted, copy folders between handset and Memory Card.

Note

- Nontransferable files cannot be copied.
- 1 → Data Folder
- Select default folder
- 4 Copy file or sub-folder

- To Copy an Item Selected
- To Copy Multiple Items

 Multiple → Check files or sub-folders

 → 図 (Copy)
- To Copy All Files/Sub-folders in the Same Folder All
- 5 Select a destination folder
 - → Paste here
 - When Memory Card is inserted, select *Phone* or *Memory card*, then select a copy destination folder.
- When pasting files/sub-folders in the same location as the original, numbers such as "_001" are automatically added to pasted file/sub-folder names.
- If file/sub-folder with the same name exists, text entry window appears; edit file/sub-folder name.

Deleting Files/Folders

- **1** → *Data Folder* → Select a file location
- Highlight a file in List window
 → \(\sigma \) → Delete
- 3 Delete a file
 - To Delete an Item

 Selected → Yes
 - To Delete Multiple Items

 Multiple → Check files → 🖾 (Delete)

 → Yes
 - To Delete All Files in the Same Folder All → Enter Phone Password → (OK) → Yes
- To delete folder, highlight folder → ② → *Delete folder* → (Enter Phone Password → (OK) as required) → *Yes*.
- When deleting a file that is set to a function or protected, a confirmation appears. Choose Yes to cancel the setting and delete the file. When deleting multiple files, choose Yes → Except protected to delete only files not set to functions and unprotected files.
- When deleting files with Content Key, a confirmation appears. Choose Yes to delete both file and Content Key.

Advanced

Advanced Settings P.11-11

- Editing Image with Image Editor
- Sending Files
- Sorting Files
- Adding Sound Files/Video Files to Playlist
- Managing Content Key in Data Folder
- Deleting Content Key
- Setting Secret in Sub-folder
- Canceling Secret Setting Temporarily
- Activating Camera Mode
- Activating Video Mode
- Recording Sound
- Setting & Canceling File Lock
- Setting Images as Wallpaper, etc.
- Setting Sound File to Ringtone in Normal Mode
- Setting Video File to Ringtone in Normal Mode

Memory Card

Handset is compatible with microSD™ and microSDHC™ Memory Card. Purchase Memory Card to use Memory Card-related handset functions.

- Use only recommended Memory Card. Other memory cards may not perform properly.
- Do not place labels or stickers on Memory Card.
 These items may affect card performance or result in lost information.
- · Never disassemble or modify Memory Card.
- Do not expose Memory Card to strong impacts, pressure or liquids.
- Do not touch Memory Card terminals or expose them to metal objects.
- Do not expose Memory Card to dust, high humidity, or excessive heat.
- Do not use in the presence of corrosive gases.
- · Avoid heat sources and do not dispose of in fire.
- Memory Card is a consumable item. Card performance deteriorates with usage.
- SoftBank Mobile recommends 64, 128, 256, 512
 MB, 1, 2 GB microSD™/microSDHC™ Memory
 Cards or 4. 8, 16 GB microSDHC™ Memory Cards.

Note

Protect Important Information

- Memory Card files may be lost or damaged by accident or due to a malfunction. Back up entries and store separately. SoftBank Mobile is not liable for damage from lost or altered information.
- Memory Cards do not have Write Protection Switch. There is a risk of accidental erasure or overwriting of files.

Initializing Memory Card

Formatting a Memory Card on handset deletes all previously saved files, etc. Format Memory Card on handset before use.



Memory Card Installation

Turn handset power off before inserting or removing Memory Card.

Note


- Do not apply excessive force when inserting/removing Memory Card; may damage Memory Card or handset.
- Take care not to lose removed Memory Card.
 Avoid touching/damaging Memory Card
- Avoid touching/damaging Memory Card contacts when inserting/removing it.
- Do not remove battery/Memory Card while card files are being accessed; may damage handset/card or result in damaged/lost files.

Inserting

1 Open Port Cover




2 With contacts up, insert Memory Card until it clicks

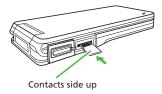

3 Close Port Cover

Removing

- 1 Open Port Cover
- Push Memory Card lightly until it clicks

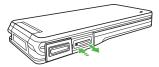

Card pops out; remove it



4 Close Port Cover

Viewing Memory Card Files

- **1** → Data Folder
- 2 → Memory switch → Memory card
 - Inset Memory Card before checking it.
 - ullet To check handset Data Folder, press $lacktrel{\mathbb{F}}$
 - \rightarrow Memory switch \rightarrow Phone.

Advanced

₹ Settings

- Check Memory Card Details (

 P.13-22)
- Rename Memory Card (P.13-22)
- Format Memory Card (P.13-22)
- Set Default Memory to Phone/Memory Card (P.13-22)

Viewing Memory Status

View following information.

- · Status of memory in Data Folder
- · Status of message folder
- Status of Calendar or Tasks items registered
- · Status of Notepad items
- Status of Phone Book (handset and USIM Card)
- ■ → Settings → Memory settings
 → Memory status



- 2 View each item
 - To View Data Folder Status

 Data Folder → Phone memory/

 Memory card
 - To View Messaging Status Messaging
 - Received, Drafts, Sent and Unsent Message memory appears by Size.
 - Press ☑ (Count) to see messaging memory by Count.
 - USIM Card SMS appears in *Count* only.

- To View Calendar/Tasks Status

 Calendar/Tasks
- To View Notepad Status Notepad
- To View Phone Book Entries Phonebook

Advanced

₹ Settings

- Confirm Total/Remaining Phone Memory (P.13-22)
- Clear Phone Memory (P.13-22)
- View Memory Status (P.13-22)

Advanced Settings

Viewing Files

Viewing Slide Show

 \blacksquare → *Data Folder* → *Pictures* → Highlight a file in List window → \blacksquare (View) → \boxdot → *Slide show*

- To pause/resume Slide Show, press (Pause) /
 (Restart).
- To stop Slide Show, press ☑ (Stop).

Purchasing/Downloading Content Key

- → *Data Folder* → Select a file location
- ightarrow Highlight a file ightarrow ightarrow ightarrow Manage
- → Download Content key → Yes

Deleting File

■ → *Data Folder* → Select a file location → Select a file → (x) → *Delete* → (y)

Confirming File Details

- → *Data Folder* → Select a file location
- \rightarrow Select a file $\rightarrow [x] \rightarrow Details$

Capturing Document View Page

- → Data Folder → Select a file location
- → Select file → 🖅 → Screen capture
- Captured image is saved to Pictures folder.

Going to PDF/DOC File View Pages

- → Data Folder → Select a file location → Select a file → 🖾 → Go to → Previous page/ Next page/First page/Last page/Page
- If Page is selected, specify page number.

Searching PDF/DOC File Text

- → *Data Folder* → Select a file location
- \rightarrow Select a file \rightarrow \bigcirc \rightarrow Search \rightarrow Enter text
- Words that match are highlighted. Press (Next) to search next.

Managing Files/Folders

Editing Image with Image Editor

- → *Data Folder* → Select a file location → Select a file → $\mathbf{\Sigma}$ → *Edit* → *Image editor*
- → (♦P.6-10 Editing Still Images 4)

Sending Files

- \rightarrow *Data Folder* \rightarrow Select a file location \rightarrow Highlight a file \rightarrow $[\mathfrak{V}]$ \rightarrow *Send*
- To Send via Message
 Via message (�P.4-4 S! Mail ②)
- To Send via Infrared

 Via infrared → (� P.12-3)

Sorting Files

- → *Data Folder* → Select a file location → v → *Sort by* → Select an item
- · Sort by following order:
 - Descending order by date (Date)
- File type (Type)
- File name (Name)
- Ascending order by file size (Size)
- Title (Title)
- Content Key status (Content key type)
- Folders appear at the top of list.
- When selecting *Type*, files are sorted in alphabetical order according to file extensions.
- When selecting *Name*, files are sorted in order of numerics → alphabets → Japanese syllabary.

- Files in Message templates folders cannot be sorted by *Type*.
- When selected *Content key type*, files appear as follows: Unrestricted → Nontransferable → Copy Protected (content key valid) → Copy Protected (content key expired) → Invalid Nontransferable.
- · Files without title names cannot be sorted by Title.

Adding Sound Files/Video Files to Playlist

- → Data Folder → Ring Songs · Tones, Music, or Videos → Highlight a file → \heartsuit → Manage → Add to playlist
- To create a new playlist and add files to it, press
 (New) in Add to Playlist window.
- Adding to Playlist is unavailable for some files.

Managing Content Key in Data Folder

- \rightarrow *Data Folder* \rightarrow Select a file location \rightarrow \boxdot \rightarrow *Manage* \rightarrow *Content key info* \rightarrow Select Content Key to view
- When a folder containing a Content Key is opened, all Data Folder/Memory Card Content Keys appear.
- If no files require Content Key, Content key info does not appear.

Deleting Content Key

- → Data Folder → Select a file location → v → Manage → Content key info
- To Delete an Item

■ To Delete all Items

- \longrightarrow **Delete** \rightarrow **All** \rightarrow Enter Phone Password \rightarrow \bigcirc (OK) \rightarrow **Yes**
- If no files require Content Key, Content key info does not appear.

Setting Secret in Sub-folder

- → *Data Folder* → Select Sub-folder and save location → Highlight folder → 🖾 → *Set secret* → Enter Phone Password → (OK)
- Only folder saved in handset is selectable.
- To release the secret setting, press → Unset secret → Enter Phone Password → (OK).

Canceling Secret Setting Temporarily

 \blacksquare → *Data Folder* → Select a folder location → \boxdot → *Unlock temporarily* → Enter Phone Password → \blacksquare (OK)

Activating Camera Mode

■ \rightarrow Data Folder \rightarrow Pictures \rightarrow \boxdot \rightarrow Take photo

Activating Video Mode

■ → Data Folder → Videos → 🗹 → Record video

Recording Sound

■ → Data Folder → Ring Songs · Tones → ★ → Record sound

Setting & Canceling File Lock

- \rightarrow *Data Folder* \rightarrow Select a file location \rightarrow Highlight a file \rightarrow \boxdot \rightarrow *Lock/Unlock*
- flightight a file 1 C 1 Eoch C
- Save file to handset to set file lock.
- Set file lock to restrict renaming, moving, or deleting.

Setting Images as Wallpaper, etc.

- \rightarrow *Data Folder* \rightarrow Select a file location \rightarrow Select a file \rightarrow \searrow \rightarrow *Set as*
- To Set Image as Wallpaper

 Wallpaper → Preview image → (Set)
- To Set Image as Incoming Image

 Caller ID → Search and select Phone Book
 entry (�P.2-13) → (Set)
- This setting is unavailable for some files.

Setting Sound File to Ringtone in Normal Mode

- → *Data Folder* → Select a file location → Highlight a file → (x) → *Set as*
- To Set to Ringtone for Each Function

 Voice ringtone/Message ringtone/Missed

 call notification ringtone/S! Quick News

 ringtone/Delivery report ringtone
- To Set as Ringtone for Phone Book Entry Caller ringtone → Search and select entry (�P.2-13)
- If a Memory Card file is set as incoming image or Ringtone, copy file to handset first confirmation appears. If file is copy protected, move file to handset first confirmation appears. Choose Yes to complete setting.

 Only copy protected MPEG4 AAC, AAC+, or Enhanced AAC+ files can be set. However, copy protected files with play count restrictions cannot be set.

Setting Video File to Ringtone in Normal Mode

- → *Data Folder* → Select a file location
- \rightarrow Highlight a file \rightarrow r \rightarrow Set as
- To Set to Ringtone for Voice Call Voice ringtone
- To Set to Ringtone for Phone Book Entry

 Caller ringtone → Select entry (�P.2-13)
- If a Memory Card file is set, copy to handset confirmation appears. For a copy protected file, move to handset confirmation appears. Select Yes to complete settings.
- Only copy protected MPEG4 AAC, AAC+, or Enhanced AAC+ files can be set. However, copy protected files with play count restrictions cannot be set.

Registering File to Other Functions

- → Data Folder → Other documents
- → Select vcf/vcs/vnt/opml file → (Register)
- Register vcf, vcs, vnt, opml, etc. files saved in Data Folder to Phone Book, Calendar, Notepad or RSS feed.

Memory Status

Deleting Registered/Saved Data

- → Data Folder → Memory status → Phone/Memory card as required → Highlight item → 🖾 (Delete) → Yes
- To Delete an Item/Multiple Items

 Check items → □ (Delete) → Yes
- To Delete all Items
 - $(Mark all) \rightarrow (Delete) \rightarrow Enter Phone Password \rightarrow (OK) \rightarrow Yes.$
- Delete message folder messages, Data Folder files, Calendar/Tasks, Phone Book entries or Notepads.
- If file (s) are locked or set for another function, a confirmation appears.

Connectivity & File Backup

File Transfers & Backup	12-2
Infrared	12-3
Aligning Infrared Ports	12-3
Sending Files	
Receiving Files	12-4
USB Connection	12-4
USB Connection	12-4
Sending/Receiving in Mass Storage	12-5
Memory Card Backup	12-5
Backup Precautions	
Backing up to Memory Card Manually	
Loading from Memory Card	12-6
Backing up to Memory Card Automatically	12-6
S! Addressbook Back-up (SAB)	12-7
Before Using S! Addressbook Back-up	
Precautions for Synchronizing	12-7
Synchronizing Phone Book Entries	12-8
Setting Auto Sync	
Advanced Settings	12-9
S! Addressbook Back-up	



File Transfers & Backup

Transfer files via Infrared, etc. Use S! Addressbook Back-up (SAB)* to back up handset Phone Book entries. *S! Addressbook Back-up requires separate subscription.

File Transfers

Use these functions to transfer handset files:

- · Infrared (♠P.12-3).
- USB Connection (�P.12-4).




File Backups

Back up handset files to Memory Card or PC (�P.12-5).



Back up Phone Book entries to Server via S! Addressbook Back-up. Restore lost Phone Book entries from S! Addressbook Back-up. Edit SAB via PC (◆P.12-7).

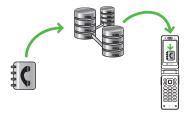

Infrared

Exchange files wirelessly with infrared-compatible handsets. PCs or other devices.


- Handset Infrared is based on IrMC1.1.
 Transmissions may be unavailable for some functions, even when IrMC1.1 is supported on the other party's handset.
- Transmissions may be inhibited in direct sunlight, under fluorescent lighting or near infrared devices
- Send and receive Phone Book entries or Calendar entries, Account Details, Schedules, Tasks, still images, videos, sound files, music files, etc.
 Send either all Phone Book entries, Calendar/Tasks or Bookmarks/Notepad/Received msg./Drafts/Sent msg. in a single transfer.
- Authorization Code is a four-digit code used to execute infrared file transfers between devices.
 Enter same Authorization Code on both devices when using Transfer All.

Note

- Infrared is unavailable while Internet services are in use, or while editing messages/files.
- Some received files cannot be saved on handset.

Aligning Infrared Ports

 Place devices within 30 cm. Align device ports. Do not place objects in between devices.

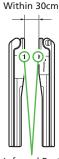

Infrared Port

- · Maintain port alignment until transmission ends.
- A soiled port may inhibit transmission. Clean port with a soft cloth beforehand.
- If transfer fails, a confirmation appears: "Device not found Reconnect?" Choose *Yes* to retry.

Sending Files

First, activate Infrared on the other device.

Sending Items One at a Time

- → Infrared → Transfer files
- Select folder → Check files
- 3

 ☐ (Send)
- Alternatively, in list, \boxdot \rightarrow *Send* \rightarrow *Via infrared* \rightarrow Check files \rightarrow \boxdot (Send).

Transferring All

- \bigcirc $\blacksquare \rightarrow Infrared \rightarrow Transfer all$
- 2 Enter Phone Password → (OK)
- 3 Phonebook, Calendar/Tasks, Bookmarks, Notepad, Received msg., Drafts or Sent msg.
 - For *Phonebook*, choose *Yes* to transfer images.
- 4 Enter Authorization Code (fourdigit) → ■ (OK)

Receiving Files

Note

• Files cannot be received when Kev Lock is active or during Software Update.

Receiving One Item at a Time

- \blacksquare \rightarrow Infrared \rightarrow Receive
 - · Handset is ready to receive files.
- Begin sending from other device within three minutes
- Save confirmation appears, choose Yes
 - . To save image file, choose Pictures or Mail Art.
 - To save pictograms, choose Pictures, Mail Art or My Pictograms.
 - Press 🗹 (Cancel) to cancel receiving.
 - Press (to terminate reception.
- If vcf file contains incoming image exceeding 100KB, handset deletes the image then saves it in Phone Book

Receiving All

- \blacksquare \rightarrow Infrared \rightarrow Receive
 - Handset is ready to receive files.
- Begin sending from other device within three minutes
- **Enter Authorization Code (four**digit) → **(OK)**
 - · Enter same Authorization Code as sender.
- Select a saving method
 - To Add Files as New Entries Add new
 - To Overwrite Current Entries Delete & Overwrite → Yes → Enter Phone Password → (OK)
 - Receiving all entries deletes existing handset entries except for Account Details. Receiving Account Details deletes existing Account Details except for handset phone number
 - Press (x) (Cancel) to cancel receiving.
 - Press (to terminate reception.

Advanced

₹ Settings

- Receive Infrared Transmission (P.13-23)
- Transfer Account Details (TP P.13-23)
- Transfer Files (P.13-23)
- Transfer All Phone Book Entries, Calendar/Tasks , Bookmarks, Notes or Messages at Once (P.13-23)

USB Connection

Connect handset to PC to transfer files between devices

Handset supports USB 2.0.

Install USB driver first. For installation instructions. PC operating environment, etc., access SAMSUNG Website (http://ip.samsungmobile.com/pc/ lineup/001download.html).

USB Connection

The following operations are available:

- · Transfer handset Data Folder files to PC
- Import PC files and save to Data Folder
- · Perform Packet Communications

Note

· Using handset to access the Internet via PC or PDA (Mobile Data Communication) rapidly incurs high Packet Communication charges. Take notice of large Packet Communications when using Mobile Data Communication.

Sending/Receiving in Mass Storage

With Memory Card inserted, connect handset to PC via USB Cable to manage card files on PC.

Connecting/Disconnecting to a PC

- Connect handset to PC via USB
 Cable
- ② → Settings → Connectivity → Mass storage → Yes
- 3 Enter Phone Password → (OK)
- Use PC to access Memory Card files
 - Mass Storage is unavailable while receiving S! Mail, or using Samsung New PC Studio.
 - Calling and Messaging are unavailable in Mass Storage.
- 6 On PC, perform device removal
- Disconnect USB Cable

Note

 Never disconnect USB Cable before safely removing device from the PC first.

Advanced

₹ Settings

Activate Mass Storage (P.13-23)

Memory Card Backup

Back up Phone Book entries, etc. to Memory Card (package backup). Restore backed up items as required (package restoration).

- · Restore from Backup in case of accidental data loss.
- Backups are saved by type (transfer date is file name).
- · Available Backup types
- Phone Book
- Sent msg.
- Calendar
- Unsent msg.

Tasks

- Notepad
- Received msg.
- Contents keys

- Drafts

- Bookmarks
- Use Backup to save files, share information between Memory Card-compatible handsets, or move files to a newly purchased handset.

Backup Precautions

- · Unavailable when battery is low.
- During backup or restoration, handset transmissions are not possible.
- Some files cannot be backed up. Some backed up files may not be usable on other SoftBank handsets or PCs. etc.
- Backup may fail if handset/Memory Card memory is too low.
- Handset holds up to 500 Calendar/Tasks entries.
 When 500 entries are restored from Memory Card, a confirmation appears and extra entries are not saved.

- Yahoo! Keitai, PC Site Browser bookmarks are backed up.
- If a backed up bookmark is too large it may not be restorable.
- Some images set to Phone Book entries may not be transferred because of size.
- Backup data saved on Memory Card is not accessible on handset until restored from Memory Card.
- When backing up Content Keys, note the following:
 - Backup file can hold only one Content Key at a time. To back up another Content Key, a confirmation appears and the previous backup file is overwritten (to keep the previously backed up files, restore the Content Key to handset from Memory Card and then perform backup again).
 - Restoring a file with a Content Key to handset adds the Content Key to handset without overwriting any existing Content Keys on handset.

Backing up to Memory Card Manually

- 1 → Settings → Backup & Restore → Backup
- Yes → Enter Phone Password → (OK)
- 3 Phonebook, Calendar, Tasks, Received msg., Drafts, Sent msg., Unsent msg., Notepad, Contents keys of Bookmarks
- $oldsymbol{4}$ Confirmation appears, choose Yes
 - Press 🖭 (Cancel) → Yes to cancel backup.

Loading from Memory Card

Selecting Item to Back up

- 1 → Settings → Backup & Restore → Restore
- Yes → Enter Phone Password → (OK) → Selected item
- 3 Phonebook, Calendar, Tasks, Received msg., Drafts, Sent msg., Unsent msg., Notepad, Contents keys or Bookmarks

- 4 Select a file → If a confirmation appears, Add/Overwrite
 - To delete a backup file, highlight file
 → [x] (Delete) → Yes.
 - To cancel restoration, press (Cancel)
 → Yes.

Backing up from Auto Back up

- 1 → Settings → Backup & Restore → Restore
- 2 Yes \rightarrow Enter Phone Password \rightarrow \bigcirc (OK) \rightarrow Auto backup item
- 3 Select item → Yes
 - To cancel backup, press ❤️ (Cancel) → Yes.

Backing up to Memory Card Automatically

Note

- Separate subscription is required to use this function.
- Before setting, set Auto sync settings to On in S! Addressbook Back-up setting (P.12-8).
- Default: *Auto backup* is *On*, and *Backup cycle* is *Every week*.
- Auto Backup starts only when Handset is in Standby.
- If Auto Backup is disturbed, it starts at the time set for the next day.

- Backup cycle
- 3 Cycle
 - To Back up Once a Week Weekly → Select day
 - To Back up Once a Month Monthly → Enter date
- 4 Start time → Enter start time
 → (SEAR)
- Backup items → Check items → ☑ (Save)
- 6 Encryption settings → Phonebookl Calendar/Tasks|Messages|Notepadl Bookmarks → On|Off

Advanced

₹ Settings

- Back up Memory (P.13-22)
- Restore Memory (P.13-22)

S! Addressbook Back-up (SAB)

Back up handset Phone Book entries on Server or synchronize handset Phone Book entries with SAB. Restore lost handset Phone Book entries from SAB.



Before Using S! Addressbook Back-up

Note

- SAB use requires separate subscription.
- Connections between handset and SAB (Backup, Restore, or Update) incur Packet Communication charges.
- If you should change handsets, select an SAB compatible handset to take over SAB entries.
- After an application, when Network Information is retrieved*, Auto sync settings will be On automatically. After editing Phone Book, backup will start automatically.
- Even after Auto sync settings is set to Off, if Network Information is retrieved Auto Sync will be initialized and set to On.
- Confirm Auto sync settings is set to Off after canceling the services.
- *Sync mode will be set to Normal. Auto Sync starts about ten minutes after editing of Phone Book has begun.

Precautions for Synchronizing

Available synchronization modes are as follows.

Sync Mode	Description
Normal	Backs up handset entries and updates SAB. If handset Phone Book entry and SAB entry item are both updated, SAB entry item takes priority.
Sync from Client	Backs up updated handset entries.
Backup	Deletes SAB entries and uploads handset entries.
Sync from Server	Downloads updated SAB entries to handset.
Restore	Deletes all the latest handset entries and downloads SAB entries to handset (only the 001SC).

- Synchronizing in Normal mode is performed regardless of Sync mode setting when using SAB for the first time or the last Sync was not completed correctly by canceling, etc.
- These items cannot be synchronized with SAB; using Restore for these items will delete them from handset:
 - Picture
 - Ringtone settings, Vibration settings
 - Blood type

- Select backup/restore timing and Sync mode carefully to avoid accidentally deleting entries.
 - Delete all handset entries then select Normal, Sync from Client, or Backup to delete all SAB entries.
 - Delete all SAB entries then select Normal, Sync from Server, or Restore to delete all handset entries.
- If number of entry items savable on handset varies from SAB, synchronization will reflect lower number.
- When SAB service is canceled, Phone Book entries on Server are deleted

Synchronizing Phone Book Entries

Connect to SAB to synchronize SAB entries with handset Phone Book entries.

Note

- Starting Sync connect to network. Packet Communication charges apply. Network connection is automatically disconnected with synchronization.
- - Synchronize in Normal mode.
 - If synchronize in Sync from Client/ Backup/Sync from Server/Restore mode, press ■ → Phone → S! Addressbook Back-up → Details → Backup/Restore → Select an item.

Setting Auto Sync

If *Auto sync settings* is set to *On*, setting frequency and Sync mode are required.

- → Phone → S! Addressbook Back-up → Details → Auto sync settings
- 2 On/Off → On
- Set items
 - To Back up Once a Month Monthly → In Date field, enter date → In Time field, enter time → ■ (OK)
 - To Back up Once a Week Weekly → Select day → In Time field, enter time → ■ (OK)
 - To Back up Ten Minutes after Editing Phone Book Entries After editing phonebook
- 4 NormallSync from ClientlBackupl Sync from ServerlRestore
- 5 (OK)
- In ②, set *On/Off* to *Off* to cancel *Auto sync* settings.

Advanced Settings

S! Addressbook Back-up

Viewing S! Addressbook Back-up History

 \blacksquare \rightarrow Phone \rightarrow S! Addressbook Back-up

→ Details → Sync Log → Select a log

Deleting S! Addressbook Back-up History

 \blacksquare \rightarrow Phone \rightarrow S! Addressbook Back-up

 \rightarrow Details \rightarrow Sync Log

■ To Delete A Log

Highlight $log \rightarrow \square$ (Delete) $\rightarrow \textit{Yes}$

■ To Delete All Logs

 $\five ext{Y}$ (Delete all) o Enter Phone Password

 \rightarrow \blacksquare (OK) \rightarrow Yes

Handset Customization

Phone Settings	
Sounds & Vibration & External Light Settings	13-4
Display & Font Settings	13-5
Manner Mode Settings	13-7
Call Settings	13-7
Phone Book Settings	13-10
Messaging Settings	13-11 13-11 13-13
Internet Settings Yahoo! Keitai. PC Site Browser	13-15
Camera Settings Photo Video	13-18
Media Player Settings Music Movie	13-19
Entertainment Settings	
Security Settings	13-21



Memory Settings	13-22
Connectivity Settings	13-23
Infrared	13-23
USB	13-23
Network	13-23

Phone Settings

Handset Settings

 $\boxed{ \blacksquare \rightarrow Settings \rightarrow Phone \ settings }$

Change User Interface Language Default Automatic	言語選択 → Select an item
Set Time Zone Updating Default Manual only	$Date & Time → Set date & time → Time zone updating → Select an item → \square (Save)$
Change Home Zone Time Default GMT+09: 00	$Date \& Time → Set date \& time → Home zone → \blacksquare to highlight city \rightarrow \blacksquare (Select) \rightarrow \boxdot (Save) • Select the zone closest to your locality.$
Activate/Cancel Daylight Savings Time	Date & Time → Set date & time → Home zone → \blacksquare to highlight city → Highlight Daylight saving → \boxdot (Mark) → \blacksquare (Select) → \boxdot (Save)
Set Time	Date & Time → Set date & time → In Time field, enter time → \square (Save) • Some functions are disabled when time is not set.
Set Date	$Date \& Time → Set date \& time → In Date field, enter date → \boxtimes (Save) • Some functions are disabled until date is set.$
Change Time Format Default 24 H	$\textit{Date \& Time} \rightarrow \textit{Set date \& time} \rightarrow \textit{Time format} \rightarrow \text{Select an item} \rightarrow \boxdot \text{ (Save)}$
Change Date Format Default YYYY/MM/DD	Date & Time ightarrow Set date & time ightarrow Date format ightarrow Select an item ightarrow oxtimes (Save)
Set Time Correction Default Auto correction: On, Correction timing: Via S! Information Channel	Date & Time → Time correction → Auto correction → On or Off • To specify when to correct the time, select Correction timing → Check an item → (Save). • Selecting Manual correction → Yes immediately corrects the time.
Set Earphone Settings Default Earphone	Earphone settings → Earphone/Earphone + Speaker
Activate/Cancel Prediction Default On	Text input settings \rightarrow Prediction \rightarrow On or Off
Activate/Cancel Learning	Text input settings \rightarrow Learning \rightarrow On or Off
Activate/Cancel Auto Capitalization	Text input settings → Auto capitalization → On or Off
Activate/Cancel Flexible Search Default On	Text input settings \rightarrow Flexible search \rightarrow On or Off
Reset Learning Function	<i>Text input settings</i> → <i>Reset learning</i> → Enter Phone Password → \blacksquare (OK) → <i>Yes</i>

Clear History for Pictograms/Emoticons	Text input settings → Clear history → Yes
Change Font Size Default Standard	Text input settings → Font size → Large/Standard/Small
Change Cursor Speed Default Off	Text input settings → Auto cursor → Off Slow Normal Fast Very fast
Save Entries to User Dictionary	User dictionary → Japanese dictionary/English dictionary → New entry (If more than one entry is saved, press \bigcirc (Add)) → Select Word field → Enter word or sentence → Select Reading field → Enter reading → \bigcirc (Save)
Edit User Dictionary Entries	$User\ dictionary ightarrow Japanese\ dictionary / English\ dictionary ightarrow Select\ entry ightarrow Edit\ word\ and\ reading ightarrow \ (Save)$
Delete User Dictionary Entries	User dictionary → Japanese dictionary/English dictionary → Highlight word → 🗹 → Delete → Selected → Yes • To delete several words, select Japanese dictionary/English dictionary → 💟 → Delete → Multiple → Check words → 🖾 (Delete) → Yes. • To delete all the words, select Japanese dictionary/English dictionary → 👽 → Delete → All → Enter Phone Password → 🔳 (OK) → Yes.
Activate/Cancel Simple Search Default Off	 Simple search → On or Off On: In Standby, press keys assigned to characters used in Phone Book entry Readings.
Set Any Key Answer Default Off	Any key answer → On or Off • On: Press any keys except \boxdot , \blacksquare , \boxdot , \boxdot , and \boxdot to answer a call.
Answer Incoming Call by Opening Handset Default Off	 Active folder → On or Off On: Open the handset to answer a call.
Set Keypad Light Illumination Mode Default Normal mode	 Keypad light → Select item Normal mode: Keypad light illuminates for Backlight time duration. Saving mode: Keypad light turns off for set duration. If Saving mode is set, in Starting time field, enter start time → In Ending time field, enter end time → (Save).

Sounds & Vibration & External Light Settings

 $\boxed{\blacksquare} \rightarrow Settings \rightarrow Sound \ settings$

Adjust Volume Default Voice call/Message/Missed call notification/Delivery report/Phone sounds: Level 3; S! Quick News: Off	Volume → Select item → to adjust image If Ringtone reducer is On (♠P.13-10), Ringtone volume is reduced to Level 1 for the first four seconds, regardless of Ringtone volume set for Voice Call. To mute Voice Call or Message tones, set Volume to 00 and Vibration to Off.	
Set Ringtone for Voice Call Default Voice call: Samsung Tune	Ringtone → Voice call → Select save location for a file → Select a file • Press (Play) to playback.	
Set Ringtone to Something Other than Voice Call Default Message: Good_morning; Missed call notification: Bubble; S! Quick News: Postman; Delivery report: Doorbell	Ringtone → Select item → Ringtone → Select save location for a file → Select a file • Press (Play) to playback.	
Set Ringtone Duration to Something Other than Voice Call Default 5 Seconds	Ringtone → Select item → Duration → Enter duration → \blacksquare (Select)	
Search Machi-Uta®	Machi-Uta → Music search → Follow onscreen instructions	
Set Machi-Uta [®]	Machi-Uta → Settings → Follow onscreen instructions	
Register/Cancel Machi-Uta [®]	Machi-Uta → Register/Cancel → Follow onscreen instructions	
View Instruction for Machi-Uta®	Machi-Uta → What's Machi-Uta	
Set Vibration Default Off	Vibration → Select item → Select a pattern • Press (Play) to view a pattern.	
Set Phone Sounds Default Off	Phone sounds → Keypad tones → Select item	
Set System Sounds Default Popup box alerts/Call end tone/Alerts on call: On; Minute minder/ Call connect tone/Power on/Power off/Open/Close folder: Off	Phone sounds → System sounds → Check items → (Save) • Available items vary depending on mode.	
Set External Light Color for Incoming Transmissions Default Voice call/Missed call notification: Blue; Message: Green; S! Quick News: White; Alarm: Pink; Delivery report: Light Blue	 External light → Incoming → Select an item → Select a color When selecting Off, Notification light does not blink. Press (Check) to view color. 	

Set External Light Color for Notification Default Missed call/Missed call notification: Blue; Message: Green; Answering Machine: Yellow; Missed alarm: Pink; Delivery report: Light blue	 External light → Notification → Select an item → Select a color When selecting Off, Notification light does not blink. Press (Check) to view color.
Set External Light Color When Handset is Closed Default Pink	External light → Close folder → Select a color • When selecting Off, Notification light does not blink. • Press ☑ (Check) to view color.

[•] Open Sound settings to change sounds for Normal mode. Settings cannot be changed for other modes.

Display & Font Settings

■ → Settings → Display settings Start Here Change Wallpaper Default Clover $Wallpaper \rightarrow (\bigcirc P.2-5 \text{ Wallpaper } \bigcirc)$ Set/Cancel Smart Wallpaper Default On Smart wallpaper \rightarrow On/Off \rightarrow On or Off Change Wallpaper for Smart Wallpaper Smart wallpaper → Wallpapers → Select item → Select Wallpaper **Default** Standard *Main menu style* \rightarrow Select an item \rightarrow (\bowtie to select color, as required) \rightarrow \bigcirc (Select) Change Main Menu Settings Set Menu Color Theme **Default** White & Blue | Color theme → Select an item Clock/Calendar → Select an item If Digital clock is selected, in Style field, highlight style → In Position field, highlight position → (Save). Change Clock/Calendar Default Digital clock • If *Dual clock* is selected, in First clock field, highlight time zone → In Second clock field, highlight time zone $\rightarrow \blacksquare$ (Save). • If Calendar (1 month) is selected, select Large/Small. Set Mini Clock **Default** Time only **Mini clock** → Select an item Set Font Weight **Default** Regular $Font \rightarrow Font \ weight \rightarrow Select \ an item$ Set Text Size in List Font **Default** Standard $Font \rightarrow Font \ size \rightarrow List \ font \rightarrow Select \ item$ Set Text Size in Yahoo! Keitai Pages **Default** Standard $Font \rightarrow Font \ size \rightarrow Yahoo! \ Keitai \rightarrow Select an item$

Font o Font size $ o PC$ site browser $ o$ Select an item
Font → Font size → Phonebook → Select item
Font → Font size → Editor → Select item
Font → Font size → Messages → Select an item
Text scroll speed → Fast/Normal/Slow
$Backlight o Brightness o extbf{Y}$ (Unmark) $ o extbf{\omega}$ to adjust brightness $ o extbf{\omega}$ (OK)
Backlight → Duration → Backlight on → Select an item • When Backlight time is set to Off, Display becomes dim. • Display becomes dimmer when Backlight time elapses.
Backlight → Duration → Backlight dim → Select an item • When Backlight time elapses, Display turns off.
Battery saving mode → On or Off
$Dialling \ display \rightarrow Font \ type \rightarrow $
$Dialling display o$ Font size → \blacksquare to highlight size \to \blacksquare (Select)
 Dialling display → Font color → □ to highlight color → □ (Select) If Monochrome is highlighted in Color field, select color.
$Dialling\ display ightarrow Background\ color ightarrow lacksquare$ to highlight color $ ightarrow lacksquare$ (Select)
Operator name → On or Off

B #	B # I	. C . 44!	
Manner	IVION	е ѕетті	mas
manne		C	-

Switch Manner Mode ■ → Set • To edit e
--

Call Settings

Start Here ■ → Settings → Call settings

Forward All Calls to Voicemail (Handset Does Not Ring)	Optional services \rightarrow Voicemail/Call forwarding \rightarrow Voicemail on \rightarrow Always (0 sec.)
Forward Unanswered Calls to Voicemail (Specify Ring Time)	Optional services → Voicemail/Call forwarding → Voicemail on → No reply (5 - 30 sec.)
Activate & Set Forwarding	Optional services → Voicemail/Call forwarding → Call forwarding on → Select an item → Set number to forward (�P.3-14 Call Forwarding ③)
Cancel Voicemail/Call Forwarding	Optional services → Voicemail/Call forwarding → Deactivate All → Yes
Confirm Current Voicemail/Call Forwarding Settings	Optional services → Voicemail/Call forwarding → Get status
Listen to Voicemail Message	Optional services → Voicemail/Call forwarding → Play voicemail → 🕝 or •
Activate/Cancel Call Waiting	Optional services → Call waiting → On or Off
Confirm Current Call Waiting Settings	Optional services → Call waiting → Get status
Activate/Cancel Outgoing Call Barring	Optional services → Call barring → Outgoing call → Select an item → On or Off → Enter Network Password → \blacksquare (OK)
Activate/Cancel Incoming Call Barring	Optional services → Call barring → Incoming call → Select an item → On or Off → Enter Network Password → \blacksquare (OK)
Cancel All Call Barring	$Optional\ services \rightarrow Call\ barring \rightarrow Cancel\ all\ barring \rightarrow$ Enter Network Password →
Confirm Current Call Barring Settings	Optional services → Call barring → Get status → Select an item

Set Missed Call Notification	<i>Optional services</i> → <i>Missed call notification</i> → \bigcirc or \bigcirc (\bigcirc (\bigcirc) → Follow the guidance
Check Call Time/Cost	Call time & cost → All calls • To reset call time/cost, press \boxtimes (Reset) → Enter PIN2 → \blacksquare (OK).
Check Last Call Time/Cost	Call time & cost → Last call • To reset last call time/cost, press (Reset).
Check Data Counter	Call time & cost → Data counter • To reset sent/received data counter, press (Reset).
Show/Hide Call Time/Cost after Calls Default Off	Call time & cost → Show charge after call → On or Off • This function may not be available.
Change Call Cost Currency	Call time & $cost$ → Set $currency$ → Enter PIN2 → \blacksquare (OK) → In Price field, enter rate in yen → Select currency field → Enter currency unit → \boxtimes (Save)
Activate/Cancel Answering Machine Default Off	Answering machine \rightarrow On/Off \rightarrow On or Off
Set Answering Machine Response Time Default 18seconds	Answering machine → Ringing duration → Select an item • If Other is selected, enter time.
Play Answering Machine Records	Answering machine → Play message → Select a record • To delete record, in list, highlight record → 図 (Delete) → Yes. • Alternatively, press → All/Received → Select a record → 図 (図) → Message.
Set Answering Machine Response Language	Answering machine → Sound language → Select an item • Press (Play) to play message.
Accept/Reject Calls from Specified Phone Numbers Default Off	Reject incoming calls → Set reject number → On/Off → On or Off • When a call on Black list is received, the caller hears a busy tone and call is not connected. Missed call appears in Standby. Select the message to check missed call.

Create/Edit Black List	Reject incoming calls → Set reject number → Black list → ■ (Add) (If more than one entry is added, press ❤ → Add) → Select an item → Add an entry • To delete a phone number, select Black list → Highlight party → ❤ → Delete → Selected → Yes. • To delete all phone numbers, select Black list → ❤ → Delete → All → Yes → Enter Phone Password → ■ (OK).
Accept/Reject Calls from Unknown Numbers Default Off	Reject incoming calls $\rightarrow Unknown \rightarrow On$ or Off
Accept/Reject Calls When Number is Withheld Default Off	Reject incoming calls \rightarrow Withheld \rightarrow On or Off
Accept/Reject Calls from Payphones Default Off	Reject incoming calls \rightarrow Payphone \rightarrow On or Off
Accept/Reject Calls When Number is Unavailable Default Off	Reject incoming calls \rightarrow Unavailable \rightarrow On or Off
Save International Code Default 0046010	$ \textit{International call} \to \textit{International code} \to \text{Enter Phone Password} \to \blacksquare \text{ (OK)} \to \text{Enter an international code} $
Add/Change/Delete Country Number Default 日本 (Japan), 韓国 (KOR), イギリス (GBR), イタリア (ITA), スイス (CHE), スペイン (ESP), ドイツ (DEU), ポルトガル (PRT), オランダ (NLD), フランス (FRA), モナコ (MCO), アメリカ合衆国 (USA), スウェーデン (SWE), オーストラリア (AUS), 中国 (CHN), 香港 (HKG), 台湾 (TWN)	 International call → Country code → Add, change, or delete item To add, press (Add) → Select Country name field → Enter country name → In Country code field, enter country code → (Save). To change, select country → Select Country name field → Enter country name → In Country code field, enter country code → (Save). To delete, highlight item → (Celete) → Yes.
Select Network to Access Default Automatic	 International call → Select operator → Select Auto/Manual → Select an item When you set Manual, select a network.
Select Preferred Network from List	International call → Select operator → Set priority → \textcircled{v} → Insert → Network list → Select a network
Add a New Preferred Network	International call → Select operator → Set priority → \textcircled{r} → Insert → New Network → In Country code field, enter country code → In Network code field, enter Network code → Select Network name field → Enter Network name → \textcircled{s} (Save)
Set Roaming Dial Assistant Default On	 International call → Roaming dial assistant → On or Off If Roaming dial assistant is set to On, popup appears while dialing. If you add international number before phone number, popup does not appear.
Activate/Cancel Offline Mode Default Off	Offline $\rightarrow On$ or Off

Show/Hide Your Own Number	Caller ID → On or Off • To check current status, select Get status.
Set Handset to Automatically Redial Busy Numbers Default Of	 Auto redial → On or Off On: Handset automatically disconnects call and redials busy numbers. Auto redial dials up to ten times until (Cancel) / is pressed. If called party uses Call Forwarding or Voicemail, call is forwarded accordingly.
Activate/Cancel Automatic Ringer Reduction Default On	Ringtone reducer → On or Off • When Ringtone volume level is high, the volume level is reduced to Level 1 for the first four seconds, then returns to the set level.
Enable/Disable Calling via Stereo Earphone Microphone Default Of	Earphone call → On/Off → On → Call number → Select an item → Add a phone number • On: Press Stereo Earphone Microphone (optional) switch for 1 + seconds to call specified number. To change specified number, repeat setup operation, to save the new number.
Set Clear Talk Default On	Clear talk \rightarrow On or Off
Adjust Earpiece Volume Default Level 5	Hearing volume → to adjust volume

Phone Book Settings

Start Here	\blacksquare \rightarrow Phone \rightarrow Settings
------------	---

Sele	ect Phone Book Save Location	Default Phone	Save to → Select an item • Always ask: Select save location each time a new entry is saved.
Cha	nge Phone Book Preference (Phone/USIM)	Default Phone	Change view → Select an item
Cha	nge Search Method	Default ABC	Search method → Select an item
Set	Font Size	Default Standard	Font size → Select item
Сор	Copy All Phone Book Entries & Save on Handset & USIM Card		Copy all → Phone to USIM/USIM to Phone → Yes

Messaging Settings

Custom Mail Address

Customize/Change Handset Mail Address

Customize/Change Handset Mail Address

• Change mail account name (alphanumerics before @).

Default: Account name consists of random alphanumerics.

S! Mail & SMS

Start Here $\square \rightarrow Settings \rightarrow Universal\ settings$

Request/Cancel Delivery Report		 Sending settings → Delivery report → On or Off On: Receive a message confirming successful delivery of a sent message.
Quote Text from Received Message Default On (Except SMS & Gra	raphic mail)	Sending settings → Reply with history → Select an item
Select Reply Setting	efault Off	Sending settings → Reply settings → On or Off On: Replies to sent messages are automatically addressed to "Reply to" address Off: Replies to sent messages are addressed to handset number/mail address • Set address that appears in To: field of message recipient handset.
Set "Reply to" Address		Sending settings → "Reply to" address → Enter an item → Enter address
Change Quick Reply Message		$Sending \ settings \rightarrow Quick \ reply \ setting \rightarrow Select \ items \rightarrow Enter \ message$
Show/Hide Transmission Progress Bar	efault On	Sending settings → Sending progress → On or Off
Set Received Message Notice Content/Hide Notice	auli From I	Receiving settings → Message notice → View setting → Select an item • Received message notice scrolls above active function windows.
Select Secret Folder Message Notice Setting Defa	ault Show	Receiving settings → Message notice → Secret folder → Enter Phone Password → ■ (OK) → Select an item • Not show: Incoming message notice window for messages sorted to secret folders or Message notice does not appear.
Link External Light to Incoming Feeling Mail	efault On	Receiving settings \rightarrow Link to feeling \rightarrow Light color \rightarrow On/Off \rightarrow On or Off

Link External Light Color to Incoming Feeling Mail Default Happy/Glad: Pink, OK/Good: Green, Sad/Sorry: Blue, NG/Bad: Light Blue, Important/Notice: Yellow	Receiving settings → Link to feeling → Light color → Light color → Select a feeling → Select a color • Press ((Check) to view color.
Link Vibration to Incoming Feeling Mail Default On	Receiving settings → Link to feeling → Vibration pattern → On/Off
Set Whether to Sound Handset When Feeling Mail Arrives	Receiving settings \rightarrow Link to feeling \rightarrow Ringtone \rightarrow On/Off \rightarrow On or Off
Link Ringtone to Incoming Feeling Mail Default Happy/Glad: Cheerful Whistle , OK/Good: On_time, Sad/Sorry: Remember me, NG/Bad: Dear me, Important/Notice: Attention please	Receiving settings → Link to feeling → Ringtone → Assign tone → Select a feeling → Select a save location → Select a Ringtone • Press (Play) to playback the file.
Set Feeling Mail Ringtone Duration Default 5 Seconds	Receiving settings → Link to feeling → Ringtone → Duration → Enter duration \rightarrow (OK)
Change Font Size Default Standard	Display settings → Font size → Select an item
Change Scroll Unit Default Single line	Display settings → Scroll unit → Select an item
Change Received Message View Default Folder view	Display settings → Received msg. view → Select an item
Change Sent Message View Default Folder view	Display settings → Sent msg. view → Select an item
Set/Cancel Auto Delete for Received Messages When Received Memory is Full Default On (Except protected)	Auto delete → Received msg. → Select an item On (Except protected): Unprotected messages are automatically deleted oldest first to make room for new ones. If Auto delete is Off, memory full confirmation appears. Delete messages and retry. On (Only read): Read messages are automatically deleted from the oldest one to make room for new ones. If Auto delete is Off, memory full confirmation appears. Delete messages and retry. Off: Memory full confirmation appears. Delete messages and retry.
Set/Cancel Auto Delete for Sent Messages When Sent Memory is Full Default On (Except protected)	Auto delete → Sent msg. → Select an item On (Except protected): Unprotected messages are automatically deleted the oldest first to make room for new ones. If Auto delete is Off; memory full confirmation appears. Delete messages and retry. Off: Memory full confirmation appears. Delete messages and retry.
Sort Unregistered Mobile Address as Spam Default Off	<i>Anti-spam measures</i> → Enter Phone Password → \blacksquare (OK) → <i>Unregistered</i> → <i>On</i>

Sort Message with Spam Filter Default Off	Anti-spam measures → Enter Phone Password → \blacksquare (OK) → Unregistered → On • To specify list, Spam filter → \boxdot (Edit) → (If address already exists in the list, \boxdot → Add filter) → Sender/Sender (Partial match)/Subject → (\spadesuit P.4-14 Sorting Messages \circledcirc)
Add Address to Permitted List Default Off	 Anti-spam measures → Enter Phone Password → ■ (OK) → Permitted list → On To specify list, Permitted list → 図 (Edit) → (If address already exists in the list, ☑ → Add filter) → Sender/Sender (Partial match)/Subject → (�P.4-14 Sorting Messages ③). Available only when Unregistered/Spam filter is On.
Set Address for Report Spam Default stop@meiwaku.softbankmobile.co.jp	Anti-spam measures → Enter Phone Password → \blacksquare (OK) → Address for report spam → Enter mail address → Yes
Select Save Location for Message Default Memory card first	Save to → Select an item • If Always ask is selected, confirmation appears each time a message item is saved.

S! Mail

 $\boxed{\textbf{Start Here}} \quad \boxed{\square} \rightarrow Settings \rightarrow S! \ Mail \ settings$

Set Max Creation Size Defaul		 Sending options → Max creation size → Select an item In S! Mail creation window, press → Sending options → Max creation size → Select item can change maximum size temporarily.
Set Message Sending Priority Default	Normal	Sending options → Priority → Select an item
Set Picture Auto Resize Default	500KB	Sending options → Picture auto resize → Select item
Set Max Receiving Size Defaul	lt 2MB	Receiving options → Max receiving size → 2MB/300KB
Set S! Mail Receiving Options Default On (Up t		Receiving options → Auto receiving → Select an item On (Up to 1MB): Receives maximum 1 MB automatically. On (Up to 300KB): Receives maximum 300 KB automatically. Off: Mail Service Center sends S! Mail Notice; retrieve complete message.
Set Auto Receiving Condition Default All me	essages	Receiving options → Auto receiving conditions → All messages/Specified address

Edit Auto Receiving Condition	Receiving options → Auto receiving conditions → Highlight Specified address → 図 (Edit) → Check item → ■ (OK) • If Individual address is checked, press 図 (Edit) → Select item → Select/Enter address/number/domain → 図 (OK).
Insert/Hide Signature Default Off	Signature → Auto insert → Select an item • To select Auto insert, Signature → Enter signature.
Edit Signature	Signature → Signature texts → Enter a signature
Set Attached Image Appearance Default Normal	Picture appearance → Select an item
Set Attached Image Auto Playback	Auto play file → Picture → On or Off
Set Attached Sound Auto Playback	Auto play file → Sound → On or Off

SMS		
Start Here $\square \rightarrow Settings \rightarrow SMS \ settings$		
Set Mail Service Center Message Expiry Time	None Expiry time → Select an item • Upon expiry Mail Service Center SMS messages are automatically deleted.	
Set Message Center Number Pefault +819066	6519300 <i>Message center</i> → Select an item	
Change Character Code Default	Unicode Char-code → Select an item	

Internet Settings

Yahoo! Keitai

Select Script Setting

Tallou: Kertal		
Start Here $\blacksquare \rightarrow Yahoo! \rightarrow Browser\ settings$		
Change Page Font Size Default Standard	Font size → Select an item	
Set Encoding Default Auto	Encoding → Select item	
Set Page Scroll Unit Default Single line	Scroll unit → Select an item	
Set Whether to Use Pointer Default Off	Pointer settings $\rightarrow On/Off \rightarrow On \text{ or } Off$	
Set Pointer Speed Default Normal	Pointer settings → Speed → Select item	
Show/Hide Page Images Default Show images	Downloads → Images → Select item • Select Do not show to help reduce download time.	
Play/Mute Page Sounds Default Play sounds	Downloads → Sounds → Select item • Select Do not play to help reduce download time.	
Set Save Location for Images in a Page, etc. Default Memory card first	Save to → Memory card first/Phone/Always ask • To save a file to Memory Card, insert Memory Card and select Memory card first.	
Delete Cache/Cookie/Certificates	Memory manager → Select an item → Yes	
Show/Hide Manufacture Number Default On	Security → Manufacture number → On or Off • On: Handset automatically sends Manufacture Number to websites upon request as user ID.	
Send/Hide Referrer Default Send	Security → Send referer → Select an item • Referrer is a link source URL information. It is sent to Web server when accessing websites.	
Select Cookie Setting Default Enabled	Security → Cookies → Select an item Select Confirm to show acceptance confirmation every time before a cookie is saved. Cookie automatically saves identification information of visitors to handset. Cookies contain user information and allow sites to recognize users and track preferences.	

Default Ask NW access **Security** → **Script** → Select item

DC Site Browser

Confirm Root Certificate	Security → Root certificates → Select a certificate • View electronic certificate preinstalled on handset.
Set Certificate Retention Period	Security \rightarrow Certificate retention \rightarrow Select an item
Show/Hide Secure Prompt Default On	Security → Secure prompt → On/Off • When opening security page, set whether to show notification.
Initialize Browser	 Initialize browser → Enter Phone Password → ■ (OK) → Yes Initialize browser settings or information such as Bookmarks or Saved pages.
Reset Settings	Reset settings → Enter Phone Password → \blacksquare (OK) → Yes

PC Site Browser		
Start Here $\blacksquare \rightarrow Yahoo! \rightarrow PC$ site browser $\rightarrow PC$ site browser settings		
Change Page Font Size Default Standard	Font size → Select an item	
Set Encoding Default Auto	Encoding → Select item	
Set Scroll Unit Default Single line	Scroll unit → Select item	
Set Whether to Use Pointer Default Off	Pointer settings \rightarrow On/Off \rightarrow On or Off	
Set Pointer Speed Default Normal	Pointer settings → Speed → Select item	
Show/Hide Page Navigation Default On	Page navigation → On/Off	
Show/Hide Page Images	Downloads → Images → Select item • Select Do not show to help reduce download time.	
Play/Mute Page Sounds Default Play sounds	 Downloads → Sounds → Select item Select Do not play to help reduce download time. 	
Set Save Location for Images in a Page, etc. Default Memory card first	Save to → Memory card first/Phone/Always ask • To save a file to Memory Card, insert Memory Card and select Memory card first.	
Delete Cache/Cookie/Certificates	Memory manager → Select an item → Yes	
Deleting RSS Feed List	<i>Memory manager</i> → Enter Phone Password → \blacksquare (OK) → <i>Yes</i>	

Show/Hide Manufacture Number Defau	Security → Manufacture number → On or Off • On: Handset automatically sends Manufacture Number to websites upon request as user ID.
Send/Hide Referrer Default	Send Security → Send referer → Select an item • Referrer is a link source URL information. It is sent to Web server when accessing websites.
Select Cookie Setting Default E	abled Security → Cookies → Select an item Select Confirm to show acceptance confirmation every time before Cookie is saved. Cookie automatically saves identification information of visitors to handset. Cookies contain user information and allow sites to recognize users and track preferences.
Select Script Setting Defau	Security \rightarrow Script \rightarrow Select an item
Confirm Root Certificate	Security → Root certificates → Select a certificate • View electronic certificate preinstalled on handset.
Set Certificate Retention Period Default Per bro	wsing $Security \rightarrow Certificate\ retention \rightarrow Select\ an\ item$
Show/Hide Secure Prompt Defau	Security → Secure prompt → On/Off • When opening security page, set whether to show notification.
Show/Hide Warning Defau	Warning messages → On or Off • Show/hide PC Site Browser activation, or Yahoo! Keitai/PC Site Browser switching warning.
Initialize Browser	 Initialize browser → Enter Phone Password → ■ (OK) → Yes Initialize browser settings or information such as Bookmarks or Saved pages.
Reset Settings	Reset settings → Enter Phone Password → \blacksquare (OK) → Yes

Camera Settings

Photo

Start Here

Select Quality Default Superfine	Quality → Select an item
Set ISO Default Auto	ISO → Select an item
Set Exposure Metering Default Center-weight	Exposure metering → Select an item
Select Effect Default None	Effect → Select item
Activate/Cancel Auto Save Default On (Preview manual)	Setup → Auto save → On (Preview Off)/On (Preview 2 sec)/On (Preview manual)/Off • On (Preview Off): Image is automatically saved. After saving, handset returns to Viewfinder without showing preview. • On (Preview 2 sec): Image is automatically saved. After saving, preview appears for two seconds, and handset returns to Viewfinder. • On (Preview manual): After capturing, image is automatically saved and preview appears. • Off: Select save or cancel the image. To redo, press : To save, press (Save).
Set Save Location When Memory Card is Inserted Default Memory card first	Setup → Save to → Select an item • This setting is active with Memory Card inserted. • If Memory Card is not inserted, images are automatically saved to Phone.
Adjust Flicker Default Auto	Setup → Flicker adjustment → Auto/50Hz (East Japan)/50Hz (West Japan)
Show/Hide Guideline Default Off	Setup → Guideline → On or Off
Set Face Link Display Default Off	Setup → Face link display → On or Off • When you set this On, after the face you captured is recognized, Face Link appears.
Set Shutter Sound Pattern1	Setup → Shutter sound → Select an item
Set Timer Sound Pattern1	Setup → Timer sound → Select an item

Video			
Start Here \bigcirc (1+ seconds) \rightarrow Video camera \rightarrow \bigcirc \rightarrow Settings			
Select Quality Default Superfine	Quality → Select an item		
Set Effect Default None	Effect → Select item		
Set Sound Recording Default On	Sound recording \rightarrow On or Off		
Activate/Cancel Auto Save Default On	$Setup \rightarrow Auto \ save \rightarrow On \ or \ Off$		
Set Save Location Default Memory card first	Setup → Save to → Select item • To save a file to Memory Card, insert Memory Card.		
Show/Hide Guideline Default Off	Setup → Guideline → On or Off		

Media Player Settings

Adjust Flicker Set Shutter Sound

Set Timer Sound

Music ■ → Media → Settings → Music settings Start Here Repeat mode → Select an item Set Repeat Mode Default A • Play a single track and all music/all files in playlist repeatedly. Set Shuffle **Default** Off $Shuffle \rightarrow On$ or Off

Default Pattern1 **Setup** → **Shutter sound** → Select an item

Default Pattern1 **Setup** → **Timer sound** → Select an item

Default Auto Setup → Flicker adjustment → Auto/50Hz (East Japan)/50Hz (West Japan)

Movie			
$\boxed{\blacksquare \rightarrow Media \rightarrow Settings \rightarrow Movie settings}$			
Set Repeat Mode Default All	 Repeat mode → Select an item Play a single file repeatedly, all movies, or all files in playlist repeatedly. 		
Set Shuffle Default Off	$Shuffle \rightarrow On \text{ or } Off$		
Set Backlight Default Always on	Backlight → Select an item		
Set Portrait Style Default 240 * 180	Display → Portrait style → Select an item		
Set Display for Activating Movie Default Landscape	Display → First view → Select an item		
Show/Hide Movie Preview On	$Display \rightarrow Preview \rightarrow On \text{ or } Off$		
Access/Ignore Linked Information Default On	 Web link → On or Off On: After playing a file with linked info, access confirmation appears. 		

Entertainment Settings

S! Information Channel

tart Here $\blacksquare \rightarrow Entertainment \rightarrow S!$ Information Channel/Weather \rightarrow Weather Indicator \rightarrow Settings

Set Weather Indicator Display Settings	Default On	Display setting \rightarrow On or Off
Set Weather Indicator Update Notification	Default On	Missed event setting \rightarrow On or Off
Set Weather Indicator Automatic Update	Default On	Auto update \rightarrow On or Off \rightarrow Yes as required

Security Settings

 \blacksquare \rightarrow Settings \rightarrow Security Start Here

Activate/Cancel Phone Lock Default Off	Phone lock \rightarrow On or Off \rightarrow Enter Phone Password \rightarrow \blacksquare (OK)	
Activate/Cancel Password Lock Default Off	$Password\ lock$ → On → Enter Phone Password → \blacksquare (OK)	
Change Phone Password Default 9999	Change password → Enter current password → \blacksquare (OK) → Enter new password → \blacksquare (OK) → Enter new password again → \blacksquare (OK)	
Activate/Cancel Function Lock Default All unlocked	$Function\ lock$ → Check an item → \square (Save) → Enter Phone Password → \blacksquare (OK)	
Activate/Cancel Secret Mode Default Hide	$Secret\ mode$ → Enter Phone Password → \blacksquare (OK) → Select an item	
Activate/Cancel USIM Lock Default Off	$USIM\ lock o On \ or \ Off o$ Enter USIM Password (four- to eight-digit) $ o$ \blacksquare (OK) $ o$ Enter USIM Password again as required $ o$ \blacksquare (OK)	
Activate/Cancel PIN Certification	$PIN\ certification \rightarrow On\ or\ Off \rightarrow Enter\ PIN \rightarrow \blacksquare\ (OK)$	
Change PIN	Change PIN → Enter current PIN → \blacksquare (OK) → Enter new PIN → \blacksquare (OK) → Enter new PIN again → \blacksquare (OK) • To change PIN code, set PIN certification to On.	
Change PIN2	<i>Change PIN2</i> → Enter current PIN2 → \blacksquare (OK) → Enter new PIN2 → \blacksquare (OK) → Enter new PIN2 again → \blacksquare (OK)	
Set Secret Mode on Sub-folder in Data Folder Default Hide	Secret data folder → Enter Phone Password → \blacksquare (OK) → Select item	
Delete Phone Book Entries, Messages, etc.	$Reset \rightarrow All \ reset \rightarrow Enter \ Phone \ Password \rightarrow \bigcirc (OK) \rightarrow Yes$	
Restore Settings to Default Values	$Reset \rightarrow Reset \ settings \rightarrow \text{Enter Phone Password} \rightarrow \blacksquare \ (OK) \rightarrow Yes$	
Set Mobile Tracker Default Off	Mobile tracker → Enter Phone Password → ■ (OK) → Activation → On → Recipients → Select To field → Phonebook/Direct input → Search and select entry/Enter phone number → \square (Done) → Sender → Enter Sender name → \square (Save)	

Memory Settings

Start Here

 \blacksquare \rightarrow Settings

Check Memory Card Details	 Memory settings → Memory card Check Memory Card name, memory capacity, or remaining memory. 	
Rename Memory Card	<i>Memory settings</i> → <i>Memory card</i> → <i>Name</i> → Enter name	
Format Memory Card	<i>Memory settings</i> → <i>Memory card</i> → \boxdot (Format) → Enter Phone Password → \blacksquare (OK) → <i>Yes</i>	
Confirm Total/Remaining Phone Memory	Memory settings → Phone memory • View Phone memory capacity or remaining memory.	
Clear Phone Memory	<i>Memory settings</i> → <i>Phone memory</i> → \boxdot (Clear) → Check an item → \boxdot (Clear) → Enter Phone Password → \blacksquare (OK) → <i>Yes</i>	
View Memory Status	Memory settings → Memory status → Select an item • If Data Folder is selected, select Phone memory/Memory card. • To delete viewed memory, press (Celete) (P.11-12 Deleting Registered/Saved Data).	
Back up Memory	$Backup \& Restore \rightarrow Backup \rightarrow Yes \rightarrow $ Enter Phone Password $\rightarrow \blacksquare $ (OK) $\rightarrow $ Select an item $\rightarrow Yes$	
Restore Memory	Backup & Restore → Restore → Yes → Enter Phone Password → \blacksquare (OK) → Selected item → Select item → Select a file → Add or Overwrite as required	
Set Frequency for Auto Back up	Backup & Restore \rightarrow Auto backup \rightarrow Backup cycle \rightarrow Cycle \rightarrow Weekly/Monthly \rightarrow Select day/Enter date \rightarrow Start time \rightarrow Enter start time • After selecting Cycle, select Off to cancel Auto back up.	
Set Item to Back up Automatically Default All	$Backup \& Restore → Auto backup → Backup items → Check items → \square (Save)$	
Set Encryption for Items to Back up Automatically Default On	Backup & Restore \rightarrow Auto backup \rightarrow Encryption settings \rightarrow Select item \rightarrow On or Off	
Set Default Memory to Phone/Memory Card Default Memory card first	Connectivity → Save to → Select an item With Memory Card inserted, select Phone or Memory card first. Available when editing images, saving S! Mail attachments, downloading files, etc. To save a file to Memory Card, insert Memory Card.	

Connectivity Settings

Infrared

Start Here

 \blacksquare \rightarrow Settings \rightarrow Connectivity \rightarrow Infrared

Receive Infrared Transmission	Receive
Transfer Account Details	Transfer my details
Transfer Files	$Transfer\ files$ → Select Data Folder → Check files → \square (Send)
Transfer All Phone Book Entries, Calendar/Tasks , Bookmarks, Notes or Messages at Once	<i>Transfer all</i> → Enter Phone Password → \blacksquare (OK) → Select an item → Enter Authorization Code (four-digit) → \blacksquare (OK) • For <i>Phonebook</i> , choose <i>Yes</i> to transfer images.

USB

		■ \rightarrow Settings \rightarrow Connectivity \rightarrow Mass storage \rightarrow Yes \rightarrow Enter Phone Password
Ad	tivate Mass Storage	→ ((0K)
		You need to connect handset and your PC before this operation.

Network

Start Here

 \blacksquare \rightarrow Settings \rightarrow Network settings

Retrieve Network Information Manually	Retrieve NW info → Yes or No
Seek the Most Prioritized Network	Re-search signal → Yes or No

Appendix

Troubleshooting	14-2
Cleaning Handset	14-5
Drying Handset	14-5
Reattaching Port Cover	14-6
Software Update	14-7
Function List Main Menu Simple Mode Menu Default Mode Settings	14-7 14-9
Text Entry Window Key Assignments	14-12
Symbols	14-13
Pictograms	14-14
Memory	14-15
Specifications SoftBank 001SC Materials & Finishing Battery Phone Book Image Size Media Player File Type	14-15 14-16 14-16 14-18 14-18
Warranty & Service	14-19
Warranty Repair Requests	
Customer Service	14-29



Troubleshooting

Problem	Possible Cause	Solution
Handset does not	Is battery empty?	Replace or charge battery.
turn on	Is battery installed in handset?	Install battery correctly.
When power is turned on, PIN entry window appears	ls PIN certification set to On ?	If PIN certification is On , enter PIN.
When power is turned on, USIM Password entry window appears	Is USIM lock set to On ?	If <i>USIM lock</i> is <i>On</i> , enter USIM Password.
Please insert USIM	Is USIM Card correctly installed?	If the message appears even though USIM Card is correctly installed, it may be damaged.
card, Incorrect USIM or USIM	Is USIM Card still being loaded?	Try again after a while.
card failed appears when handset is turned on or executing a function	Is an incorrect USIM Card being used?	Check to see if correct USIM Card is being used.Use USIM Card specified by SoftBank.
	Are there foreign particles on USIM Card IC chip?	Remove foreign particles with a clean, dry cloth, and then install USIM Card correctly.
圈外 or OUT appears and no calls can be placed	Handset is out-of-range.	Move to a place where the signal is stronger and try again.
Calls are interrupted or	Does 圏外 or OUT appear?	Move to a place where the signal is stronger and try again.
disconnected	Is battery empty?	Replace or charge battery.

Problem	Possible Cause	Solution
Unablata da a	Is Call Barring set?	Deactivate Call Barring.
Unable to place a call	Is <i>Offline</i> set to <i>On</i> ? appears)	Set <i>Offline</i> to <i>Off</i> .
Unable to open Phone Book entry, Data Folder, Call Log, Calendar, Notepad, Tasks, Yahoo! Keitai, or Messaging	ls Function lock set?	Cancel <i>Function lock</i> .
Clicking noise is heard during a call	-	Noise may be generated when signal is weak or while moving between coverage areas.
Receiver/speaker volume is low, or sound quality is poor.	Is volume setting adequate, or is Clear talk set to On? Are any foreign objects attached on	Change each setting (◆P.3-3, P.3-18). Clean handset (◆P.14-5).
	Microphone, Speaker or Air Vent?	Cican nanasci (VI.14-3).

Problem	Possible Cause	Solution
	Is AC Charger Connector securely inserted into handset?	Check which way the AC Charger connector is facing then securely insert it.
	Is AC Charger plug securely inserted?	Insert AC Charger plug securely.
	Is battery installed in handset?	Install battery correctly.
	Are handset terminals and AC Charger clean?	Clean contacts with a dry cotton swab.
Unable to charge battery	Was battery charged in ambient temperatures below 5 °C or above 40 °C?	Charge battery in ambient temperatures between 5 °C and 40 °C.
	Battery may need to be replaced.	Install a new battery.
	Does battery always lose its charge quickly after being charged?	Battery life has expired. Replace with a new battery.
	Does handset or battery become very warm during charging?	If the temperature rises too much, charging may stop. After handset and battery are cool, retry charging.
Devices become	During charging, AC Charger may heat up.	If handset is safe to touch, heat level is normal. If it is too hot to
hot	Handset may heat up during charging/long calls.	touch, immediately stop charging and contact Customer Service (�P.14-29).

Problem	Possible Cause	Solution
Battery drains quickly	Battery may drain quickly depending on the operating environment (ambient temperature, charging conditions, or signal strength), operations, and settings.	Use handset in an appropriate environment and reduce operations requiring high power (◆P.1-6).
	Is handset being used near fluorescent light?	Use handset as far away from fluorescent light as possible.
Display flickers	-	Default: <i>Brightness</i> is set to <i>Auto adjustment</i> ; display might repeatedly brightens or darkens in accordance with the ambient environment. Unmark <i>Auto</i> <i>adjustment</i> (♠P.13-6).
Display is dim or unlit	-	This may be due to the characteristics of Display and not a problem. The time until Display is dimmed or unlit can be changed by adjusting the Backlight time.
	ls Manner mode set?	Cancel Manner mode.
Unable to play music via speaker	Is the Stereo Earphone Microphone (Optional) connected?	Disconnect the connector for the Stereo Earphone Microphone (optional) from handset.
Too many applications are already running. appears	Too many functions are active.	Close some.

Problem	Possible Cause	Solution
Unable to establish	Is USB driver installed?	A driver must be installed in order to communicate with a computer via a USB cable. Download USB Driver Installer from SAMSUNG Website (http://jp.samsungmobile.com/pc/lineup/001download.html) and install the driver.
USB connections using Samsung New PC Studio	Use the Samsung New PC S Is connection method set correctly on the computer? Use the Samsung New PC S Connection manager to mat the communications being u or set to USB with the conne wizard.	
	Is USB connection port setting the same for PC and software the same?	Make sure port settings match those set for Samsung New PC Studio Connection Manager or Connection Wizard.
Phone Book entry,	In Security, is Secret	In Security, set Secret mode to
Message folder,	mode set to Hide?	Show.
schedule event in Calendar, or Tasks do not appear	Is Secret under each function set to On ?	Select <i>Unlock temporarily</i> from on the window to view information.
Sub folder does	In Security, is Secret data folder set to Hide?	In Security, set Secret data folder to Show.
not appear	Is Secret under each function set to On ?	Select <i>Unlock temporarily</i> from ☑ on the window to view information.
Sending message failed appears If send fails, error message and reason appear.		Confirm reason and try again.

Dbl	Danible Come	C-1-4:		
Problem	Possible Cause	Solution		
Service not allowed	Handset is outside the	Send from within the service area.		
appears	service area.	Send from within the service area.		
Sending operation	In <i>Offline</i> , handset			
cannot be operated	transmissions are	Set <i>Offline</i> to <i>Off</i> (�P.1-11).		
in offline mode	disabled.	set Offithe to Off (Or.1-11).		
appears	uisableu.			
Storage space short				
by * * bytes. Edit	Handset memory is full.	Delete unnecessary files and try again.		
data folder files?	nanuset memory is iuii.			
appears				
Cannot download.		File cannot be downloaded:		
File corrupt.	-	cancel download.		
appears		Caricei download.		
Unable to call via		Even if <i>Earphone call</i> number		
Stereo Earphone	ls <i>Earphone call</i> set	is saved, if <i>Earphone call</i> is set		
Microphone	to <i>Off</i> ?	to <i>Off</i> it will not be dialed. Set		
(Optional)		<i>Earphone call</i> to <i>On</i> (♠P.13-10).		

- Before cleaning handset, make sure that Battery Cover and Port Cover are closed firmly.
- Do not use a washing machine or ultrasonic cleaner.
- Do not place handset in a microwave oven to dry it. Battery/handset may leak, burst, overheat or ignite; may cause malfunction, accident or injury.
- Do not dry handset by exposing it to extreme heat (e.g., hot air from dryers, etc.); may cause warping, discoloration or damage.
- Do not subject handset to strong shocks or impacts; do not poke Air Vent, Microphone, Earpiece, Speaker, etc. with a cotton swab or sharo object:


Drying Handset

If handset gets wet, follow these steps to dry it:

- Wipe handset surface with dry cloth
- Firmly grasp hinges, and shake handset about 20 times



3 Pat dry cloth on grooves (Microphone, Earpiece Speaker, etc.) to remove moisture

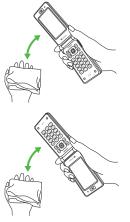

4 Leave handset for approximately two to three hours at room temperature

If Port Cover becomes detached from handset, follow these steps to reattach it: Reattaching Port Cover for Memory Card is the same as that of External Device Port.

Follow steps illustrated below:
 Reattaching Port Cover for Memory Card is the same as that of External Device Port.



- 1 → Tools → Useful → Software update
- **2** Start update → \square (Yes)
 - · Handset connects to network.
- 3 Yes
 - Read Terms of Use before selecting Yes.
- 4 (OK)
 - Update starts. When complete, handset powers off and restarts; notification appears.

Software update Reboot completed. N ow checking updated information.

- For procedures, see SoftBank Mobile Website: (http://mb.softbank.jp/en/global_services/)
- Confirming/downloading updates does not incur fees.

Note

- Updates do not incur communications charges.
- Updates may take up to approximately 30 minutes. Handset is disabled until update is completed.
- · Make sure battery is full before updating.
- Update where the signal is strong, do not move while updating.
- While updating, other functions are unavailable.
- Always back up important information (some data such as downloaded files, etc. may not be backed up). Data saved on handset before updating remain there, but in some situations (malfunctions, etc.), data may be lost. SoftBank Mobile is not liable for damages from lost information, etc.
- Do not remove battery and USIM Card. Do not turn off handset. Update may fail.
- Update failure may disable handset.
 Contact SoftBank Mobile Customer Center,
 Customer Assistance (P.14-29).
- If updated handset fails to restart, remove and reinsert battery then power on. If this fails, call SoftBank Mobile Customer Center, Customer Assistance (⊕P.14-29).

Function List

Main Menu

To show the below items in Standby, press .

	Main Menu Item Page					
Mes	Messaging					
	Received msg.	P.4-11				
	Create new	P.4-3				
	Retrieve new	P.4-7				
	Drafts	P.4-11				
	Templates	P.4-11				
	Sent msg.	P.4-11				
	Unsent msg.	P.4-11				
	Server mail	P.4-24				
	Create new SMS	P.4-5				
	Settings	P.13-11				
	Memory status	P.4-25				
Yahoo!						
	Yahoo! Keitai	P.5-3				
	Menu list	P.5-3				
	Bookmarks	P.5-7				
	Saved pages	P.5-7				
	Last page	P.5-3				
	Web search	P.5-9				
	Enter URL	P.5-3				
	History	P.5-3				
	PC site browser	P.5-4				
	Browser settings	P.13-15				

	5	⋖	•
d	1	ļ	1

	Main Menu Item Page					
Infra	ared					
	Receive	P.12-4				
	Transfer my details	P.13-23				
	Transfer files	P.13-23				
İ	Transfer all	P.12-3				
Ente	ertainment	·				
	S! Information Channel/ Weather	P.8-3				
	S! Quick News	P.8-3				
	Free Contents	P.8-5				
	S! Addressbook Back-up	P.12-9				
Can	nera					
	Camera	P.6-6				
	Video camera	P.6-10				
	Bar code reader	P.9-9				
	Name card reader	P.9-10				
	Text reader	P.9-10				
	Dictionary reader	P.9-10				
	Magnifier	P.9-15				
	Photo album	P.6-11				
Alar	m	P.9-3				
Tool	S					
	Daily					
	Tasks	P.9-6				
	Photo album	P.6-11				
	Stopwatch	P.9-6				
	Countdown timer	P.9-7				
	World clock	P.9-7				
	Good night timer	P.9-7				

Tools	е						
Useful							
Calculator P.9-8							
Notepad P.9-8 Barcode/Scan P.9-9							
Infrared P.12-3							
minarea mina							
Converter P.9-12							
Split the bill P.9-12							
Voice recorder P.9-13							
File viewer P.9-14							
Magnifier P.9-15							
Dictionary P.9-15							
	P.14-7						
Data Folder							
Pictures P.11-2							
Digital camera P.11-2							
My Pictograms P.11-2							
Mail Art P.11-2							
Ring Songs · Tones P.11-2							
Music P.11-2							
Videos P.11-2							
Message templates P.11-2							
Other documents P.11-2							
Memory status P.11-12							
Media							
Music P.7-4							
Movie P.7-7							
Settings P.13-19							
Calendar P.9-4							

	Main Menu Item	Page				
Phor	Phone					
	Phonebook	P.2-12				
	Create new entry	P.2-12				
	Call log	P.3-8				
	Play messages	P.3-6				
	Call voicemail	P.3-13				
	My details	P.1-10				
	Group settings	P.2-19				
	Favorites	P.3-4				
	Mail group	P.4-13				
	S! Addressbook Back-up	P.12-7				
	Settings	P.13-10				
	Memory status	P.13-22				
Setti	ngs					
	Sound settings	P.13-4				
	Display settings	P.13-5				
	Phone settings	P.13-2				
	Menu switch	P.2-3				
	Security	P.13-21				
	Call settings	P.13-7				
	Manner mode settings	P.13-7				
	Connectivity	P.13-23				
	Network settings	P.13-23				
	Memory settings	P.13-22				
	Backup & Restore	P.13-22				

Appendix

Simple Mode Menu

Below are menu items shown in Main Menu when setting simple mode.

	Main Menu Item					
Mess	Messaging					
	Received msg.	P.4-11				
	Create new	P.4-3				
	Drafts	P.4-11				
	Templates	P.4-11				
	Sent msg.	P.4-11				
	Unsent msg.	P.4-11				
	Create new SMS	P.4-5				
	Settings	P.13-11				
Yaho	Yahoo!					
	Yahoo! Keitai	P.5-3				
	Menu list	P.5-3				
	Bookmarks	P.5-7				
	Saved pages	P.5-7				
	Last page	P.5-3				
	Web search	P.5-9				
	History	P.5-3				
	Browser settings	P.13-15				
Cale	ndar	P.9-4				
Tools	5					
	Calculator	P.9-8				
	Notepad	P.9-8				
	Tasks	P.9-6				
	Photo album	P.6-11				
	Split the bill	P.9-12				

Main Menu Item	Page	
Tools		
Barcode/Scan	P.9-9	
Infrared	P.12-3	
Music	P.7-4	
Movie	P.7-7	
Voice recorder	P.9-13	
Stopwatch	P.9-6	
Countdown timer	P.9-7	
Magnifier	P.9-15	
Camera		
Camera	P.6-6	
Video camera	P.6-10	
Bar code reader	P.9-9	
Name card reader	P.9-10	
Text reader	P.9-10	
Dictionary reader	P.9-10	
Magnifier	P.9-15	
Photo album	P.6-11	
Data Folder		
Pictures	P.11-2	
Digital camera	P.11-2	
My Pictograms	P.11-2	
Mail Art	P.11-2	
Ring Songs · Tones	P.11-2	
Music	P.11-2	
Videos	P.11-2	
Message templates	P.11-2	
Other documents	P.11-2	
Memory status	P.11-12	
Alarm	P.9-3	

Main Menu Item	Page
Phone	
Phonebook	P.2-12
Create new entry	P.2-12
Call log	P.3-8
Play messages	P.3-6
Call voicemail	P.3-13
My details	P.1-10
Favorites	P.3-4
Mail group	P.4-13
Settings	P.13-11
Settings	
Sound settings	P.13-4
Display settings	P.13-5
Phone settings	P.13-2
Menu switch	P.2-3
Security	P.13-21
Call settings	P.13-7
Manner mode settings	P.13-7
Connectivity	P.13-23
Memory settings	P.13-22
Backup & Restore	P.13-22

Default Mode Settings

Default Volume and Ringtone settings vary depending on mode. Change incoming transmission response by mode. Available items vary by mode. See defaults below (�P.13-7).

Mode	Normal	Manner	Drive	Meeting	Outdoor		
/olume							
Voice call	Level 3	N/A	N/A	Off	Level 5		
Message	Level 3	N/A	N/A	Off	Level 5		
Missed call notification	Level 3	N/A	N/A	Off	Level 5		
S! Quick News	Off	N/A	N/A	Off	Off		
Delivery report	Level 3	N/A	N/A	Off	Level 5		
Phone sounds	Level 3	N/A	N/A	Off	Level 5		
Ringtone (Ringtone: Duration)							
Voice call	Samsung Tune	N/A	N/A	Samsung Tune	Samsung Tune		
Message	Good_morning: 5 seconds	N/A	N/A	Good_morning: 5 seconds	Good_morning: 5 seconds		
Missed call notification	Bubble: 5 seconds	N/A	N/A	Bubble: 5 seconds	Bubble: 5 seconds		
S! Quick News	Postman: 5 seconds	N/A	N/A	Postman: 5 seconds	Postman: 5 seconds		
Delivery report	Doorbell: 5 seconds	N/A	N/A	Doorbell: 5 seconds	Doorbell: 5 seconds		
Vibration					<u> </u>		
Voice call	Off	Pattern 1	N/A	Off	Off		
Message	Off	Pattern 1	N/A	Off	Off		
Missed call notification	Off	Pattern 1	N/A	Off	Off		
S! Quick News	Off	Off	N/A	Off	Off		
Delivery report	Off	Pattern 1	N/A	Off	Off		
Phone sounds							
Keypad tones	Off	N/A	N/A	Off	Off		
System sounds	Several tones on	N/A	N/A	Alerts on call	Several tones on		

Item	Mode	Normal	Manner	Drive	Meeting	Outdoor
External light						
Incoming						
Voice	e call	Blue	Blue	N/A	Blue	Blue
Mess	sage	Green	Green	N/A	Green	Green
Misse	ed call notification	Blue	Blue	N/A	Blue	Blue
S! Qı	uick News	White	White	N/A	White	White
Alarr	n	Pink	Pink	N/A	Pink	Pink
Deliv	ery report	Light blue	Light blue	N/A	Light blue	Light blue
Notification	on					
Misse	ed call	Blue	Blue	N/A	Blue	Blue
Mess	sage	Green	Green	N/A	Green	Green
Ansv	vering Machine	Yellow	Yellow	N/A	Yellow	Yellow
Misse	ed call notification	Blue	Blue	N/A	Blue	Blue
Misse	ed alarm ¹	Pink	Pink	N/A	Pink	Pink
Deliv	ery report	Light blue	Light blue	N/A	Light blue	Light blue
Close fold	er	Pink	Pink	N/A	Pink	Pink
Answering mad	chine	Off	Off	N/A ²	Off	Off

¹Setting for missed schedule (�P.9-4) or task (�P.9-6) notification (not for Alarm (�P.9-3) or Alarm in Schedule or Tasks).

²Answering machine activates automatically in Drive mode and cannot be disabled.


Multiple characters are assigned to each key. Press a key repeatedly until the target character appears.

Press to change text entry mode.

Press to add, press to to toggle upper/lower-case.

Key	Kanji/Hiragana	Katakana	Alphanumerics	Numbers
() .0	あいうえおぁぃぅぇぉ 1	アイウエオァィゥェォ 1	.@/: ~ ¹ 1	1
(2 ABC)	かきくけこ2	カキクケコ2	ABCabc2	2
3 8	さしすせそ3	サシスセソ3	DEFdef3	3
4 E	たちつてとっ4	タチツテトッ4	GHIghi4	4
(5 %)	なにぬねの5	ナニヌネノ5	JKLjkl5	5
6 MNO	はひふへほ6	ハヒフへホ6	MNOmno6	6
7 g	まみむめも7	マミムメモフ	PQRSpqrs7	7
(8 TV)	やゆよゃゅょ8	ヤユヨャュョ8	TUVtuv8	8
(9 wxz)	らりるれろ9	ラリルレロ9	WXYZwxyz9	9
() ÷	わをんー <space> O</space>	ワヲンー <space> O</space>	' <space>0</space>	0
(* ^^	Add * / * to unfixed, convertible kana Toggle capital letter/lower case for convertible kana.		Toggle upper/lower-case (only before fixing and convertible character for entering alphabets)	-
# in v	、。! ? <line break=""></line>		,.!? <line break=""></line>	#
	Reverse toggle characters assigned to the same key before finalizing character selection		ter selection	-
	Change entry mode			
P	Change Entry mode to Pictogram/Symbol/Emotion			

 1 When double-byte, " $_{\sim}$ " cannot be used (" $_{\sim}$ " appears on Display).

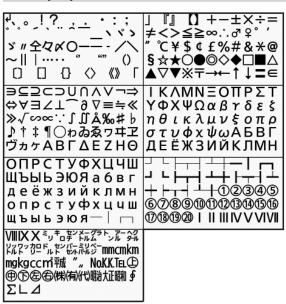

Single-byte Symbols

 √、。!? "#\$%&' () *+, −. /:;

 <=>@[¥]^_`{|}~[J·-*°

Symbol Conversions

Symbol Label	Symbols	Symbol Labels	Symbol
あっと	@ @	こめ	*
いこーる	==	ころん	
えん	¥¥	さんかく	$\blacktriangle \triangle \blacktriangledown \triangledown$
おんぷ	D	しかく	
かける	×	どう	//々ゝ仝
	0 [] [] ()	ぱーせんと	% %
かっこ		ほし	★ ☆
		まる	00•
から	~	やじるし	←→ ↑ ↓

9

83

(3)

~

Pictograms with are animated.

[·] Some pictograms and animated pictograms may not appear properly on some models of SoftBank handsets or other devices.

SI Mail/	Received msg.	Up to 1000 messages or 10MB	
SMS	Drafts	Up to 20 messages or 3MB	
(Phone	Sent msg.	Up to 500 messages or 5MB	
memory)	Unsent msg.	Up to 20 messages or 3MB	
SMS	USIM Card	Up to 10 messages	
	Pictures		
	My pictograms		
	Mail Art	Up to 999 items (files/sub-folders) per folder or 50 MB	
Data Folder	Ring songs · tones		
Data Folder	Music		
	Videos		
	Message Templates]	
	Other Documents		
Calendar/ Tasks	Up to 500 schedules/tasks		
Notepad	Up to 100 memos		
Phonebook	Handset	Up to 1000 members	
FIIONEDOOK	USIM Card	Up to 50 members	

Specifications

Handset specifications may change without prior notice.

SoftBank 001SC

Item	Specification
Weight*	124 g
Continuous Talk Time*	Voice Call: 200 minutes (3G)
Continuous Standby Time* (Display off)	350 hours (3G)
Dimensions (W x H x D))*	$51 \times 113 \times 11.7$ (Thinnest part) 14.8 (Thickest part)
Maximum Output	0.25 W
Charging Time	120 minutes

^{*}Approximate value

- · Handset with battery installed.
- Battery Time is calculated by SoftBank Mobile under stable signal conditions.
 Calling in poor signal conditions or leaving handset on out-of-range will consume more power and may reduce Battery Time by more than half.
- Frequent handset operations requiring Backlight (e.g., Yahoo! Keitai) may reduce Continuous Talk Time and Continuous Standby Time.
- Using video for Wallpaper may significantly reduce Continuous Talking and Continuous Standby Time.
- Continuous Talk Time is an average measured with a battery in stable signal
 conditions. Continuous Standby Time is an average measured with a new, fully
 charged battery with handset closed without calls or operations, in Standby,
 in stable signal conditions. Alternating between usage and Standby shortens
 Continuous Talk Time and Continuous Standby Time. Talk Time/Standby Time may
 vary by environment (battery status, ambient temperature, etc.).

Materials & Finishing

Parts	Materials & Finishing
Housing (upper)	SUS/SPRAY
Housing (lower)	PC+GF 20 % (STS INSERT)/SPRAY
Housing (front)	PC+GF 20 % (STS INSERT)/SPRAY
Housing (rear)	PC+GF 20 %/SPRAY
Side Cover (Charging Terminals)	PC+Silicon (bonding)/SPRAY
Side Cover (Memory Card)	PC+Silicon (liquid)/SPRAY
Hinge Cover	PC/SPRAY
Screws	SUS/NI
Infrared Port	Acrylic+PC/Print
Display	Acrylic+PC/Print
Service LD	PC
Camera Window	Acrylic+PC/Print
Keypad	PC Sheet (UV Molding)/SPRAY
Battery Cover	PC+GF20%/SPRAY

Battery

Item	Specification
Voltage	3.7 V (3.3 V - 4.2 V)
Туре	Lithium-ion
Capacity	780 mAh
Dimensions (W x H x D)	Approximately 44.1 × 37.25 × 4.7 mm (excluding protruding parts)

Phone Book

Each entry contains these items:

	Item/Description	Location			
La:	Last name				
	Double/single-byte (saved to <i>Name</i> in USIM Card Phone Book)	Handset: Yes (up to 50 bytes)			
	(Saved to 1 vame in oshivi cara i none book)	USIM Card: Yes ¹			
Fin	st name				
	Double/single-byte (saved to <i>Name</i> in USIM Card Phone Book)	Handset: Yes (up to 50 bytes)			
L		USIM Card: Yes ¹			
Re	ading last name				
	Single-byte (saved to <i>Reading name</i> in USIM Card	Handset: Yes (up to 50 bytes)			
	Phone Book)	USIM Card: Yes ¹			
Re	ading first name				
	Single-byte	Handset: Yes			
	(saved to <i>Reading name</i> in USIM Card	(up to 50 bytes)			
	Phone Book)	USIM Card: Yes ¹			
Ph	one number				
	Saved with area code	Handset: Yes			
		(five entries/up to 32 bytes)			
		USIM Card: Yes ^{1 2}			
Ph	one icon				
	61	Handset: Yes			
	Select one of seven icons	USIM Card: No ³			
E-r	E-mail address				
		Handset: Yes			
	Single-byte alphanumerics	(five entries/up to 128 bytes)			
		USIM Card: Yes			

	Item/Description	Location			
E-r	E-mail address icon				
	Select one of four icons	Handset: Yes			
	Select one of four icons	USIM Card: No			
Pic	ture				
	Still image appears for incoming calls.	Handset: Yes			
	Select a Data Folder image/Character icon or capture with Camera	USIM Card: No			
Gro	oup				
	Select from original five groups including No	Handset: Yes			
	group , and added group Maximum 21 groups can be added.	USIM Card: Yes ²			
Bir	thday				
	Date of birth	Handset: Yes			
	Date of biltin	USIM Card: No			
Blo	ood type				
	Select one of four types or <i>None</i>	Handset: Yes			
	select one of four types of Trone	USIM Card: No			
Ad	dress				
	Post code (up to 40 bytes), Country (up to 64	Handset: Yes			
	bytes), Province, City, Street and Additional	(two entries)			
	information (up to 128 bytes)	USIM Card: No			
Ad	dress icon				
	Select one of three icons	Handset: Yes			
	Select one of timee icons	USIM Card: No			
Но	mepage				
		Handset: Yes			
	Enter up to 1024 bytes	(two entries)			
		USIM Card: No			

	Item/Description	Location	
Но	Homepage icon		
	Select one of three icons	Handset: Yes	
	Select one of three icons	USIM Card: No	
Со	mpany		
	Enter up to 64 bytes	Handset: Yes	
	Linter up to 64 bytes	USIM Card: No	
Jol	title		
	Enter up to 64 bytes	Handset: Yes	
	Linter up to 64 bytes	USIM Card: No	
Me	emo		
i [Enter up to E12 hutes	Handset: Yes	
	Enter up to 512 bytes	USIM Card: No	
Se	cret		
	On/Off	Handset: Yes	
		USIM Card: No	
Ringtone			
	Voice Call/Messages	Handset: Yes	
	Selectable from Data Folder	USIM Card: No	
Vibration			
	Set Vibration for Voice Call/Messages	Handset: Yes	
	Set vibration for voice Call/Messages	USIM Card: No	

¹Number of savable characters varies depending by USIM Card.

copy entries.

handset confirmation appears when handset is first powered on. Choose Yes to

²Number of savable items varies depending by USIM Card.

• If different USIM Card (with saved entries) is inserted, copy saved USIM entries to

Image Size

Capturing options and corresponding image sizes:

Capture Mode	lmage Size	
Normal Scene	3.1M (1536x2048) Wide2.4M (123x2048) 2M (1200x1600) Wide1.5M (960x1600) Wide1.0M (768x1280) 0.3M (480x640) Wallpaper (240x400) Mail (240x320)	
Multi shot Photo combi	Wallpaper (240x400) Mail (240x320)	
Video	QVGA (320x240) QCIF (176x144) SQCIF (128x96) S! Mail (176x144) S! Mail (128x96)	

Media Player

Player	File (Extension)
Music	MPEG4 Audio (mp4, m4a*, or 3gp (sound only)), SoftBank Music Contents (smc)
Movie	MPEG4 (mp4, 3qp), H.263

^{*}If Album art is saved in m4a, it is played in window.

Note

Movie files exceeding 320 x 240 (mp4 or 3gp) in resolution cannot be played.

File Type

Г	Folder/Description	File Type¹	
E	Pictures		
	Image files captured with handset camera	JPEG, BMP, GIF, WBMP, PNG, Animation GIF	
6	Digital camera		
	Image files captured with the handset Camera (available only when Memory Card is inserted)	JPEG	
E	My Pictograms		
	Downloaded Pictograms	GIF, GPK	
E	Mail Art		
	Image related to message	JPEG, GIF	
E	Ring Songs • Tones		
	Voice Recorder files, downloaded music, and other sound files	MIDI, SP-MIDI, SMF, Mobile XMF, MPEG4 Audio, AMR	
E	Music		
	Downloaded Chaku-Uta®	MPEG4 Audio (mp4, m4a, 3gp), smc	
Videos			
	Handset video files	MPEG4 (mp4, 3gp) ²	

[•] To play a music file in a format other than above, select it from **Ring Songs** · **Tones**. Even compatible files must be saved in **Ring Songs** · **Tones** to play.

П	Folder/Description		File Type ¹	
E	Message Templates			
	S! Mail Templates	НМТ		
E	Other documents			
		wcf file	wcs file	₩ URL
	Document, graphic, vcf, vcs³, etc. files requiring File viewer for use on handset.	⊠ EML	₽DF	XLS
		P DOC	PPT PPT	TXT
			NNT	OPML
		(P) Unsuppo	rted file	

¹Files are saved by type. Files cannot be moved to or saved in folders that do not support them.

Warranty & Service

Headset specifications may change without prior notice.

Warranty

Handset purchase includes Warranty.

- Confirm shop name and date of purchase.
- Read through the contents of the Warranty and keep it in a safe place.
- The warranty period can be found in the Warranty.

SoftBank Mobile is not liable for damage to you or a third party from missed calls, etc. due to handset failure or malfunction, etc.

Repair Requests

Before submitting handset for repair, consult "Troubleshooting" (◆P.14-2) for a solution. If a problem persists, contact SoftBank Mobile Customer Center, General Information (◆P.14-29) or the nearest SoftBank Shop; be prepared to describe problem in detail.

- During the warranty period, repairs will be made under the terms and conditions described in the warranty.
- After the warranty period, repairs will be upon request; if said repairs can be made, you will be charged for them.

Note

- Handset files and settings may be lost or altered due to accidents or repairs. Keep a copy of important files, etc. like Phone Book entries.
 SoftBank Mobile is not liable for damage resulting from accidental loss or alteration of handset files (Phone Book, Data Folder, etc.) or settings.
- Disassembling or modifying this product may be a violation of the Radio Law. Note that SoftBank Mobile will not accept repair requests for disassembled or modified products.

²Files exceeding 320x240 in resolution cannot be played.

³Use vcf, vcs files to send or transfer handset files via S! Mail, etc. Handset supports vcf file. for Phone Book entries, and vcs file for Task/Schedule.

Index

Α		
AC Charger1-8		
Account Details		
Reset		
Adjust Volume		
Alarms		
All Reset10-7		
Answering Machine3-6		
Cancel		
Delete records		
Play records		
Set		
Any key answer		
Auto redial		
Auto redial13-10		
B Barcode/Scan9-9 Creating QR Code9-11		
B Barcode/Scan		
B Barcode/Scan 9-9 Creating QR Code 9-11 Scanning 9-9, 9-21 Battery 1-6, 1-7		
B Barcode/Scan. 9-9 Creating QR Code 9-11 Scanning 9-9, 9-21 Battery. 1-6, 1-7 Inserting & Removing 1-7		
B Barcode/Scan 9-9 Creating QR Code 9-11 Scanning 9-9, 9-21 Battery 1-6, 1-7		
B Barcode/Scan 9-9 Creating QR Code 9-11 Scanning 9-9, 9-21 Battery 1-6, 1-7 Inserting & Removing 1-7 Black List 3-7 Bookmark 5-7		
B Barcode/Scan. 9-9-9 Creating QR Code 9-11 Scanning 9-9, 9-21 Battery. 1-6, 1-7 Inserting & Removing 1-7 Black List 3-7 Bookmark 5-7 Delete 5-13		
B Barcode/Scan 9-9 Creating QR Code 9-11 Scanning 9-9, 9-21 Battery 1-6, 1-7 Inserting & Removing 1-7 Black List 3-7 Bookmark 5-7		

С
Cache5-3
Calculator
Calendar
Delete schedule
Save schedule
Schedule
View schedule 9-5, 9-17
Call Barring service 3-12, 3-16
Caller ID service
Call Forwarding service 3-12, 3-14
Call Log
Delete
View
Call time & cost
Check
Reset
Show charge after call
Call Waiting service
Camera
Attach to message for sending still image 6-12
Capture video
Editing Still Images
Effects
Macro
Photo combination
Quick Play 6-7, 6-10
Scene
Send a still image via infrared6-12

Settings 13-18, 13-19 Timer 6-12 Viewfinder 6-3, 6-8
ancel PIN lock
Center Access Code (Network Password) 1-13
hange mode settings
hanging PIN/PIN2
Charge Battery1-8
harger/External Device Port1-3
Clear memory
lear talk3-18
Color theme13-5
Conference Call service3-12, 3-15
Content Key info
Converter
Country number

D
Daily tools
Data Folder
Date & Time13-
Default mode settings1-12, 14-1
Dictionary
Display1-:
Backlight
Brightness
Clock/Calendar

	Set Ringtone	Call Log Record
Font	Sort	Data Folder
Mini clock	File Viewer9-14	Display
Operator name	Folder	File list11-3
Saving mode	Copy	Message
Smart wallpaper13-5	Create	Message list
Text scroll speed13-6	Delete	Movie window
Wallpaper	Rename	Music window
Display language13-2		Schedule
Download Content Key 7-9, 11-10	Free Contents	Shooting mode (still image)
to the second se	Function Lock	Shooting mode (video)
E		Weather
-	G	Image Viewer
arphone call13-10	Global Roaming	Incoming light
mergency call3-5	Good Night Timer 9-7, 9-20	Infrared
mergency Location Report3-5	4004 Hight Hiller	Authorization Code
	Н	Receive files
F	п	Send files
•		
Secretaria	History	International Code13-9
ace Link	Delete	International Code
Save	Delete	Internet
Save	Delete .5-10 Delete (S! Mail) .4-16 Delete (SMS) .4-19	Internet
Save	Delete .5-10 Delete (S! Mail) .4-16 Delete (SMS) .4-19 Internet connection .5-3, 5-4	Internet
Save	Delete .5-10 Delete (S! Mail) .4-16 Delete (SMS) .4-19 Internet connection .5-3, 5-4 S! Addressbook Back-up .12-9	Internet .5-2 Internet page 5-3, 5-5 Font size .5-10
Save	Delete .5-10 Delete (S! Mail) .4-16 Delete (SMS) .4-19 Internet connection .5-3, 5-4 S! Addressbook Back-up .12-9 S! Mail .4-16	Internet
Save	Delete .5-10 Delete (S! Mail) .4-16 Delete (SMS) .4-19 Internet connection .5-3, 5-4 S! Addressbook Back-up .12-9	Internet .5-2 Internet page. 5-3, 5-5 Font size .5-10
Save 11-4 Use 11-5 Favorites 3-4 File 11-3, 11-6 Copy 11-6 Delete 11-7 Icon 11-3	Delete .5-10 Delete (S! Mail) .4-16 Delete (SMS) .4-19 Internet connection .5-3, 5-4 S! Addressbook Back-up .12-9 S! Mail .4-16	Internet .5-2 Internet page 5-3, 5-5 Font size .5-10
Save 11-4 Use 11-5 Favorites 3-4 File 11-3, 11-6 Copy 11-6 Delete 11-7	Delete .5-10 Delete (S! Mail) .4-16 Delete (SMS) .4-19 Internet connection .5-3, 5-4 S! Addressbook Back-up .12-9 S! Mail .4-16	Internet .5-2 Internet page. .5-3, 5-5 Font size .5-10 K
Save 11-4 Use 11-5 Favorites 3-4 File 11-3, 11-6 Copy 11-6 Delete 11-7 Icon 11-3	Delete .5-10 Delete (S! Mail) .4-16 Delete (SMS) .4-19 Internet connection .5-3, 5-4 S! Addressbook Back-up .12-9 S! Mail .4-16	Internet .5-2 Internet page. 5-3, 5-5 Font size .5-10

Lock10-3	Settings	Move4-14
Function lock	Memory Card11-8	Move SMS
Password Lock	Insert/Remove	Received message icon
Phone Lock	Memory Card backup12-5	Receive Server Mail
PIN		Receiving mail list message
USIM Lock	Memory Status	Reply
Log	Menu Operationsiii	Retrieve all mail
Call Log	Message	Save attachment
J.	Action settings	Save templates
M	Attach file	Save to drafts
	Change folder name4-25	Send draft message
Machi-Uta®	Create folder	Sending options 4-18, 4-20
Mailbox	Create (S! Mail)	Send unsent message4-23
Drafts	Create (SMS)	Sent message icon
Received message	Delete	Server Mail
Sent message	Delete folder	Server Mail memory
Templates	Delete messages on Server	Set Secret
Unsent4-11	Delete templates	Setting address
Mail Group	Details	S! Mail
Main menu style	Draft message icon	S! Mail Send Reservation
-	Feeling settings	SMS4-2, 4-19
Manner mode	Font size	SMS Send Reservation
Mass Storage 12-5, 13-23	Forward	Sort
Media Player	Forward messages on Server	Spam4-15
Add to playlist	Graphic Mail 4-6, 4-18	Unsent message icon
Create Playlist	Icon (attached file)	View
Download	Lock/Unlock	View Attachment
Play movie	Mail Server	Mobile Tracker
Play music	Maximum Size	Multi Selector Operations iii
Play playlist	Memory Status	Mute
Repeat mode	Message notice	witte

View update information	Emoticons	Video C 43
Weather Indicator	Entry mode	Attach to message for sending video 6-12
S! Information Channel/Weather	Line Break	Send video via Infrared6-12
Settings	Paste	View
Softkeysii	Pictograms	Scanned Barcode
Software update	Symbol	Voice Call
Sounds & Vibration	Undo	Adjust volume
Speakerphone call	Time zone	Hold incoming call
Split the Bill		Mute
S! Quick News	U	Whisper
Delete	Unanswered Call	Voicemail service
Refresh	USB connection	Voice Recorder
Register	Useful tools	Play sound files
SSL/TLS	User's Dictionary	Record sound
Standby Display	Delete	Send sound files9-23
Stopwatch	Save	Volume
Symbols	USIM Card	W
Т	USIM Lock	Window
		Calendar
Tasks 9-6 Delete 9-19	USIM Password	Movie window
	Using Main Menu2-2	Music window
Templates	Using Shortcuts	Still Image Viewer
Text Entry		Video Viewfinder
Copy	V	Voice Recorder
Cut	vcf, vcs file	Window Operations
Delete	Vibration	Phone Book window
Edit	vibration	Text Entry Window

Υ	
Yahoo! Keitai5	-3
Copy text	j-9
Delete Certificate	15
Details	10
Enter URL	j-3
Font size	3-5
Manufacture Number	15
Root Certificates	16
Search	j-9
Sending URL	5-9

Objective Index	Change	Phone Book entry
Add	Font size in page	Schedule
Favorites	Mail address	Still images
	Mode1-12	Tasks
Adjust volume	Phone Password10-3	Text
Hearing volume	PIN	Initialize
Backup	PIN2	Browser
Memory Card12-6	Сору	Initiate
Phone Book	File/Folder	Memory Card11-8
Cancel/Unlock	Message content	,
Answering Machine	Scanned characters	Insert/Remove
Call Barring	Text	Battery
Caller ID	Text in page	Memory Card11-8
Call Forwarding	Delete/Clear	USIM Card1-5
Call Waiting	Call Log	Place a call
File Lock	Favorites	Emergency call
Infrared	File/Folder	International call
Key Lock	History	Voice Call
Manner mode	Memory	Play
Message Lock	Messages	Movie
Messages	Notepad	Music
Offline Mode	Phone Book	Playlist
Password Lock	Records (Answering Machine)	Records (Answering Machine) 3-6
Phone Lock	Reject Number	Sound
PIN Lock	Schedule9-17	Voice Recorder
Secret mode	Tasks	Protect/Lock
Vibration	Text	File
Voicemail3-13	User's Dictionary	Files
Whisper3-18	Edit	Function Lock
	Account Details	Message
	Account Details	Messages4-12

Search Infrared 13-23 Account betains From Early Characters in page 9-23 International Code 13-9 Call Log 3-8 Notepad 9-20 Key Lock 1-11 Captured Pictures 6-7 Phone Book entry. 2-13 Manner mode 1-11 Data Folder 11-3 Tasks 9-19 Media Player 13-19 Data on Memory Card 11-3 Send Message Lock 4-23 Memory status 4-25, 11-9 Favorites 3-5 Missed Call Notification 3-14 Message 4-7, 4-9, 4-21, 4-24 Files 11-11 Mobile Tracker 10-5 Photo Album 6-11 Infrared 12-3 Offline Mode 1-11 Ranking 3-8 Massage (SMS) 4-5 Operator 3-11 Recorded Video 6-10 Message (S! Mail) 4-3 Password Lock 10-4 Schedule 9-5	Messages 4-8, 4-24 USB connection Reset Alarm Answering Account Details 1-13 Answering Alarm 9-3 Any key ar All Reset 10-7 Black List. Call Time & Cost. 3-10 Call Barrin Ranking 3-9 Caller ID. Reset settings 10-6 Call Forwa Save Call Waitin Face Link 11-4 Camera Mail address 4-3 Date & Tim Message 4-19 Display Phone Book entry 2-12 File Lock Tasks 9-6 Font. User's Dictionary 2-11 Font size in Infrared Notepad 9-20 Key Lock Key Lock Phone Book entry 2-13 Manner m Media Play Send Message L Message L Favorites 3-5 Missed Cai Files 11-11 Mobile Trai Infrared 12-3 Offlin	de
--	--	----

Advanced Settings Index
Account Details
Alarm9-16
Barcode/Scan9-21
Bookmarks
Calendar
Call Log Records/Ranking
Capturing Still Images6-12
Capturing Still Images/Recording Video6-12
Conference Call
Countdown Timer
Currency/Unit Conversion
File Viewer9-23
Good Night Timer
Managing Files/Folders
Managing Folders
Memory Status
Movie Playback
Music Playback
Notepad9-20
Page Operations
PC Site Browser5-11
Phone Book
Photo Library6-14
Playlist

Quick Play
Received Messages
Recording Videos
RSS5-1
S! Addressbook Back-up
Saved Pages
Sending Graphic Mail
Sending S! Mail
Sending SMS
S! Information Channel
Split the Bill9-2
S! Quick News
Tasks
Text Entry
User's Dictionary
Using/Managing Messages 4-2
Viewing Files
Voice Call3-1
Voice Recorder
Yahoo! Keitai5-1
Yahoo! Keitai/PC Site Browser

■ SoftBank Mobile Customer Center

General Information	Customer Assistance	
From a SoftBank handset, dial 157 (toll free)	From a SoftBank handset, dial 113 (toll free)	
From landlines, 0800-919-0157 (toll free)	From landlines, 0088-240-113 (toll free)	

If toll free number is not reachable, dial the number for your service area below (charges apply):

Eastern Japan	022-380-4380	Tokai	052-388-2002
Kansai	06-7669-0180	Chugoku, Shikoku, Kyushu, Okinawa	092-687-0010

■ SoftBank Mobile Global Call Center

From outside Japan, dial +81-3-5351-3491. Toll free for a SoftBank handset. From landlines, international charges will apply. Please take care to dial correctly.

SoftBank 001SC User Guide

November 2010, First Edition

SOFTBANK MOBILE Corp.



To help protect the environment and recycle valuable resources, mobile phone, and PHS shops displaying the above mark accept mobile phones, batteries, and chargers of all manufacturers.

- Mobile phones, batteries, and chargers collected for recycling cannot be returned.
- To protect your privacy, delete any personal information (telephone numbers, call log records, messages, etc.) beforehand.
- For more information, please visit your nearest SoftBank Shop.

Model Name: SoftBank 001SC

Manufacturer: Samsung Electronics Co., Ltd.